




HP Envy TouchSmart 4-1215dx Battery Replacement

A guide on how to properly remove and replace the battery on the HP Envy TouchSmart 4-1215dx.

Written By: Gabriel Castro

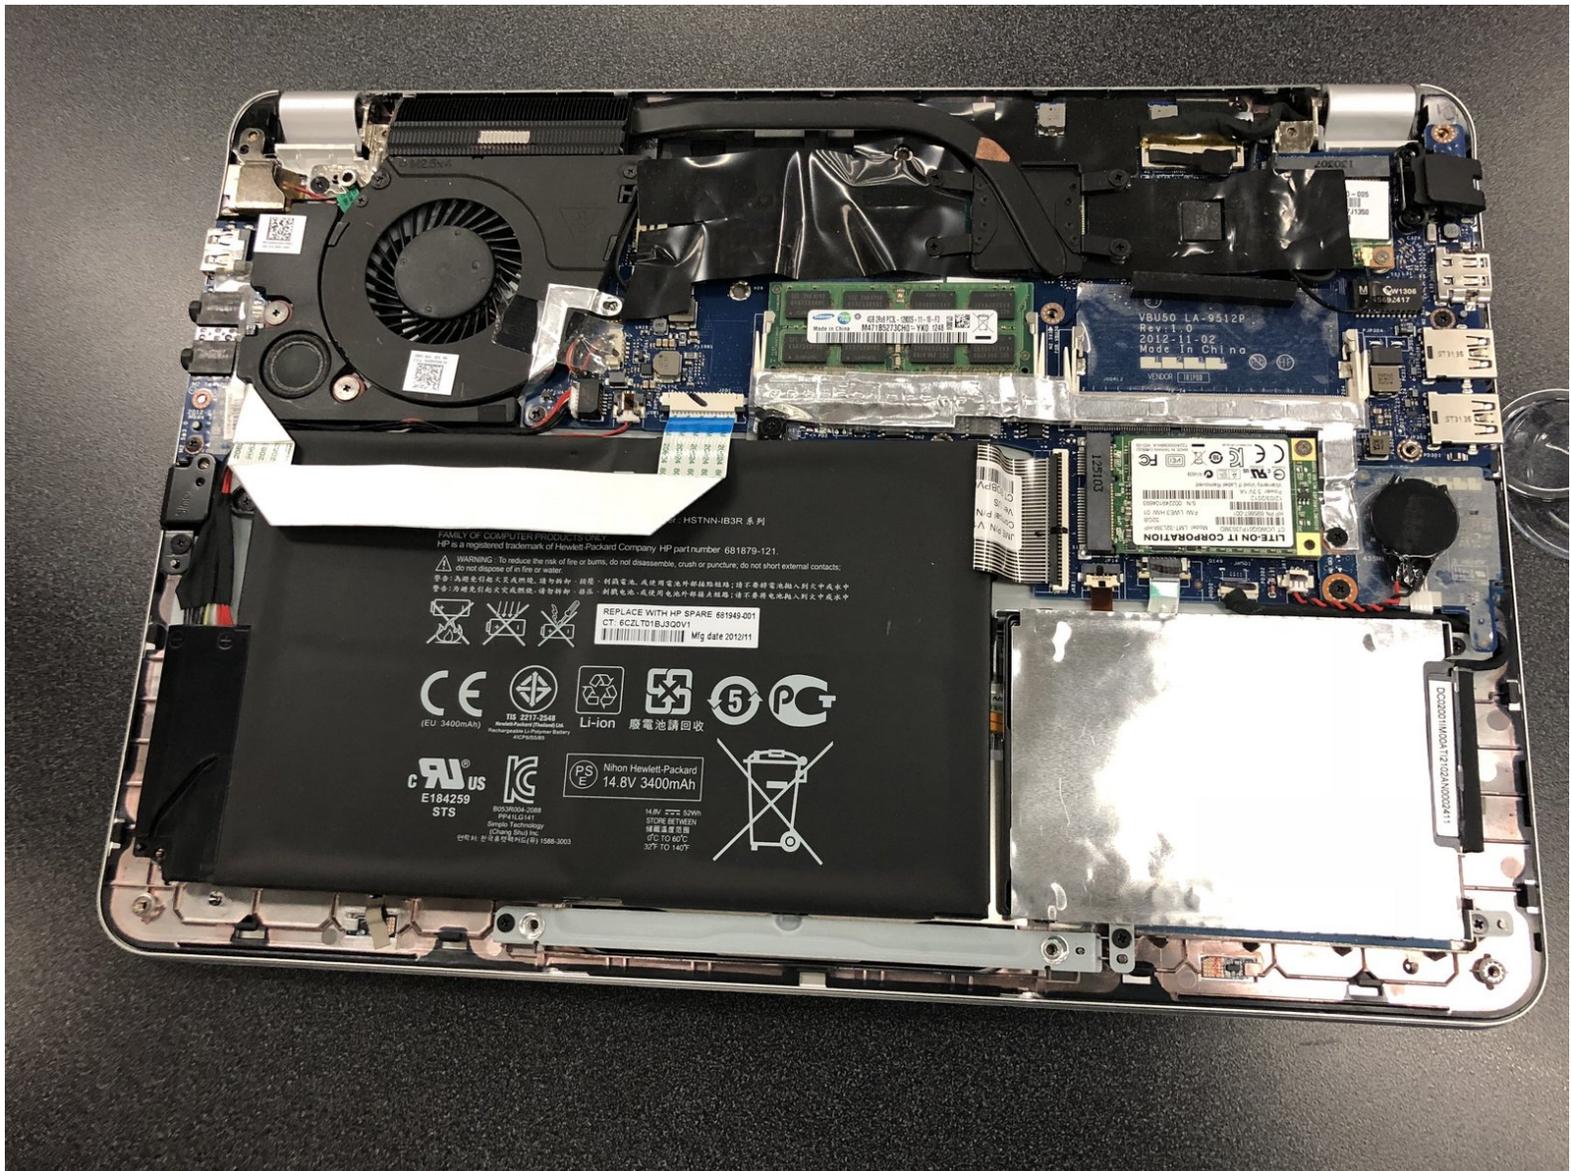


INTRODUCTION

A guide on how to properly remove and replace the battery on the HP Envy TouchSmart 4-1215dx.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Panel Assembly

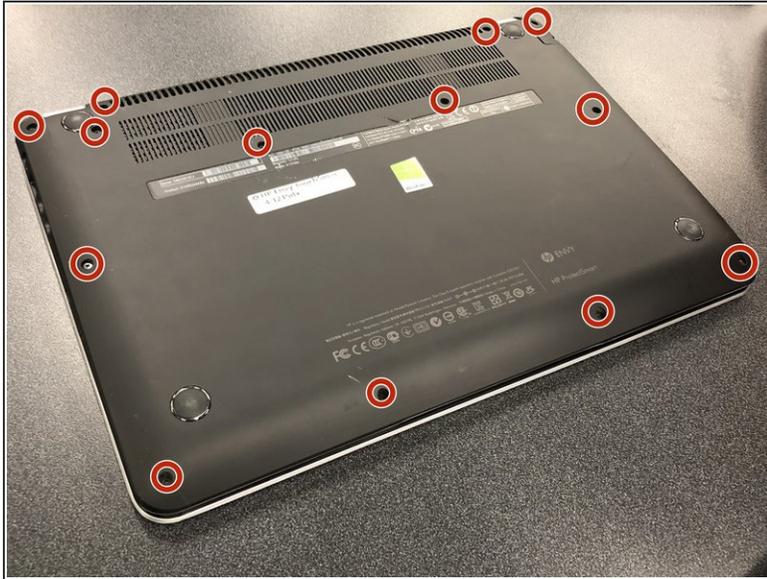


- Remove the thirteen Phillips #0 screws.

Step 2

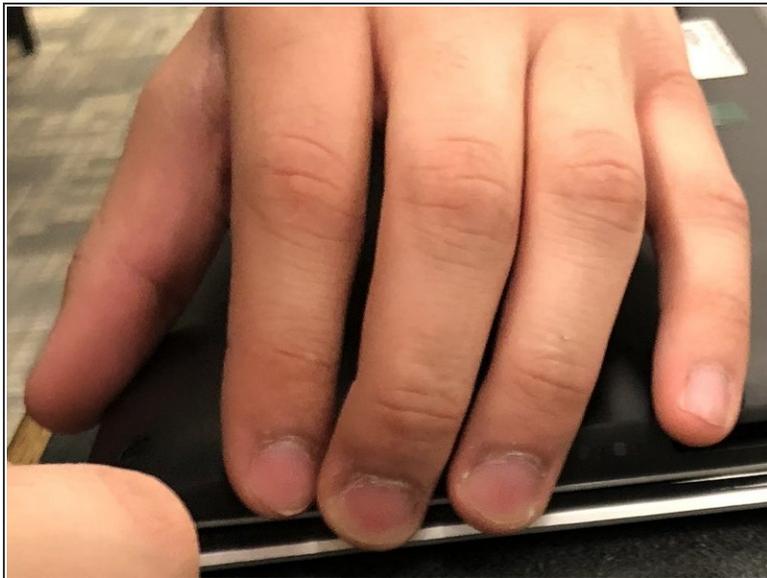


- Pull the panel up and off to remove from the laptop.

Step 3 — Battery

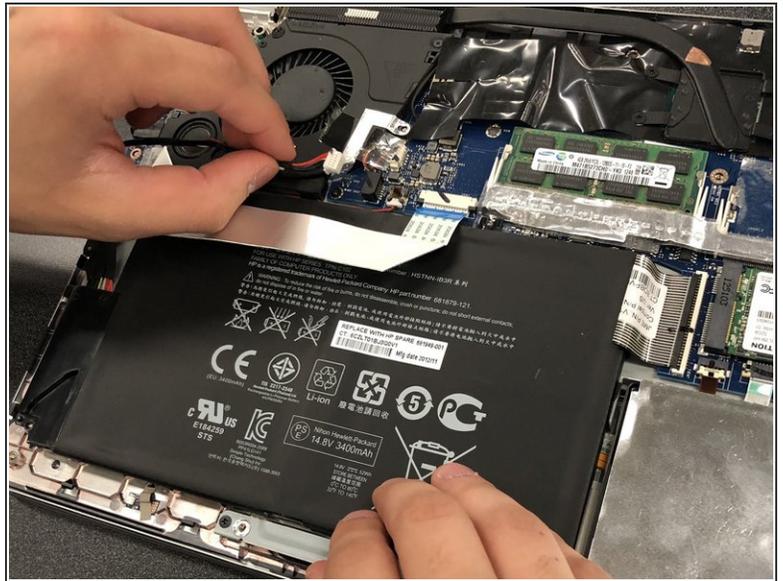

- Unplug the battery from the motherboard.

Step 4

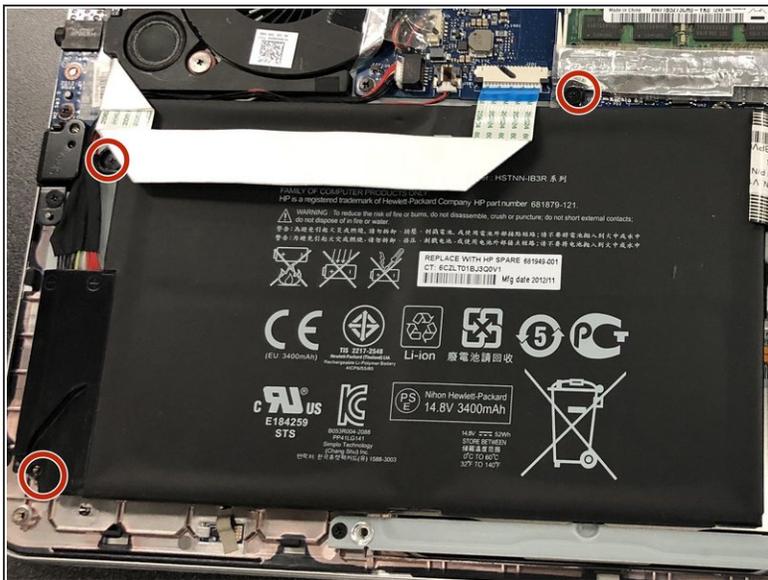

- Remove the three Phillips #0 screws from the battery.
- Pull the battery out of the laptop.

To reassemble your device, follow these instructions in reverse order.