



# Dell Alienware M17x R4 Battery Pack Replacement

Written By: Terrence15



## INTRODUCTION

In this guide, we will show you how to remove and replace the Battery Pack.


## Step 1 — Popping up the Battery Pack



**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#).


- Slide the battery latch to the unlock position as shown. The battery pack pops up.

## Step 2 — Removing the Battery Pack

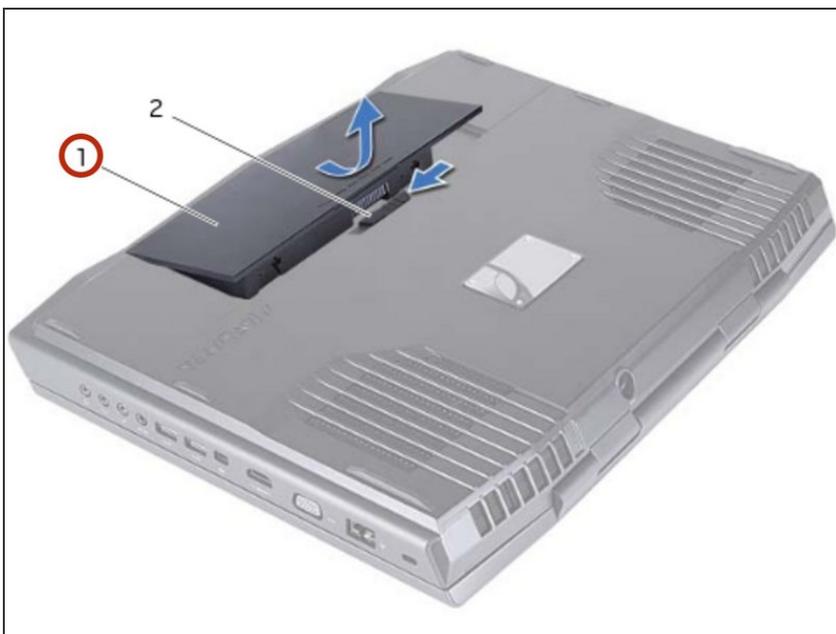

- Remove the battery pack.

### Step 3 — Align the Slots

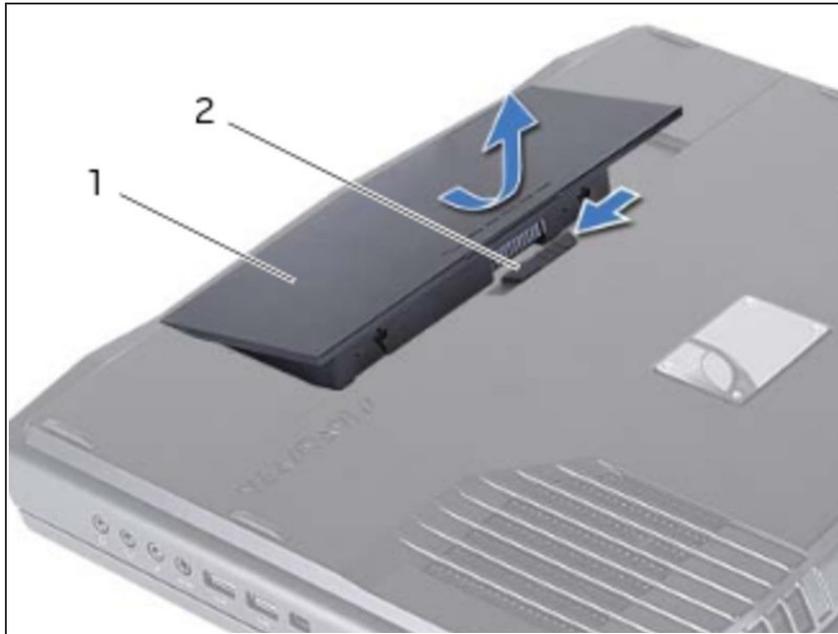

- Align the tabs on the **NEW** battery with the slots on the battery bay and snap the battery into place.

To reassemble your device, follow these instructions in reverse order.