

Altec Lansing Mini Lifejacket 2 Speaker Replacement

This step-by-step guide will show you how to replace the speaker in your Altec Lansing Mini Lifejacket 2.

Written By: Stephen Albrecht




INTRODUCTION

If your Altec Lansing Mini Lifejacket 2's speaker is damaged or faulty, use the following step-by-step guide to replace it. This guide applies to both the speakers.

TOOLS:


- Phillips #2 Screwdriver (1)
- Phillips #1 Screwdriver (1)
- Metal Spudger (1)
- Tweezers (1)
- Spudger (1)

Step 1 — Back Panel

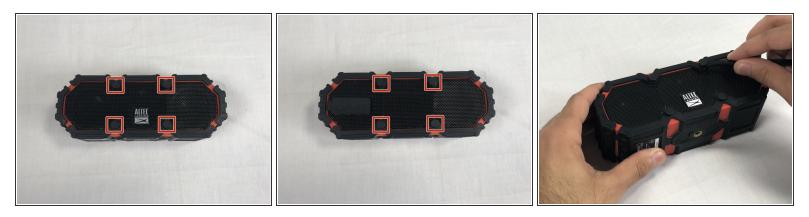

• Use the spudger to remove the eight black pins from the front and back of the wire screens.

Step 2

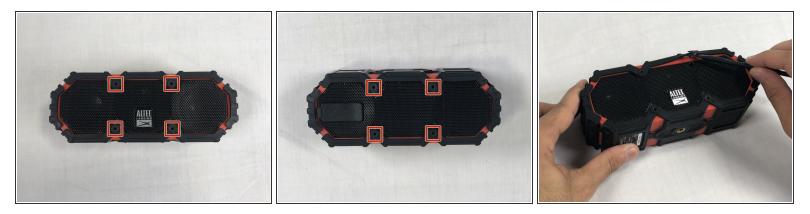

- Detach the eight secondary pins from the front and back of the wire mesh plates with a spudger.
- (i) Removing the secondary pins from the rubber casing is optional.




• Remove both black and orange layers from the speaker body.

Step 4




- Remove the single 7.8mm Phillips #2 screw from the mounting plate located under the device.
- Slide the mounting plate out to remove it.

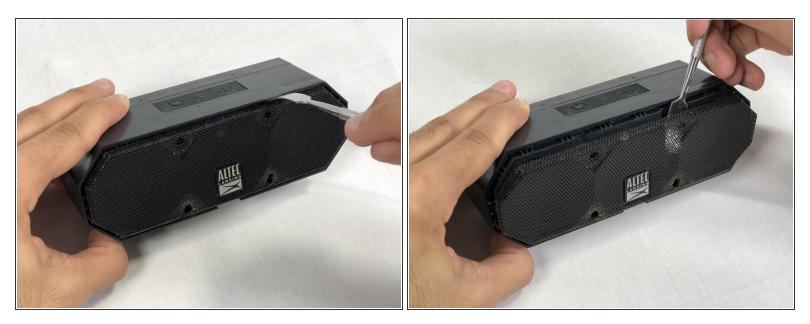

- Pry off the wire mesh on both sides using a metal spudger.
- A Be gentle to avoid bending the mesh.

Step 6

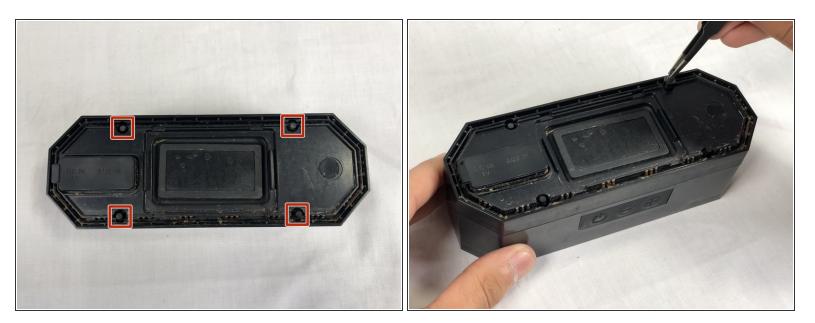

• Using tweezers, remove the four rubber stoppers in each corner of the rear panel.




 Remove the four 13.7mm Phillips #1 screws located underneath the rubber stoppers.

Step 8




• Pull the case apart to access the interior components.

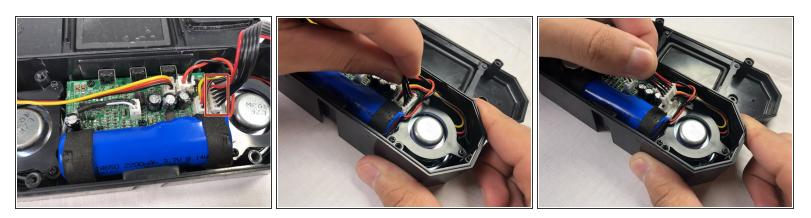

• To remove the back panel, gently pull out its wire harness.

Step 10 — Speaker

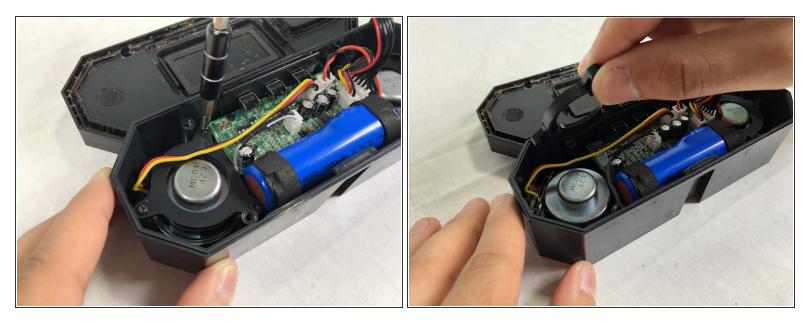


• Remove the three 9.3 mm Phillips #1 screws on the speaker cover.



To remove the speaker, gently pull out the its wire harness.

Step 12

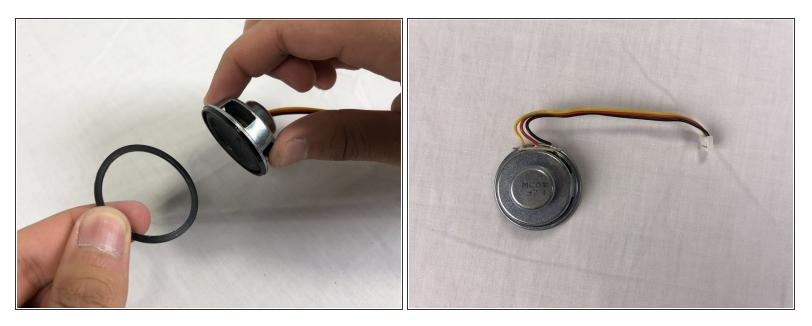

- Remove the rubber ring from the rim of the speaker.
- (i) This ring helps keep water from entering the device. Be careful to position it correctly during reassembly.

To reassemble your device, follow these instructions in reverse order.