



Lenovo IdeaPad Flex 4-1130 Screen Replacement

Replacing a damaged screen on the Lenovo Ideapad Flex4-1130.

Written By: Adrian Miranda



INTRODUCTION

Your screen might need replacement if there are any noticeable cracks on screen or if you are experiencing persistent flickering during use of your Lenovo IdeaPad Flex4-1130.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery



- ❗ Power off your Lenovo Ideapad Flex4-1130 before beginning disassembly.
- Remove the ten 4mm screws from the back panel.

Step 2

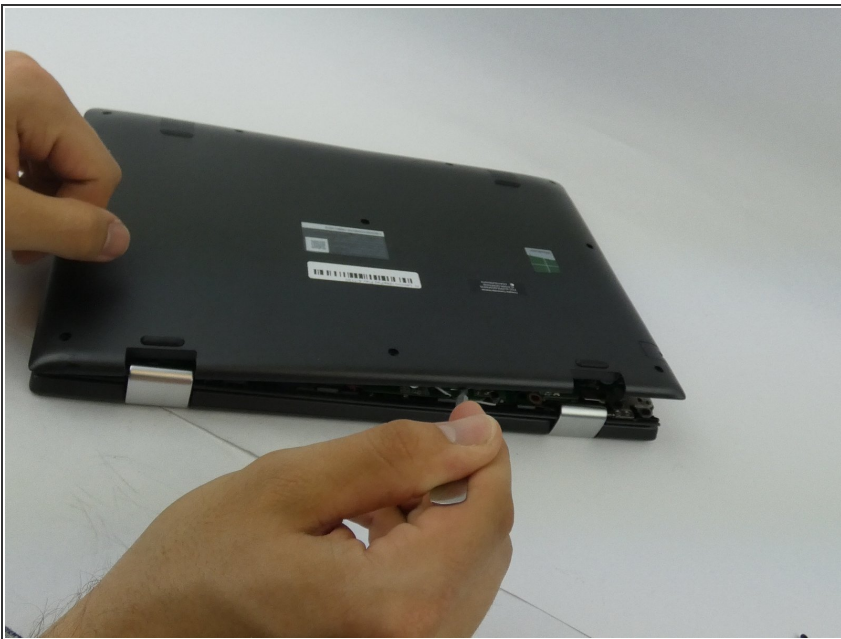


- Insert the spudger into the groove work your way around the laptop to separate the bottom from the case.
- ⚠ Do not insert the spudger too deep! This could potentially damage a device part.

Step 3



- Remove the connector attaching the battery to the motherboard.

Step 4

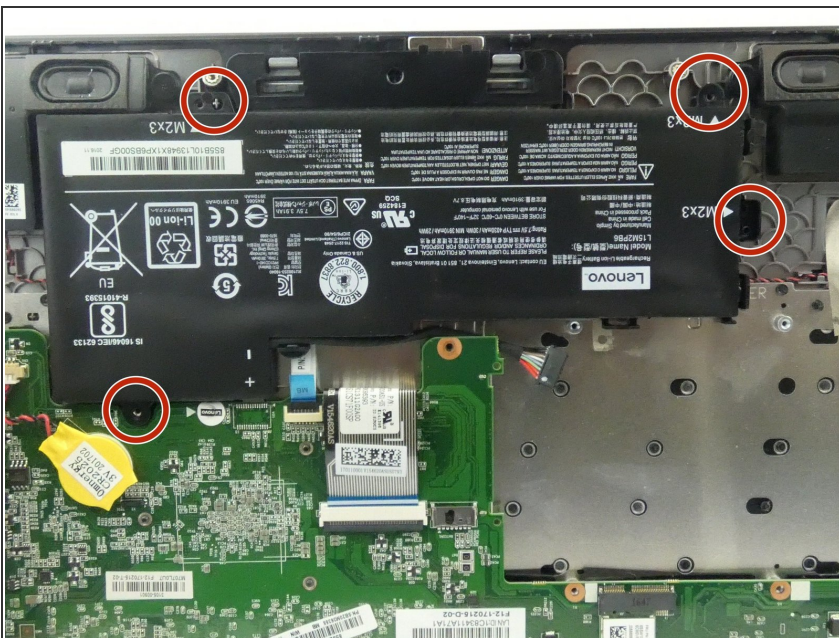


- Remove the four 4mm screws on the battery.

Step 5




- Lift the battery with a spudger and remove.

Step 6 — Screen

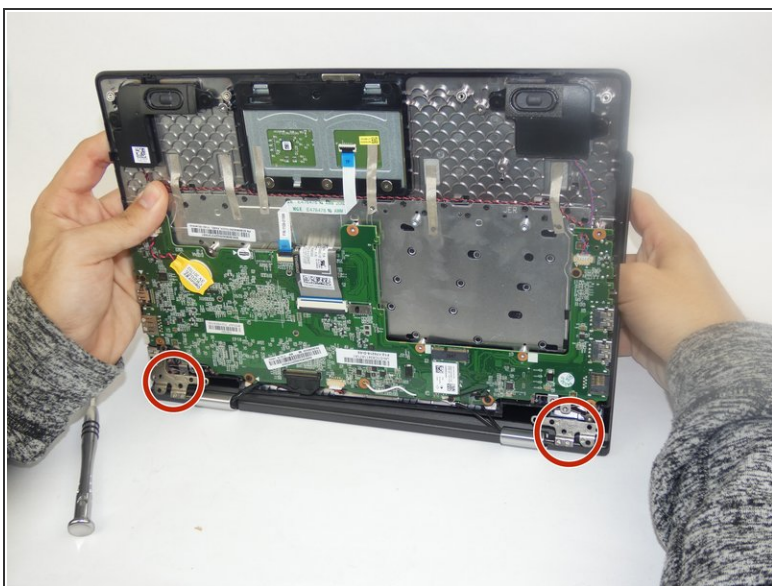

- Remove six 7mm screws.

Step 7

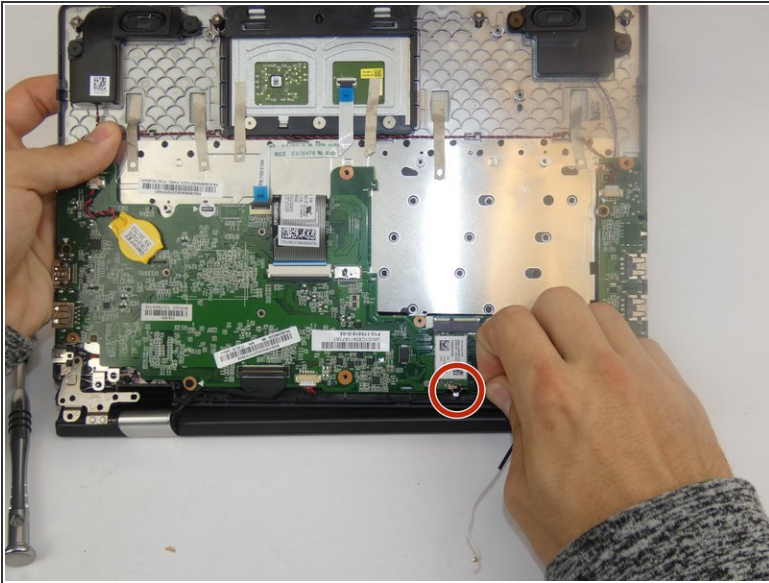


- Remove two connector cables.
- Separate the two unhinged parts.

Step 8




- Use the spudger to remove the plastic caps, uncovering the screws underneath.
- Remove the two 6mm screws.

Step 9

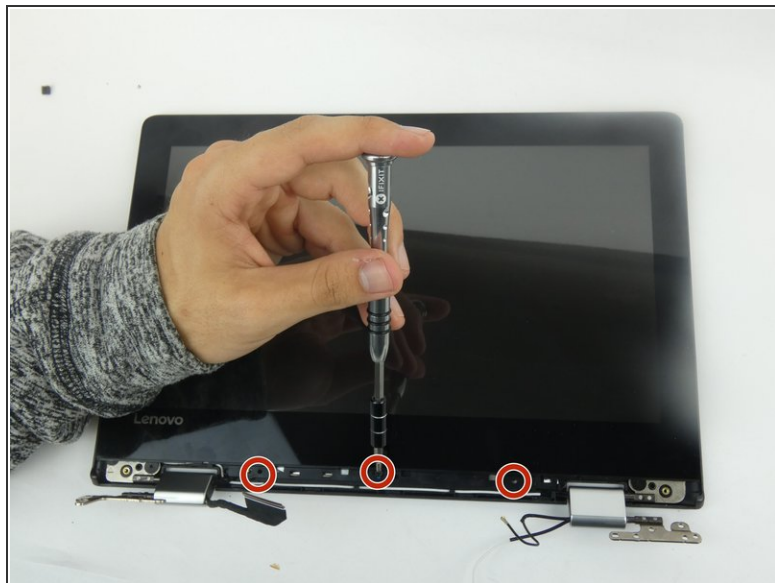


- Use the black nylon spudger to remove the long plastic covering underneath the screen.
- Remove three 6mm screws.

Step 10

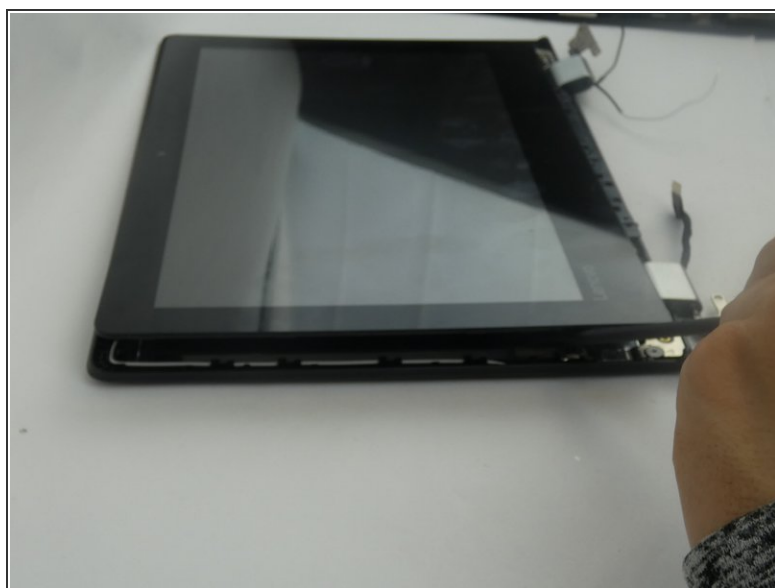



- Use the black nylon spudger to lift and separate the screen from the plastic back cover.

Step 11

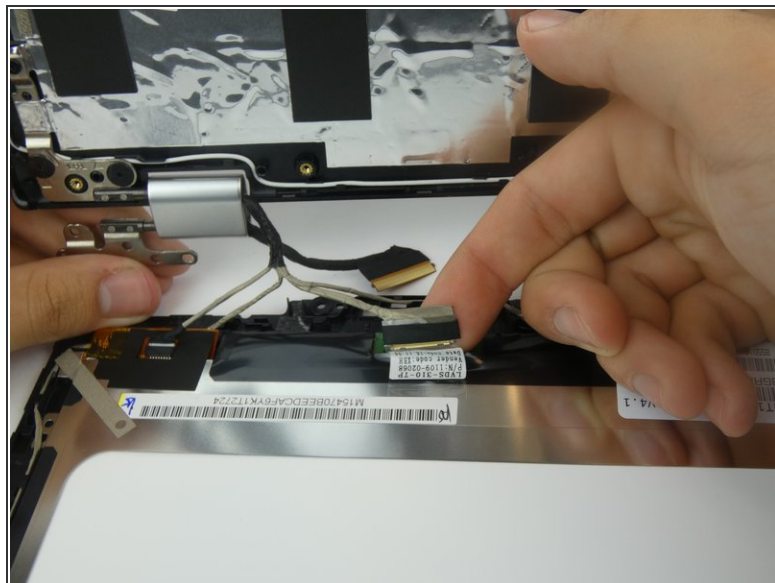


- Peel off tape and remove the cable.

Step 12

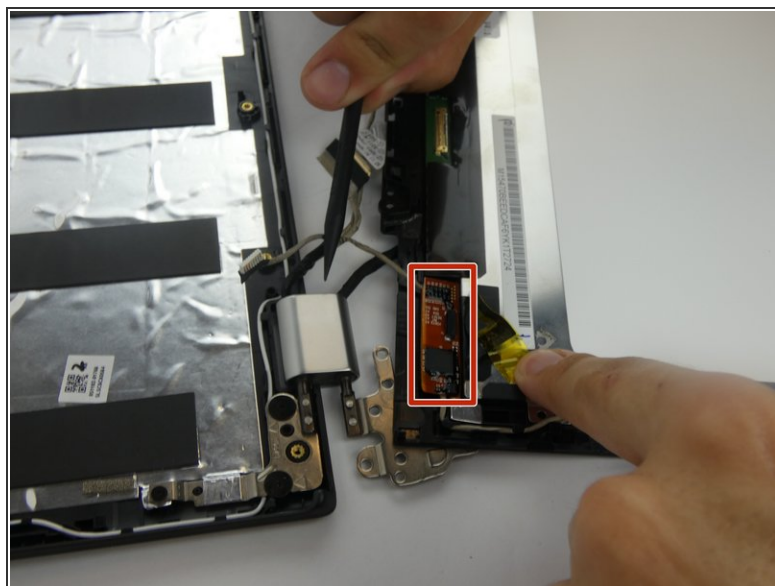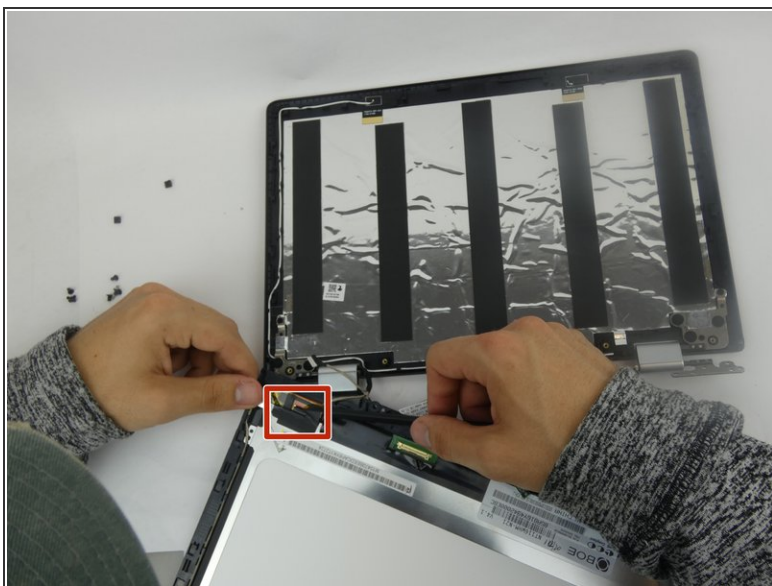

- Remove the connector chip.

Step 13

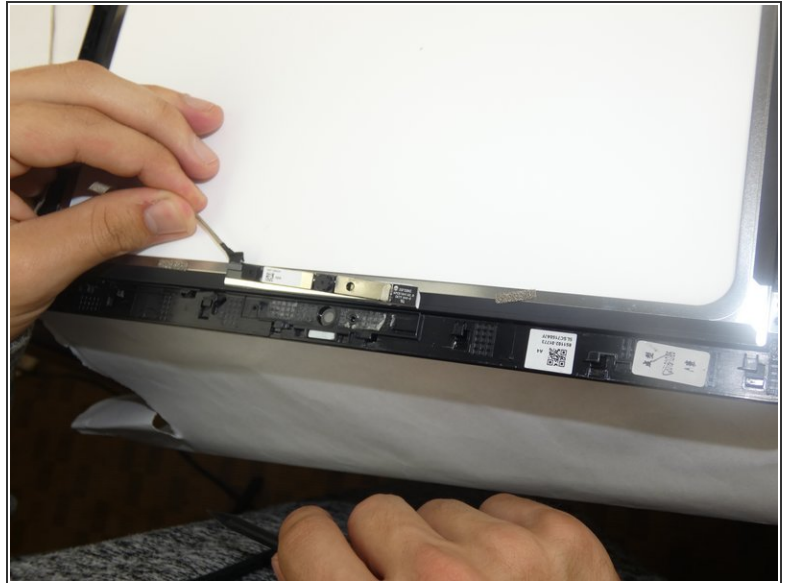

- Peel tape and remove cable underneath.

To reassemble your device, follow these instructions in reverse order.