



ASUS X552LAV-BBI5N08 Screen Replacement

This guide will show you how to replace the screen on a ASUS X552LAV-BBI5N08 laptop.

Written By: Jason Vo



INTRODUCTION

This guide will show you how to replace the screen on a ASUS X552LAV-BBI5N08 laptop.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Y1 Tri-point Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [JIS #000 Screwdriver](#) (1)
 - [JIS #1](#) (1)
-

Step 1 — Battery



i Battery is not showed in pictures.

- Flip the laptop face down.

Step 2



- Slide the right button to the left.
- Hold the left button to the right.
- While you hold the left button in position, slide the battery out by pushing it away from you.

Step 3 — Screen




- Remove the six 12mm screws located at both the battery area and the bottom panel, with a Tri-wing Y1 screwdriver.
- Slide the bottom panel down and lift it up to remove.
- Remove the seven 5.5mm screws located at the bottom area with a Tri-wing Y1 screwdriver.

Step 4





- Use an opening tool to split keyboard from base of the laptop.
- Make sure to start from one end and go around the edges.
- Flip laptop to sit on its bottom.
- Lift keyboard up by the front edge.

Step 5

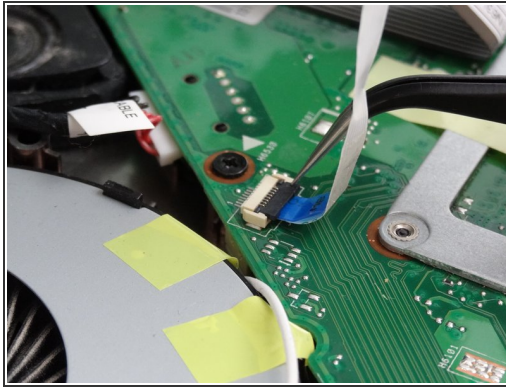


- Flip up the small locking flap for the two ZIF connectors.
- Unplug the connectors that are keeping the keyboard connected.

Step 6

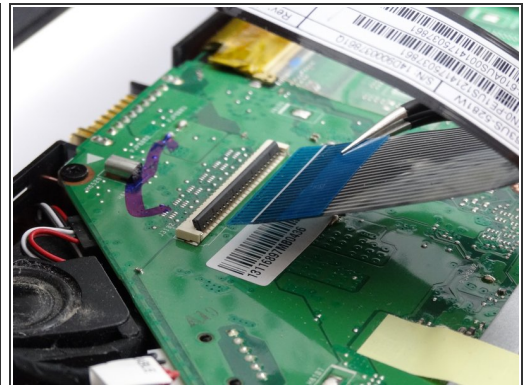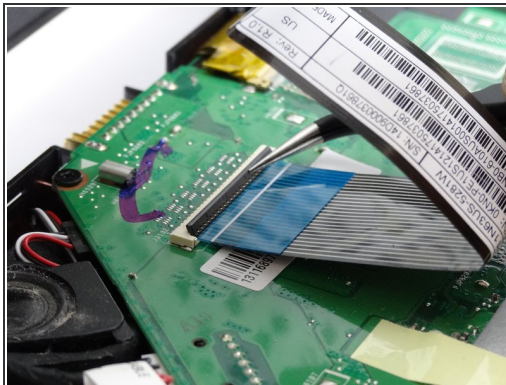


- Flip up the locking flap for the ZIF connector.
- Unplug the connector.

Step 7

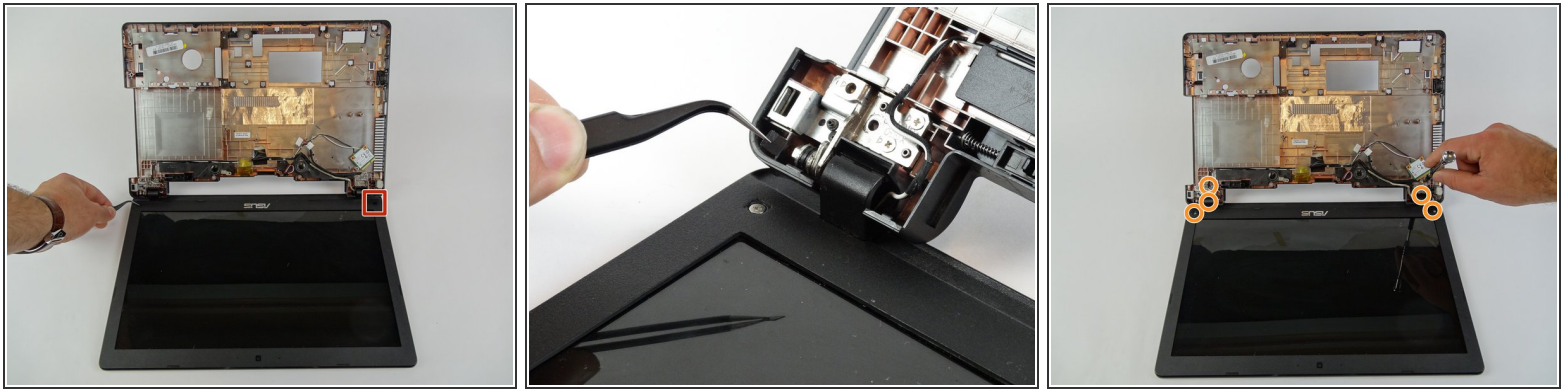

- Flip laptop to sit with the screen on the bottom.
- Use tweezers to remove the square decorative sticker from the top of screws from the edge of the screen frame.
- Remove six 4mm screws (with a JIS #1 screwdriver) from under the stickers and both of the hinges.

Step 8

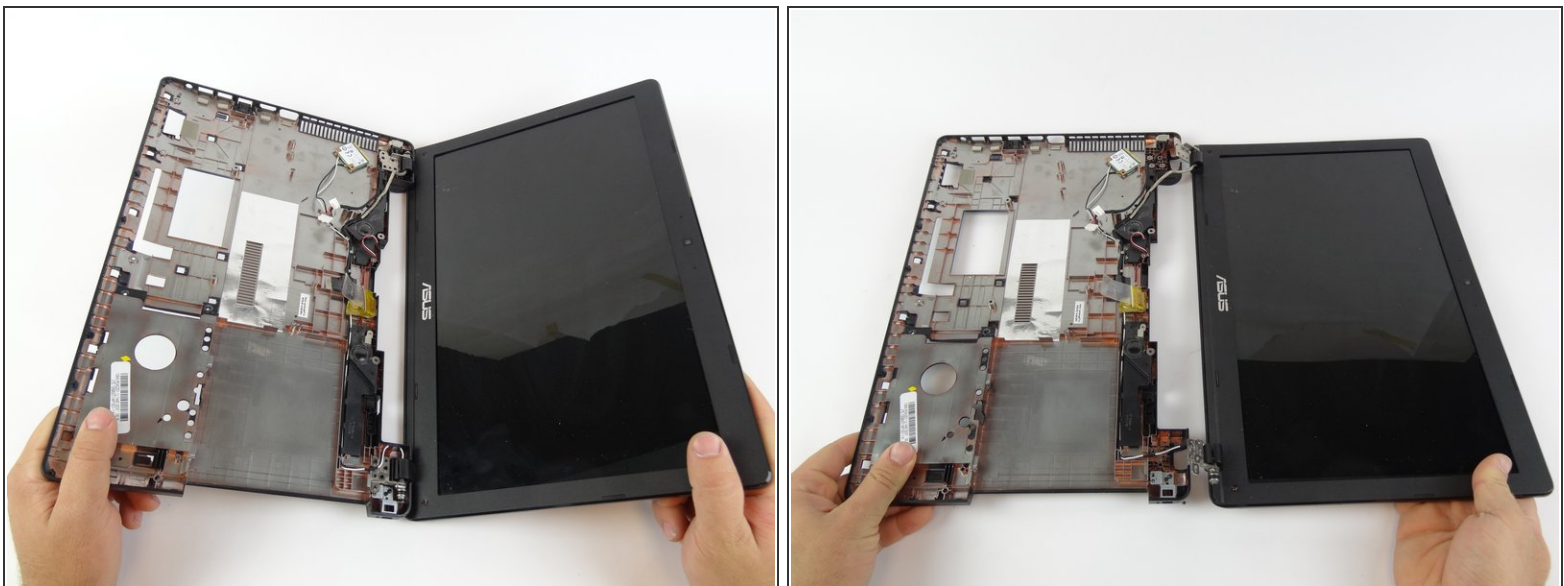


- Release hinges with the motion of opening a book.

Step 9



- Use an opening tool to pry apart the frame from the edge of the screen
- Go around the edges til the frame pops off from the screen

Step 10

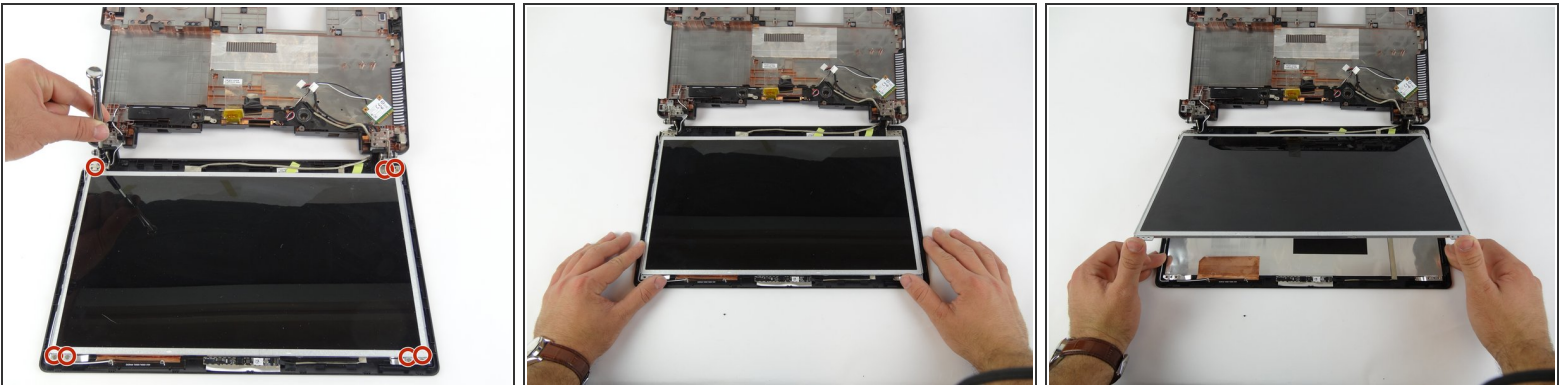


- Remove eight 4mm screws from the corners of the screen using a JIS #000 screwdriver.
- Flip the screen towards the bottom panel face down.

Step 11




- Use tweezers to remove the tape from the top of yellow lock.
- Open the yellow ZIF connector.

Step 12

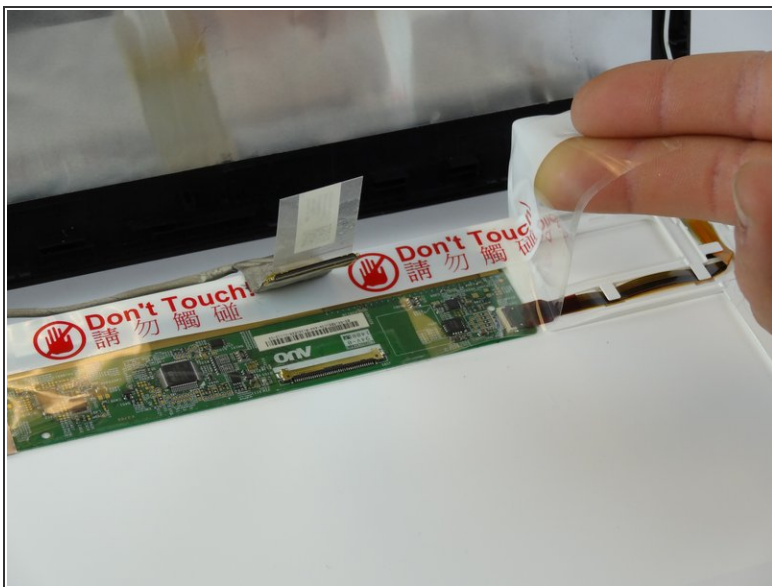

- Remove the tape completely from the back panel.

Step 13

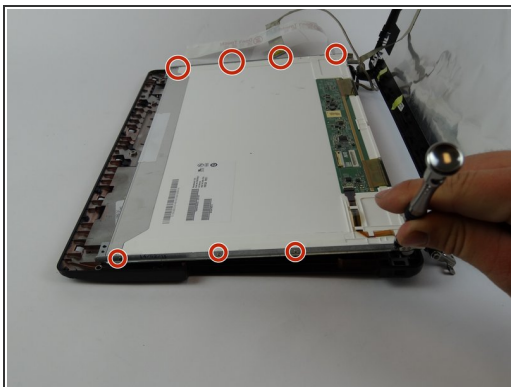

- Remove the casing from the edges of the screen by removing the eight 2mm screws with a JIS #000 screwdriver.
- Pull the screen up to remove it.

To reassemble your device, follow these instructions in reverse order.