




Samsung BD-F5700 Power Cord Replacement

Replacement of the power cord to a Samsung BD-F5700 Blu-Ray Player. Instruction on how to replace or remove power cord from player after it fails.

Written By: Nicholas Straits

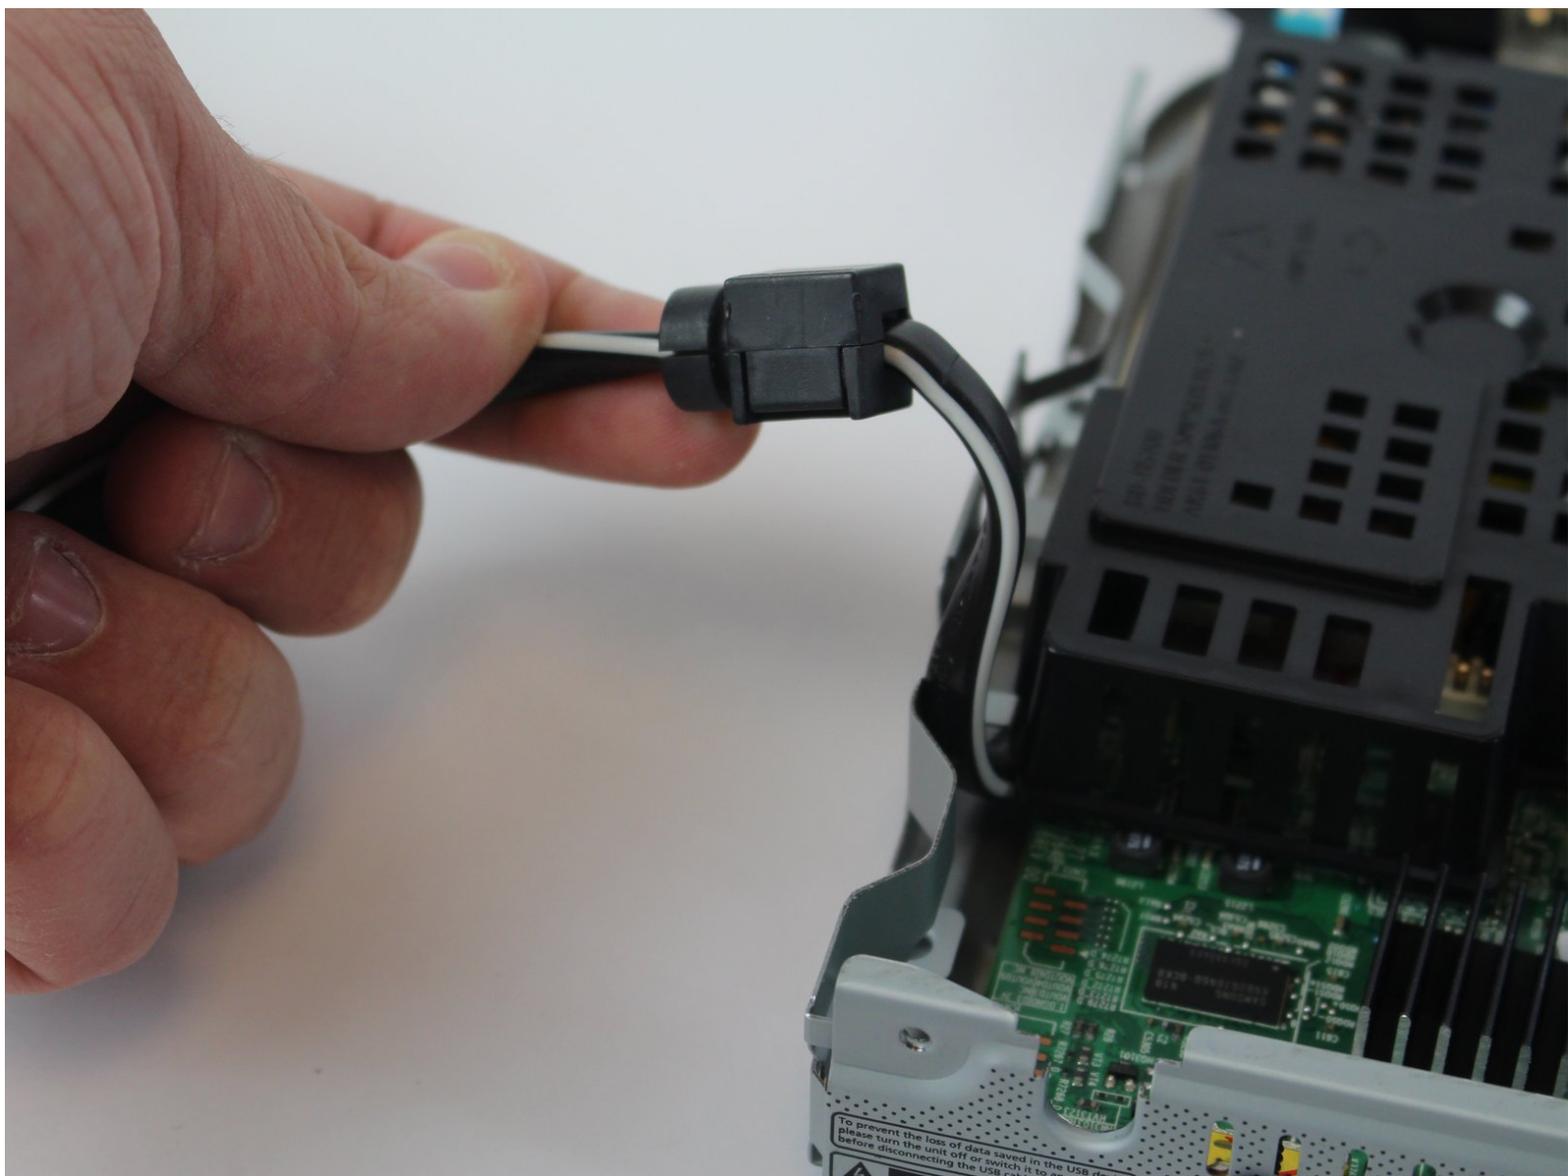

INTRODUCTION

In this guide, you will learn how to replace or remove the power cord to a Samsung BD-F5700 Blu-Ray player. You will see step-by-step how to open the device, which screws to remove, and how to ultimately remove the power cord from the device. This repair would be needed if your device is no longer getting power to it. Always make sure the device is unplugged before beginning to work on it, as there is a chance of shock from exposed wiring.

TOOLS:

- [iFixit Opening Tool](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Power Cord



- Use Phillips 0 Screwdriver to remove two (2), 10 mm rear screws.
- Use the iFixit opening tool to help separate the top plastic casing from the bottom metal casing.


⚠ When opening the device, be careful to not damage the ribbon cable circled in image 3.

Step 2

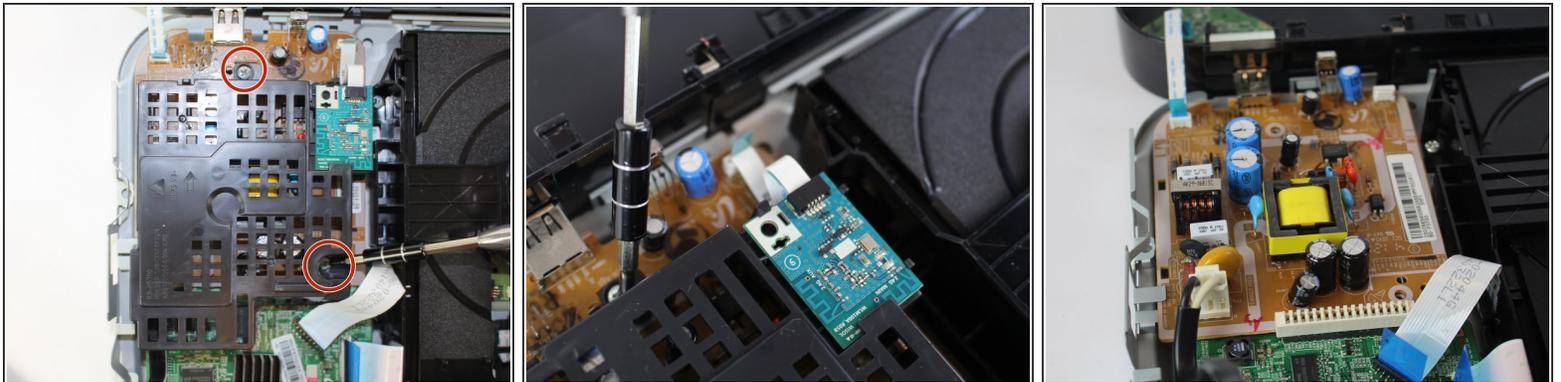

- Use Phillips 0 screwdriver to remove two (2), 10 mm screws from the plastic cover.
- Remove plastic cover from board.

Step 3

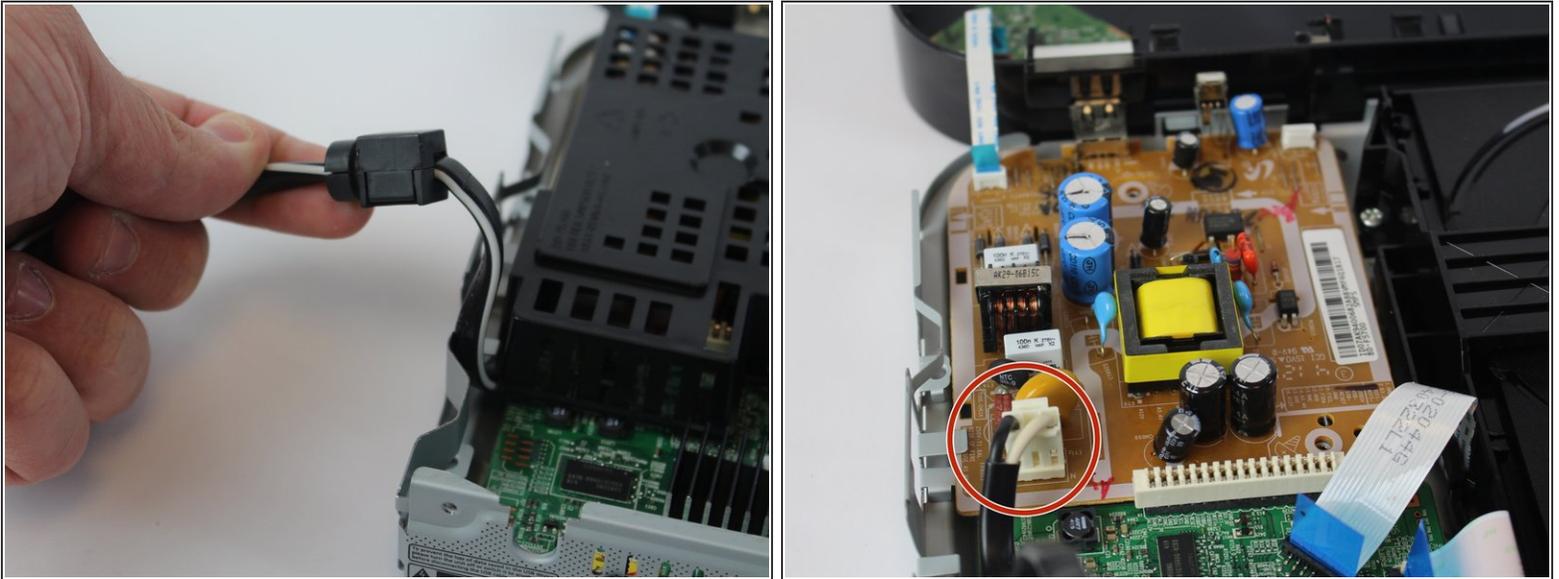

- Pull upward on back of the black and white wire to dislocate the black tab piece from device.
- To remove the cord from the device entirely, press on the white tab in the device and gently pull.

Step 4



- Insert the iFixit Opening tool into the black tab on the power cord, and use leverage to open the black tab.
- Pull the tab off the wire so that it can be placed on the replacement cord.

To reassemble your device, follow these instructions in reverse order.