




# Sony Cyber-Shot DSC-H1 LCD Screen Replacement

Replace broken or cracked screen to view images better.

Written By: Trystan Jasperson

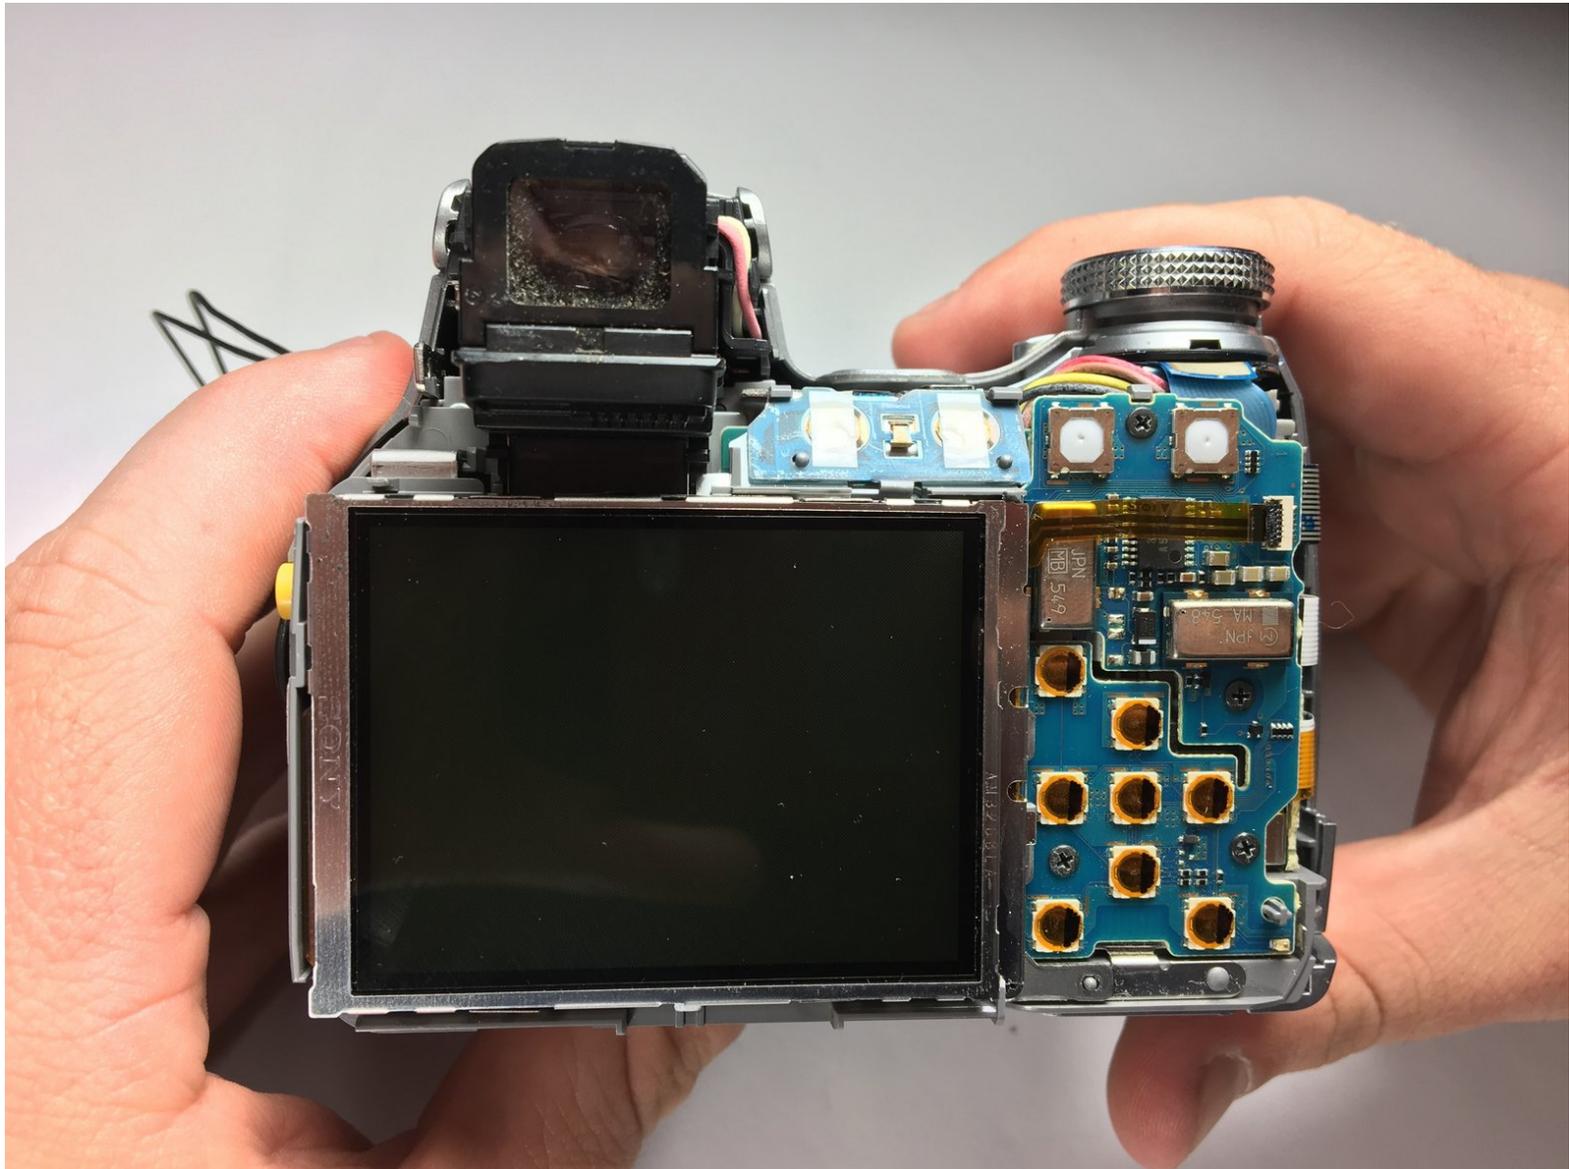

---

## INTRODUCTION


Seeing the image before taking it is vital to taking long-lasting quality pictures. This guide will show you how to properly remove the existing LCD screen.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Back Panel

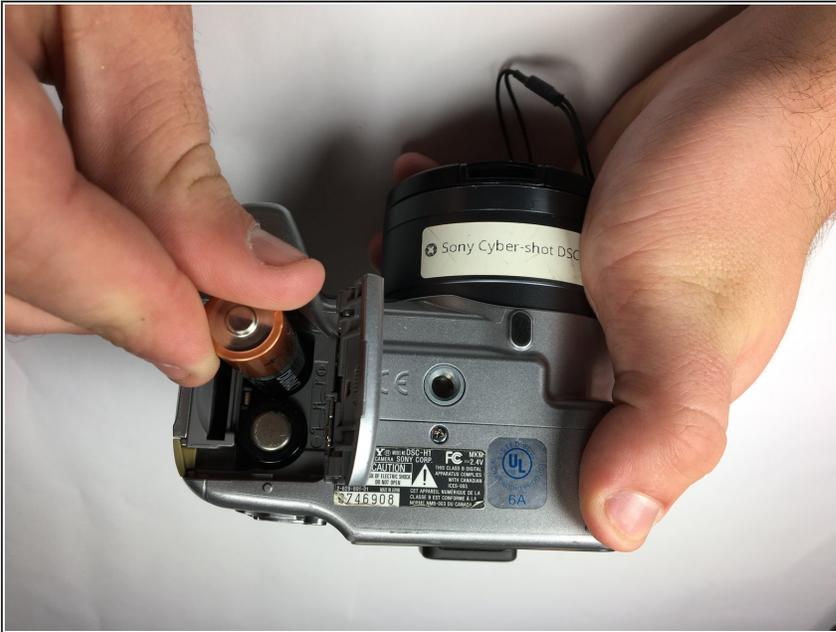


- Power down the camera and remove the batteries.

## Step 2




- Using a Phillips #0 screwdriver, remove all of the screws from the back panel casing.
- ⓘ There are six 5.22mm long, 3.00mm head diameter screws total.
- ⓘ The left side is not shown but there should be 1 screw on that side.

### Step 3

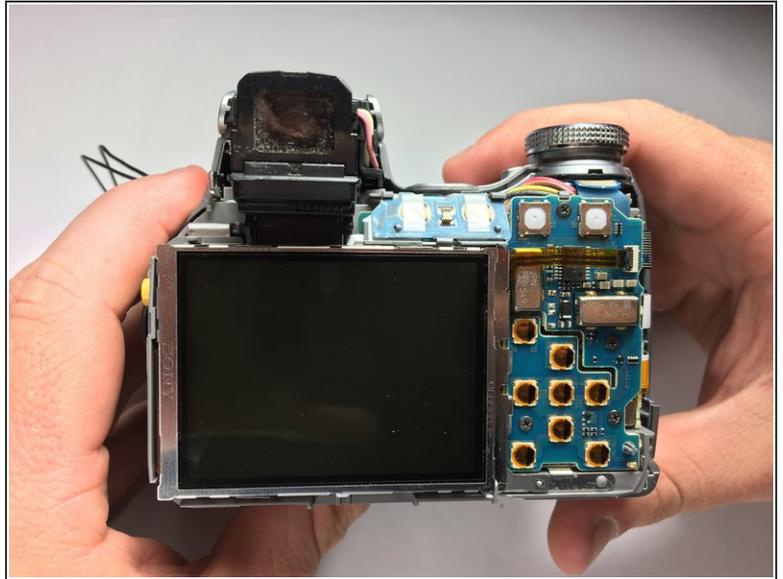


- Remove the back casing.
- ⓘ The casing itself is sturdy so don't be afraid to remove it forcefully.

### Step 4 — LCD Screen

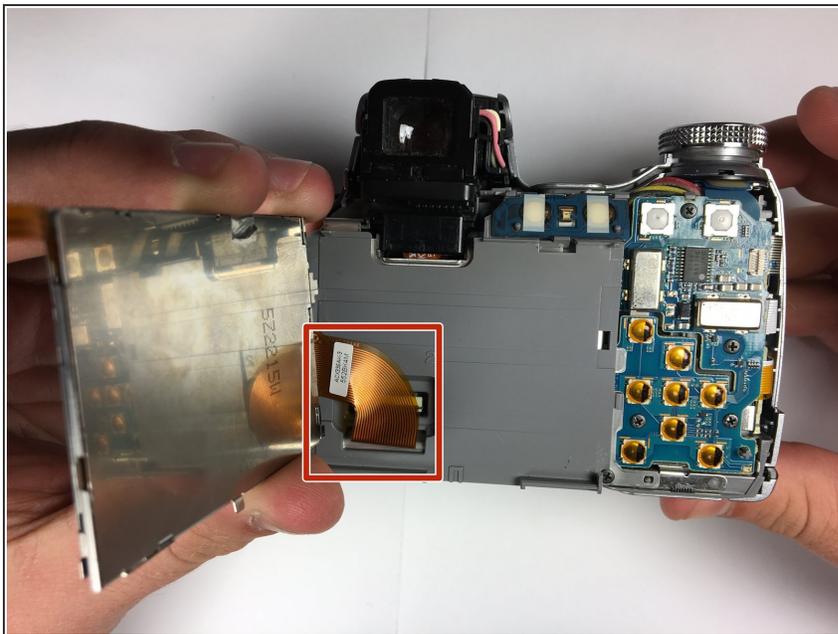

- Take a hold of the right side of the LCD screen and lift it towards the left.
- ⓘ The screen is held firm and will require a bit of force to ease it from its housing.

## Step 5

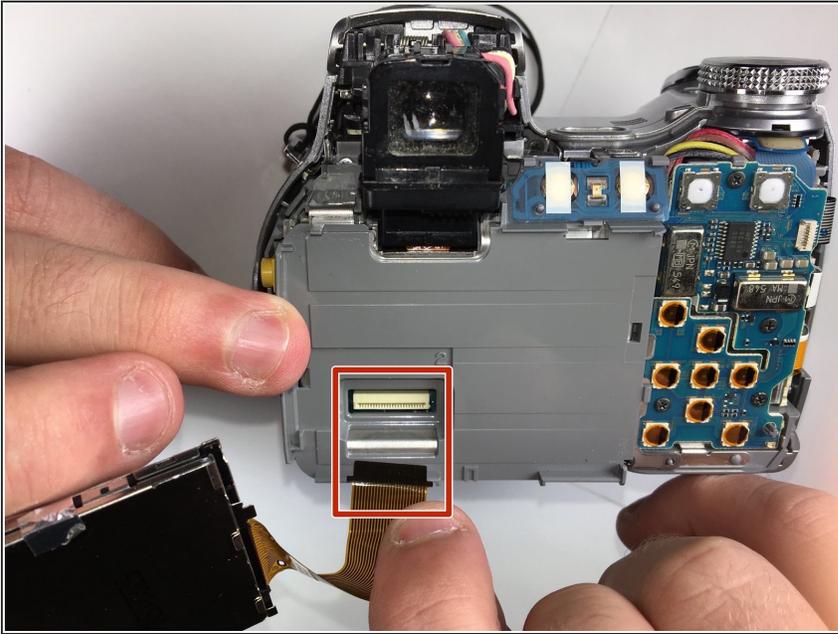

- Unplug the large conductive tape attached to the screen.
- Remove the LCD from the device.

To reassemble your device, follow these instructions in reverse order.