



Sungale Cyberus ID707WTA Speaker Replacement

This guide will show the steps involved in...

Written By: [Austin_Parkes](#)



INTRODUCTION

This guide will show the steps involved in replacing the speaker.

TOOLS:

Fingers (1)

Phillips #1 Screwdriver (1)

iFixit Opening Tool (1)

Pry Bar (1)

Step 1 — Battery



- Press firmly on lower portion of the back cover and slide the cover towards the bottom to remove cover.

Step 2



- Pull on the plug carefully until it releases from the port and simply pull the battery out after.

Step 3 — Speaker



 
- Pry open the casing with a plastic opening tool .

Step 4




- Unscrew the five 4.5 mm screws to allow access to the motherboard.
- Lift the motherboard and set it onto the backside of the screen.

Step 5

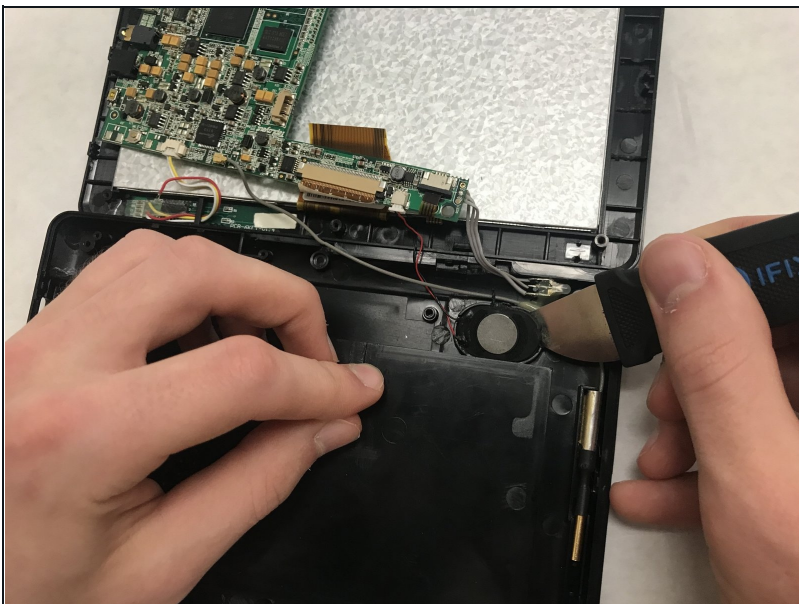

- Pry the speaker out of retainer clip with iFixit pry tool.

 Step 6

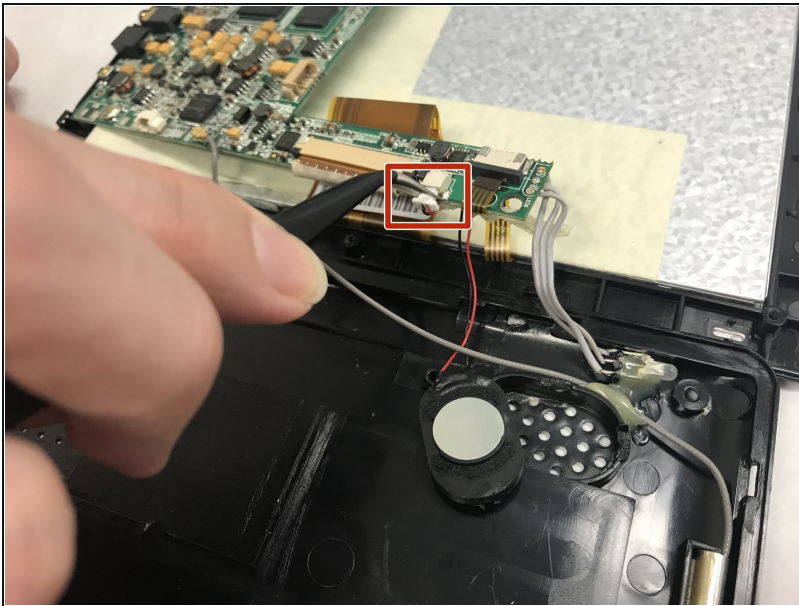

- Pry the speaker clip from the motherboard using [tweezers](#).

To reassemble your device, follow these instructions in reverse order.