




Dell Alienware M18x R2 Battery Pack Replacement



Written By: Terrence15

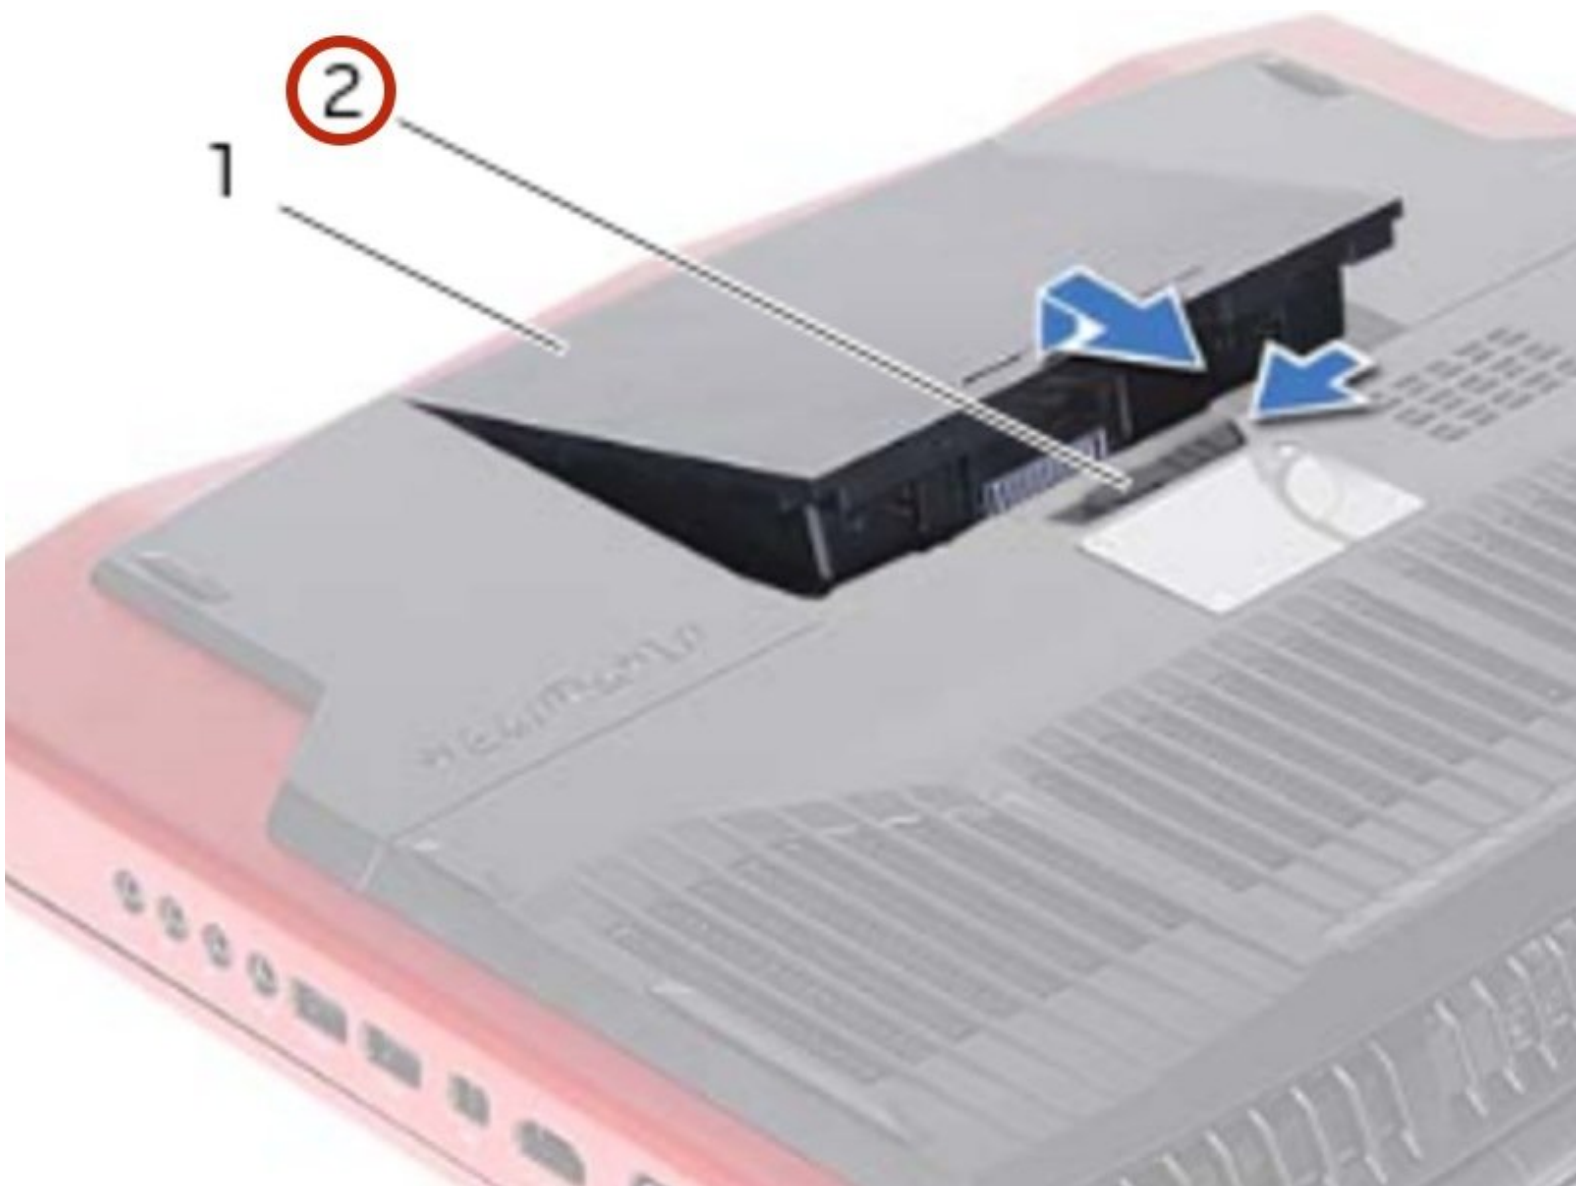

INTRODUCTION

In this guide, we will show you how to remove and replace the Battery Pack.


Step 1 — Sliding the Battery Latch

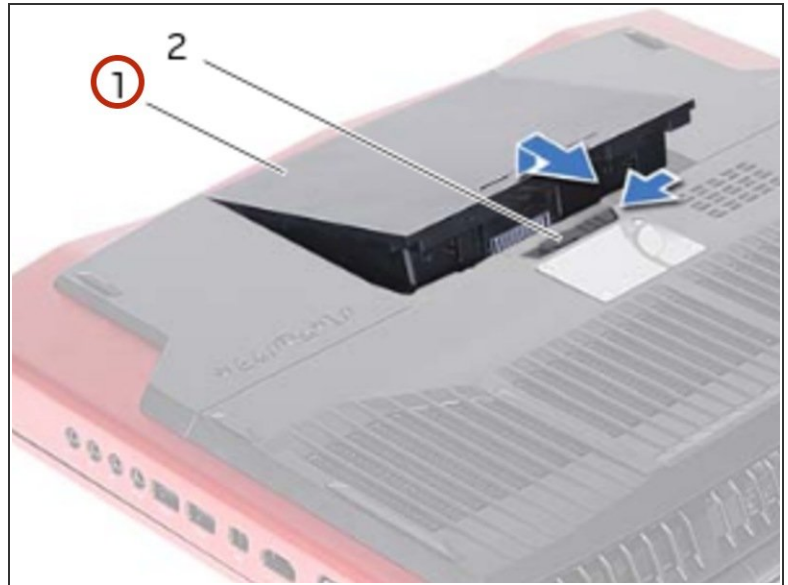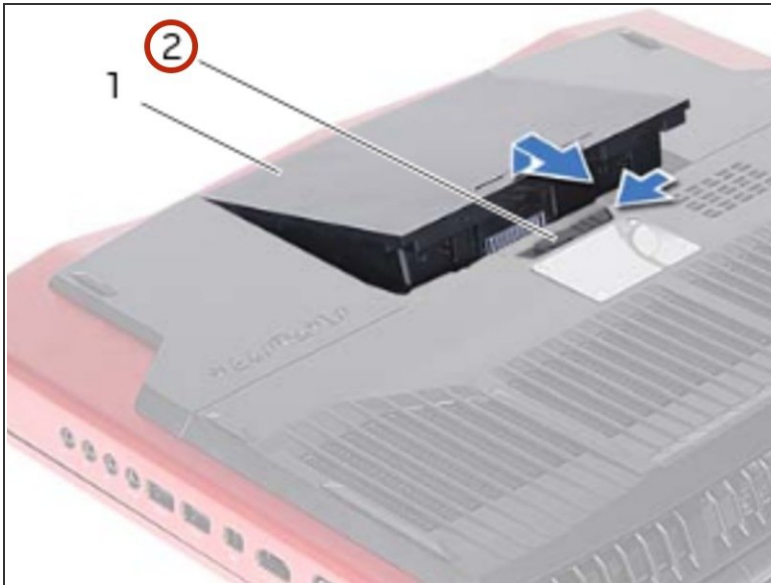

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#).

- Slide the battery latch to the unlock position. The battery pack pops up.

Step 2 — Sliding the Battery Pack

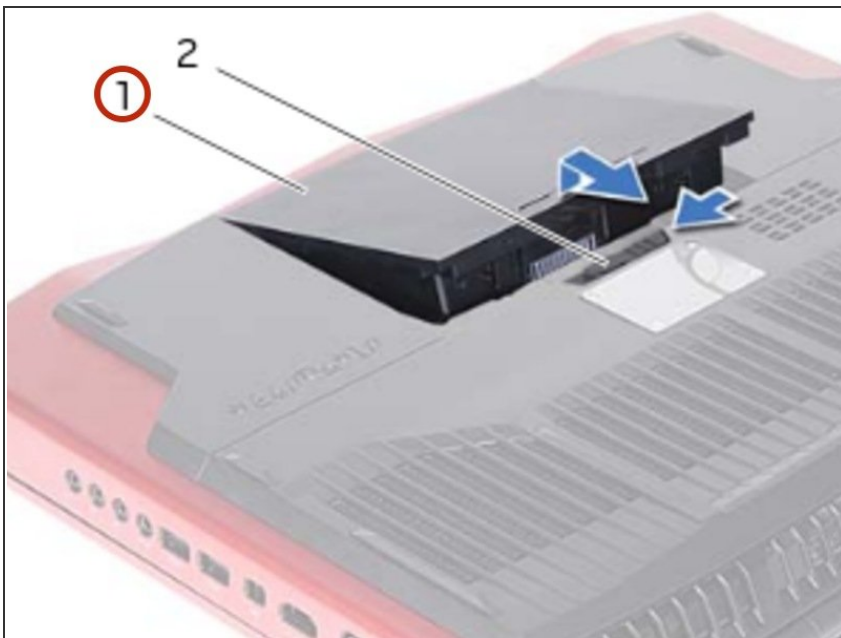

- Lift and slide the battery pack away from the battery bay.

Step 3 — Align the Tabs



⚠ CAUTION: To avoid damage to the computer, use only the battery designed for this particular Alienware computer.

- Align the tabs on the **NEW** battery with the slots on the battery bay and snap the battery into place.

To reassemble your device, follow these instructions in reverse order.