


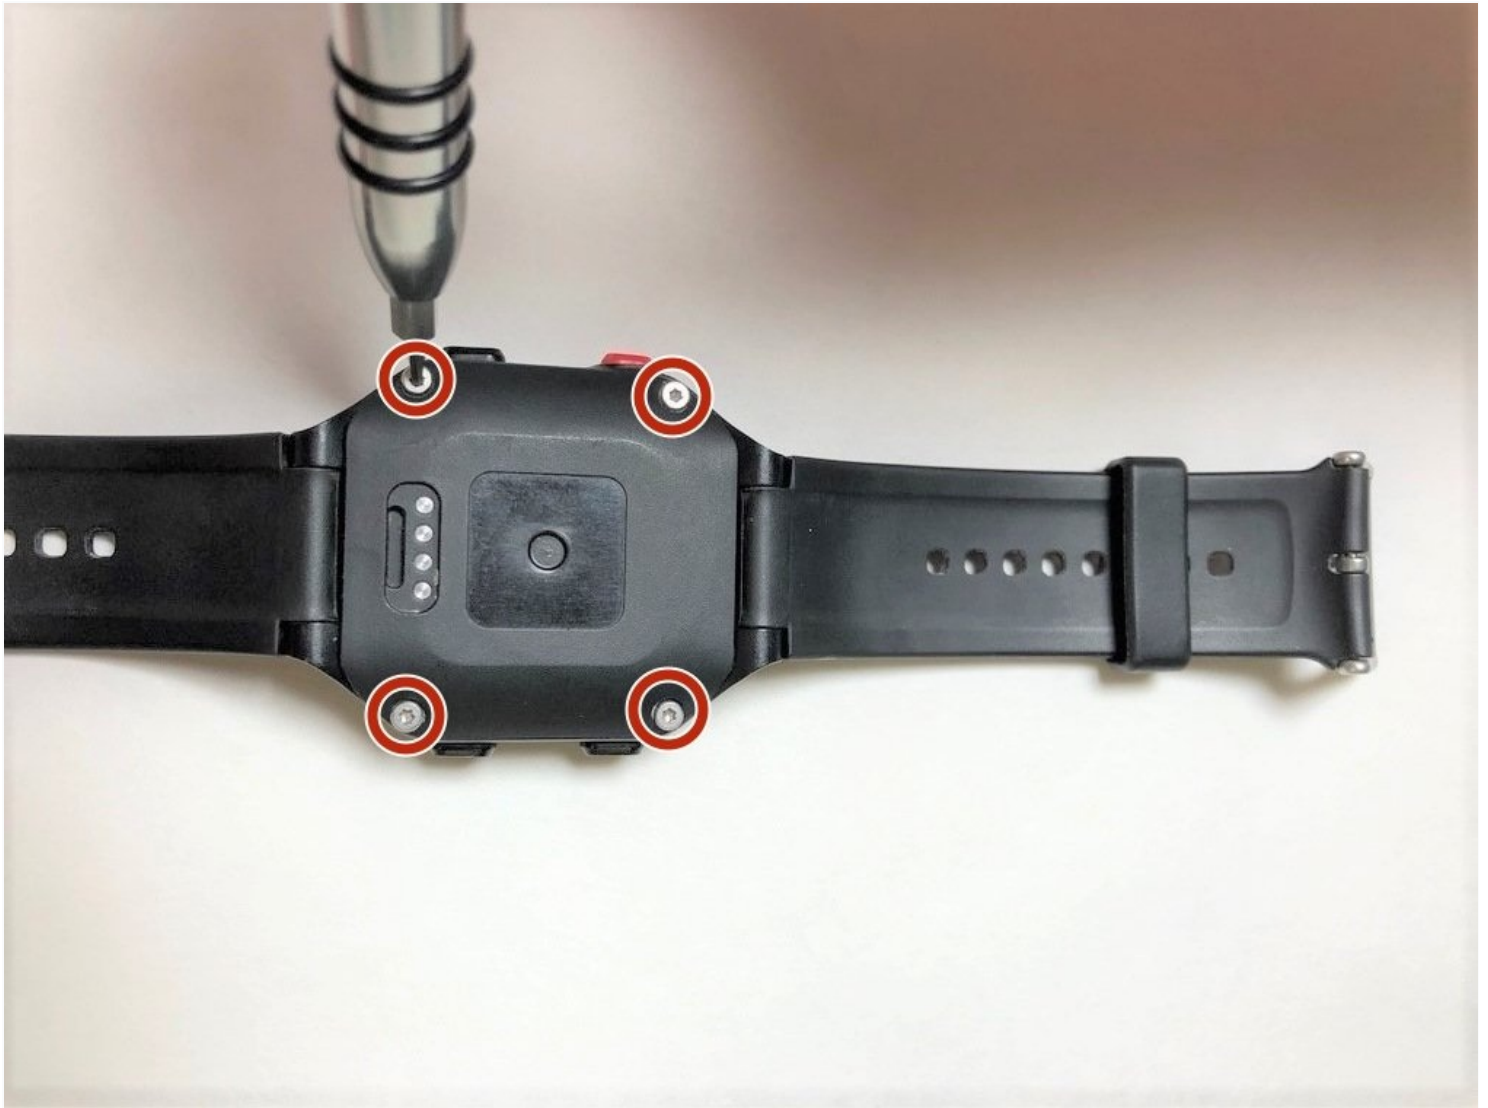

# Garmin Forerunner 25 Battery Replacement

Battery replacement is a common fix for devices...

Written By: Dustin Persohn



# INTRODUCTION

Battery replacement is a common fix for devices as they age. This fix is quick and easy with the use of a T5 screwdriver.

## TOOLS:

T5 Torx Screwdriver (1)  
Spudger (1)

## PARTS:

PD2430C1 Battery (1)

## Step 1 — Battery



 **Power off your watch before disassembling it.**

- Place the watch on a hard surface with the screen facing down.
- Unscrew the four 7.0 mm screws located at each corner using a T5 screwdriver.

## Step 2



- Pry the old battery out using a plastic spudger.

---

To reassemble your device, follow these instructions in reverse order.