



nikon s3700 LCD Display Screen Replacement

Step by step guide for replacing your damaged Nikon S3700 LCD Display Screen

Written By: Sales Cameraparts4you



INTRODUCTION

Step by step guide for replacing your damaged LCD Display.

TOOLS:


- [Nitrile Gloves 100 Box](#) (1)
 - [Essential Electronics Toolkit](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Removing the Screws



- group screws according to color code.
- Remove exterior screws

Step 2 — Replace LCD

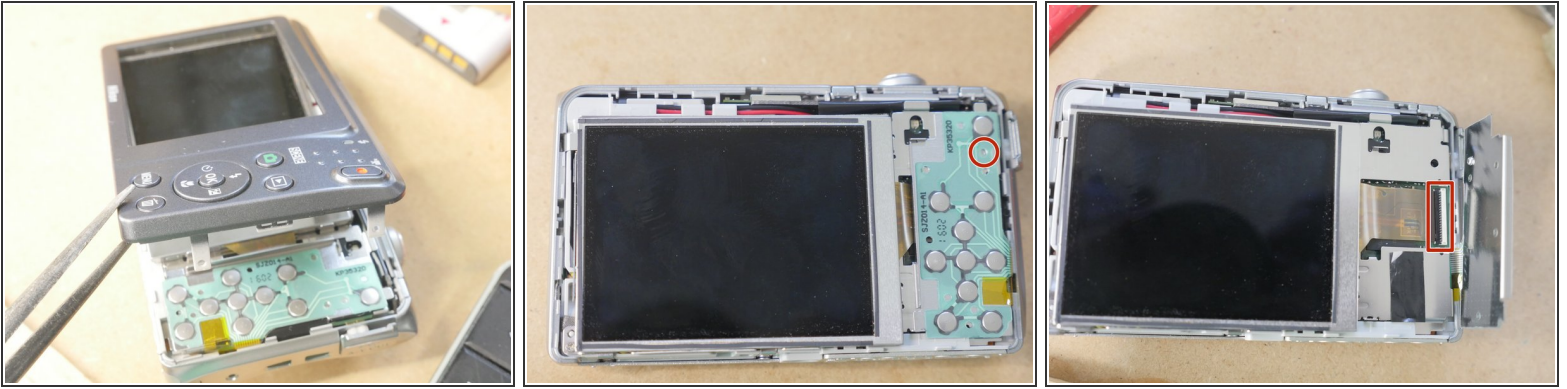

- Remove Rear casing.
 - With a thin blade, gently lift the top right hand side of the buttons board releasing a peg from a hole on the midframe below. Whilst doing so, gently push on the top left hand side in order to release the buttons board from a clip. At the same time, the bottom left hand corner will be released from another clip.
 - Flip over rear buttons board to expose LCD ZIF clamp.
 - Flip open the clamp of the ZIF connector and slide the ribbon cable out. (The connector may have a piece of sticky tape over it. Removing this may well open the connector clamping bar.)
- ⚠ The ZIF clamp is very fragile so please use caution when releasing the ZIF clamp. It breaks easily.**
- Remove the LCD.

To reassemble your device, follow these instructions in reverse order.