



Sony Cyber-shot DSC-WX220 Battery Replacement

This guide shows the steps required to replace the battery.

Written By: Kate Glazer



INTRODUCTION

This guide shows how to replace a dead/broken battery.

TOOLS:

- [Fingers](#) (1)
-

Step 1 — Battery



- Slide the gray switch from lock to open position.

Step 2



- Pull down on the blue tab to release the battery.

To reassemble your device, follow these instructions in reverse order.