



Garmin Forerunner 25 Screen Replacement

This guide demonstrates how to remove and replace the screen of the Garmin Forerunner 25.

Written By: Suzanne Drumm




INTRODUCTION


The screen is a vital component to a digital smart watch. With the right tools, replacing the screen can be done efficiently and effectively.

TOOLS:

- [Spudger](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [T4 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

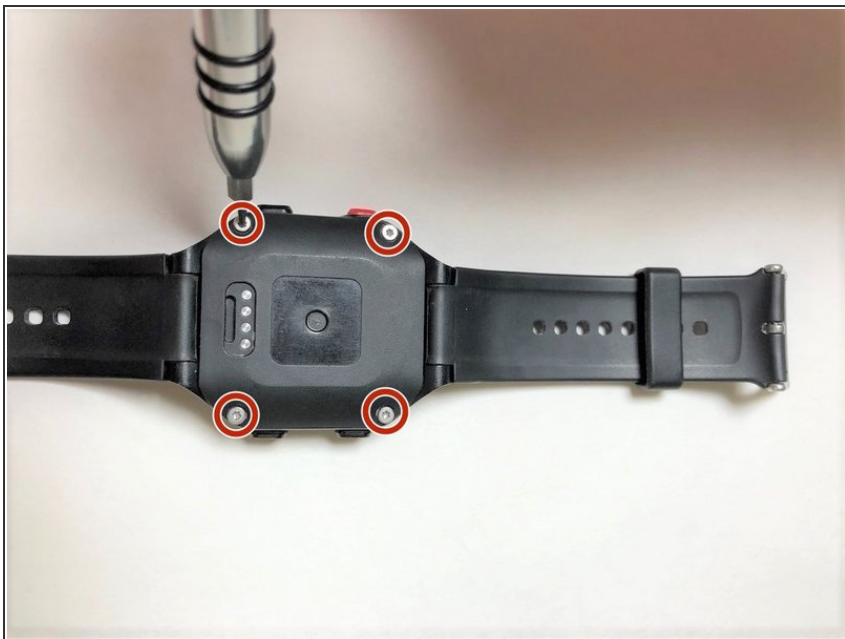

 Power off your watch before disassembling it.

- Place the watch on a hard surface with the screen facing down.
- Unscrew the four 7.0 mm screws located at each corner using a T5 screwdriver.

Step 2



- Pry the old battery out using a plastic spudger.

Step 3 — Motherboard




- Unscrew the two T4 6 mm screws located on both sides of the motherboard.

Step 4




- Lift the motherboard up using a plastic spudger.
- ⚠ Ribbon cables are still attached underneath—be careful when prying the motherboard up.

Step 5

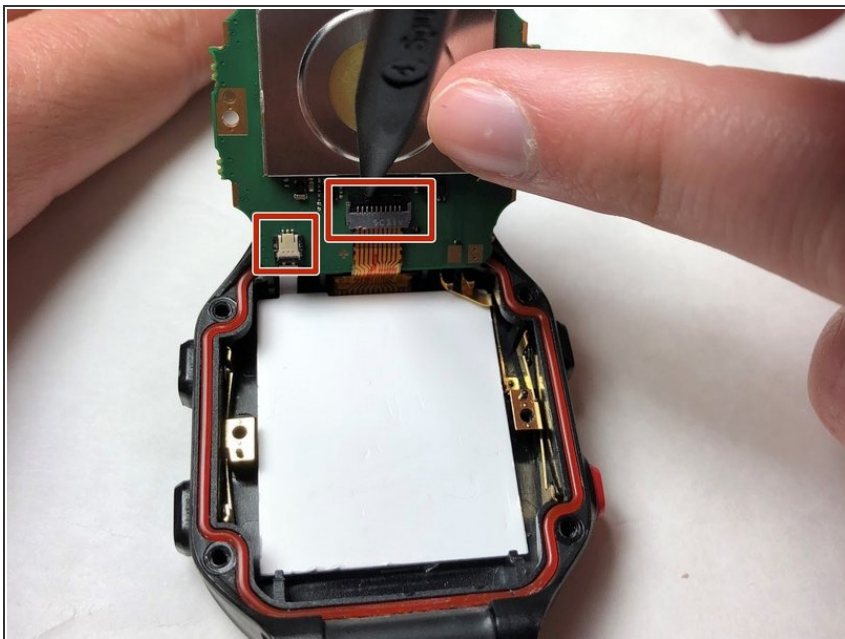

- Flip the ZIF connectors using a plastic spudger tool.
- Remove the motherboard.

Step 6 — Screen

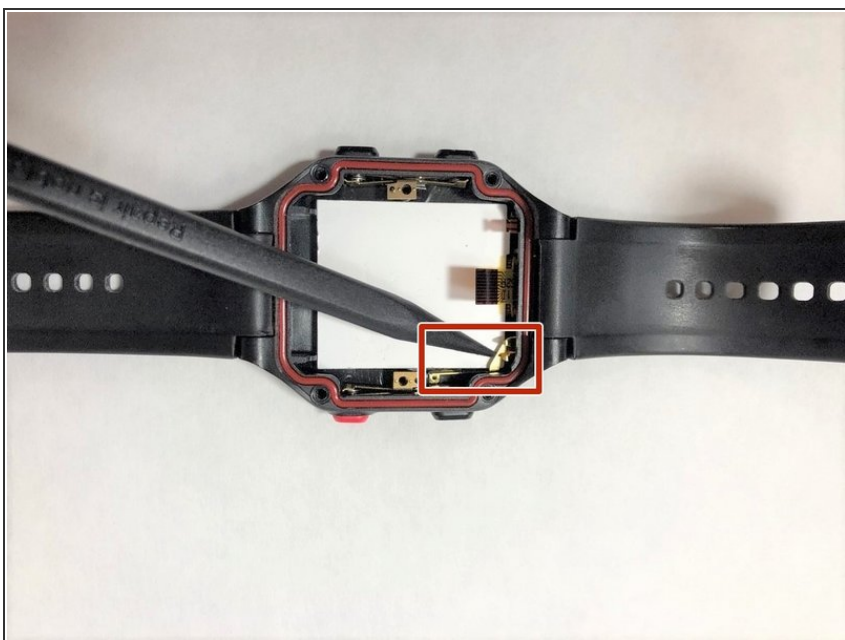

- Remove gold piece in the corner using the pointed side of the 4 spudger.
- ⓘ Any spudger with a pointed end should work to remove this piece.

Step 7



- Pry the screen up with a plastic opening tool.
- ⓘ Any plastic tool with a flat edge should work to remove the screen.
- Remove the screen.

To reassemble your device, follow these instructions in reverse order.