

Memorex CD Alarm Clock Radio Disassembly

Written By: Shawn Vernon



 **TOOLS:**

Phillips #1 Screwdriver (1)

Step 1 — Memorex CD Alarm Clock Radio



- Turn the clock radio over so the bottom is facing up.
- Pull the tab upward and remove the cover from the battery compartment.
- Remove the batteries.

Step 2



- Remove the five screws on the bottom of the device with a screwdriver.
- Grasp the top and bottom and gently pull apart.

To reassemble your device, follow these instructions in reverse order.