



Asus Vivobook Max X541SA-PD0703X Wi - Fi Card Replacement

This guide will provide instructions on how to access the interior parts of the Asus Vivobook Max X541SA-PD0703X and replace the Wi - Fi Card.

Written By: Hetvi Mehta



INTRODUCTION

This guide will show you how to replace the Wi - Fi Card of your Asus Vivobook Max X541SA-PD0703X. In order to replace the Wi - Fi Card, you do not need to remove any other parts.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #0 Screwdriver](#) (1)

PARTS:

- [Wi-Fi Card](#) (1)
-

Step 1 — Wi - Fi Card




- Flip the laptop upside down so that the back of the laptop faces you.

Step 2



- Remove the following ten Phillips #0 screws from the bottom of the laptop:
 - Six 13mm screws.
 - Four 11mm screws.

Step 3

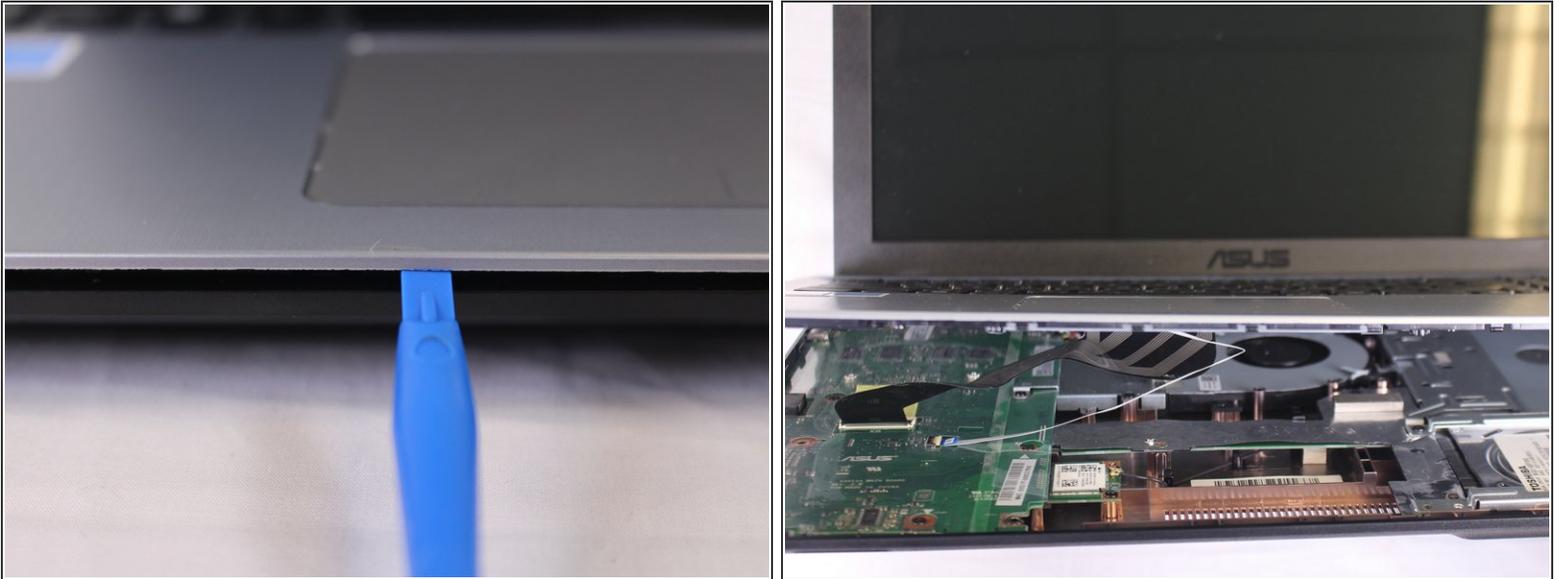

- Using a plastic opening tool, pry up the palm rest from the bottom half of the laptop.
- ⓘ Ribbon cables still connect both halves so don't remove completely.

Step 4




- Use a spudger to flip up the retaining flap on the keyboard ribbon cable [ZIF](#) sockets.
- Pull the ribbon cables out of their sockets.

Step 5



- Remove the 6mm Phillips #0 screw from the Wi-Fi card.

Step 6

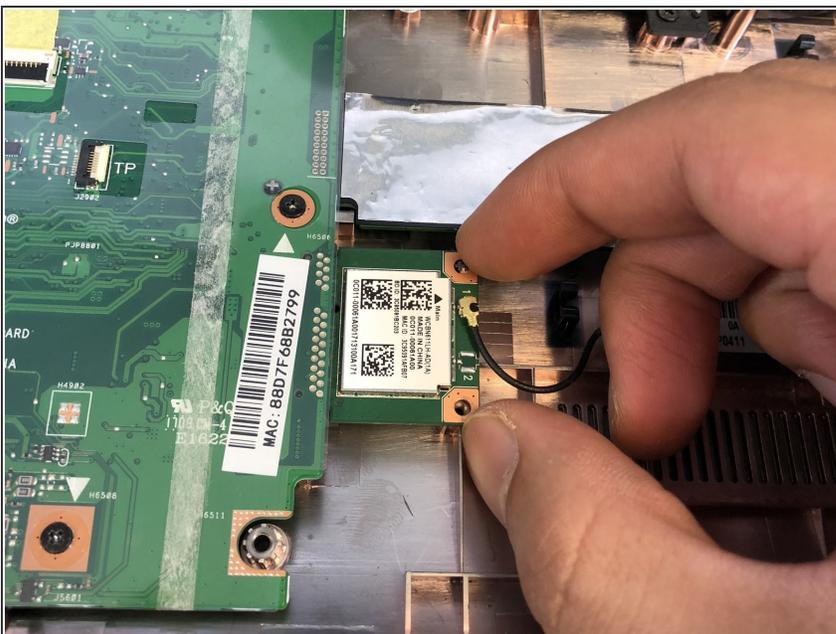

- Pull the Wi-Fi card out of the motherboard.

Step 7



- Disconnect the antenna cable from the Wi-Fi chip.

To reassemble your device, follow these instructions in reverse order.