



# HP Stream 13-c010nr Disassembly

This guide will show you how to disassemble a HP Stream 13-c010nr laptop.

Written By: Keegan Lapham



---

## INTRODUCTION

This guide will show you how to disassemble a HP Stream 13-c010nr laptop.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Precision Tweezers Set](#) (1)
-

## Step 1 — HP Stream 13-c010nr Disassembly




- Remove the five rubber feet from the bottom of the laptop with a plastic opening tool.

## Step 2




- Remove the thirteen 5mm Phillips #0 screws from the bottom case.

## Step 3

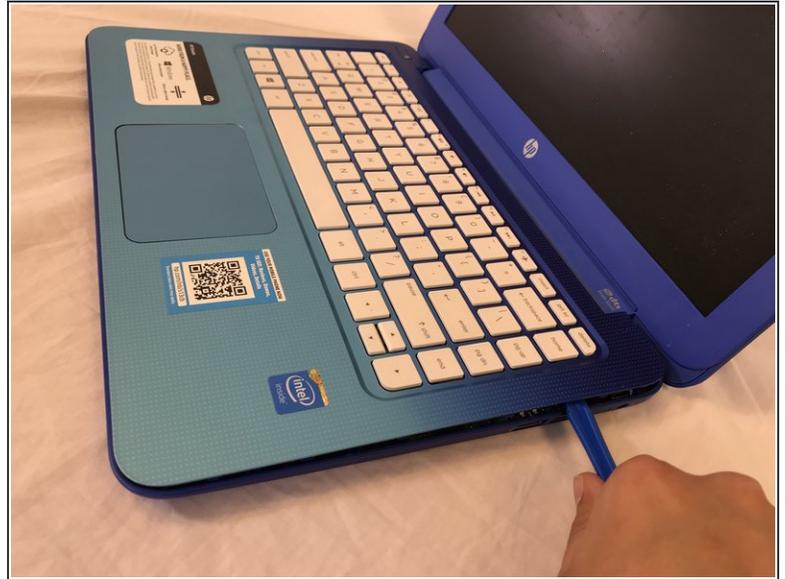

- Flip the laptop over and open it up.
- Wedge a plastic opening tool between the keyboard and bottom case, pry upwards to separate the two pieces.
- Lift up the keyboard.
- ⓘ Ribbon cables still connect the two pieces.

## Step 4

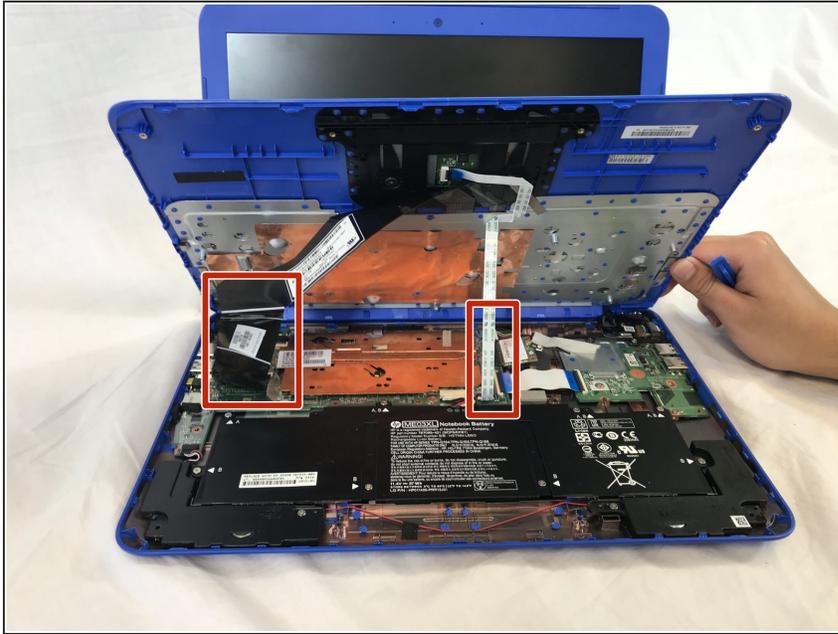

- Use a spudger to flip up the retaining flaps on the keyboard ribbon cable [ZIF](#) sockets.
- Pull up the ribbon cables from their sockets.

To reassemble your device, follow these instructions in reverse order.