




Lenovo IdeaPad N580 Battery Replacement

This guide will demonstrate how to replace the battery in a Lenovo IdeaPad N580 device.

Written By: Alex Amorim

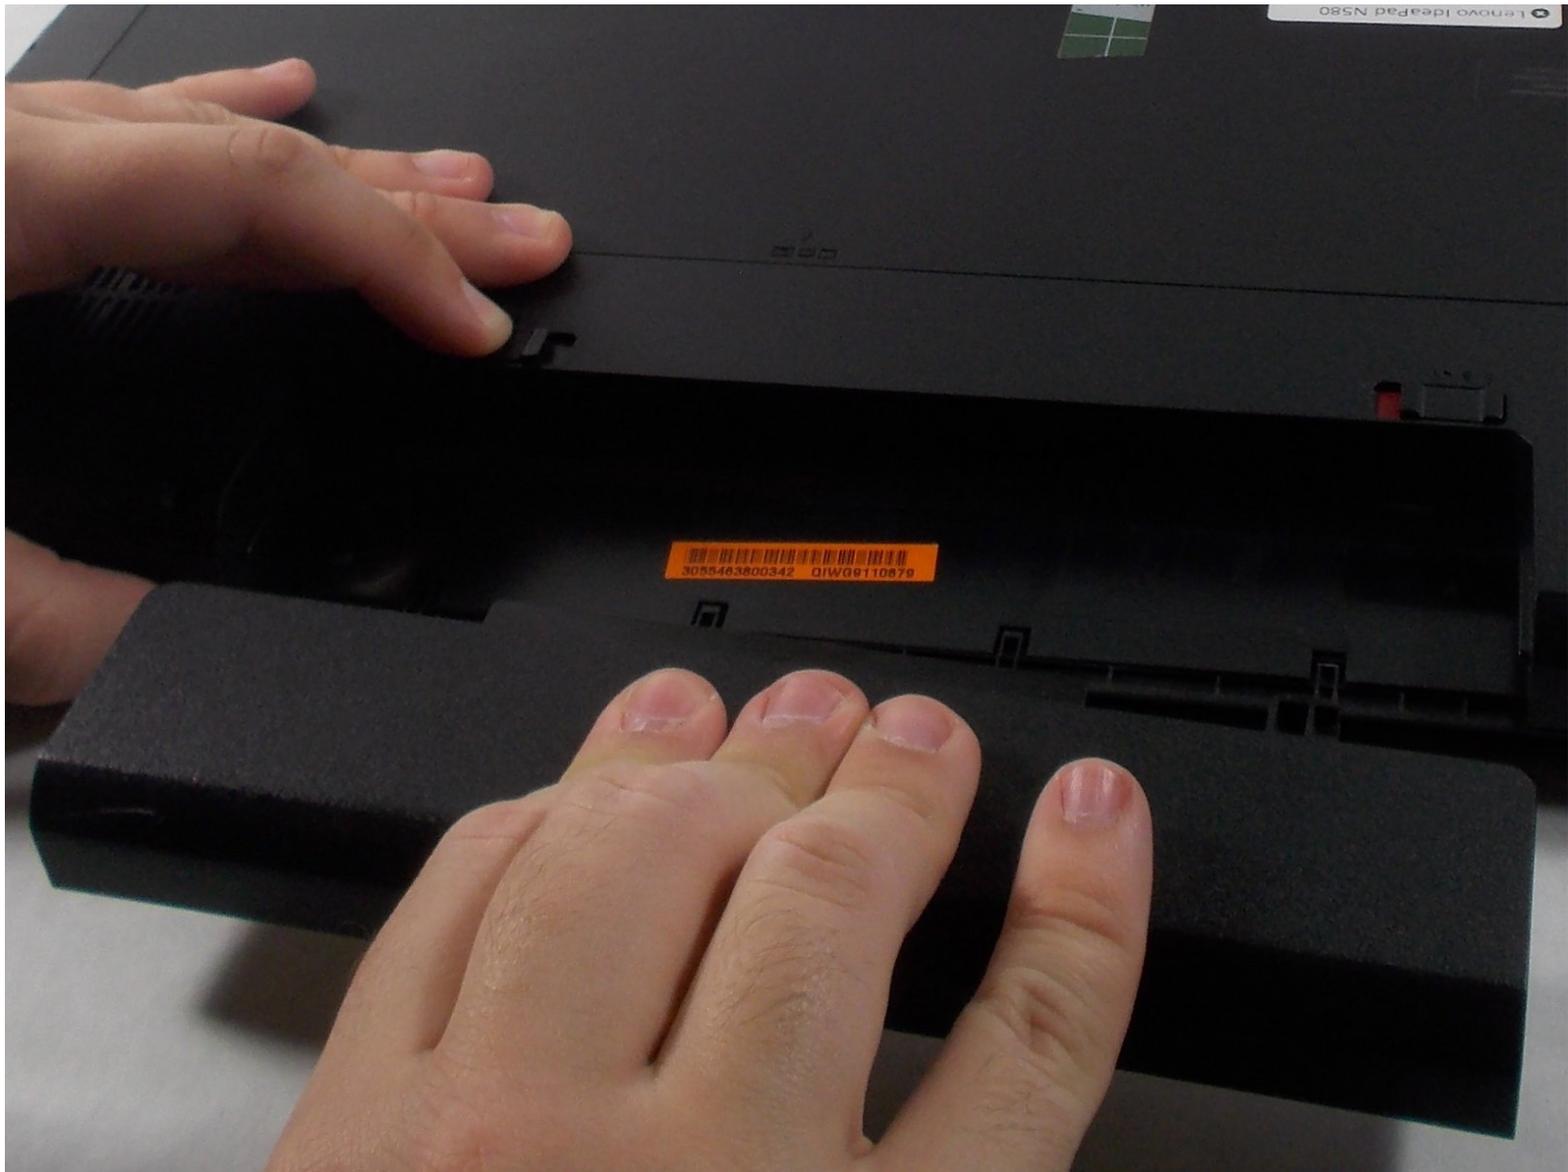

INTRODUCTION

If the device isn't powering on, then the issue may be due to the battery. Follow these steps to replace the battery.

Step 1 — Battery



- Turn over the device so that the bottom is facing up. Make sure the hinged side is facing you.

Step 2



- Move the right switch towards the right until it clicks in place. You should then see the color red reveal from where the switch was originally.

Step 3



- Now take your left hand and slide the left switch to the left.
- ⓘ This switch will not click in place like the other switch, so make sure to keep your left hand on the switch.

Step 4



- Take your free hand and place it on the battery. Gently slide it away from its slot.

To reassemble your device, follow these instructions in reverse order.