



# Dell Inspiron 1501 Hinge Cover Replacement

How to remove the hinge cover from the Dell Inspiron 1501.

Written By: Don Dao



---

## INTRODUCTION

This guide will teach you how to remove the hinge cover from your laptop and access what is underneath it.

---

### TOOLS:

- [Spudger](#) (1)
-

## Step 1 — Hinge Cover



- Open the laptop all the way, rotating the display so that it is level with the surface that you are working on.
- Insert the spudger underneath the groove on the right side of the hinge cover.
- Push up to pry the edge of the hinge cover out.
- Lift up to release the hinge cover from the laptop, working from right to left.

To reassemble your device, follow these instructions in reverse order.