




# Dell Inspiron 13-7353 RAM Replacement

If you notice your computer programs or computer are slowing, then this guide may be able to help. This guide will show you how to replace the RAM.

Written By: Stephany Marin Restrepo

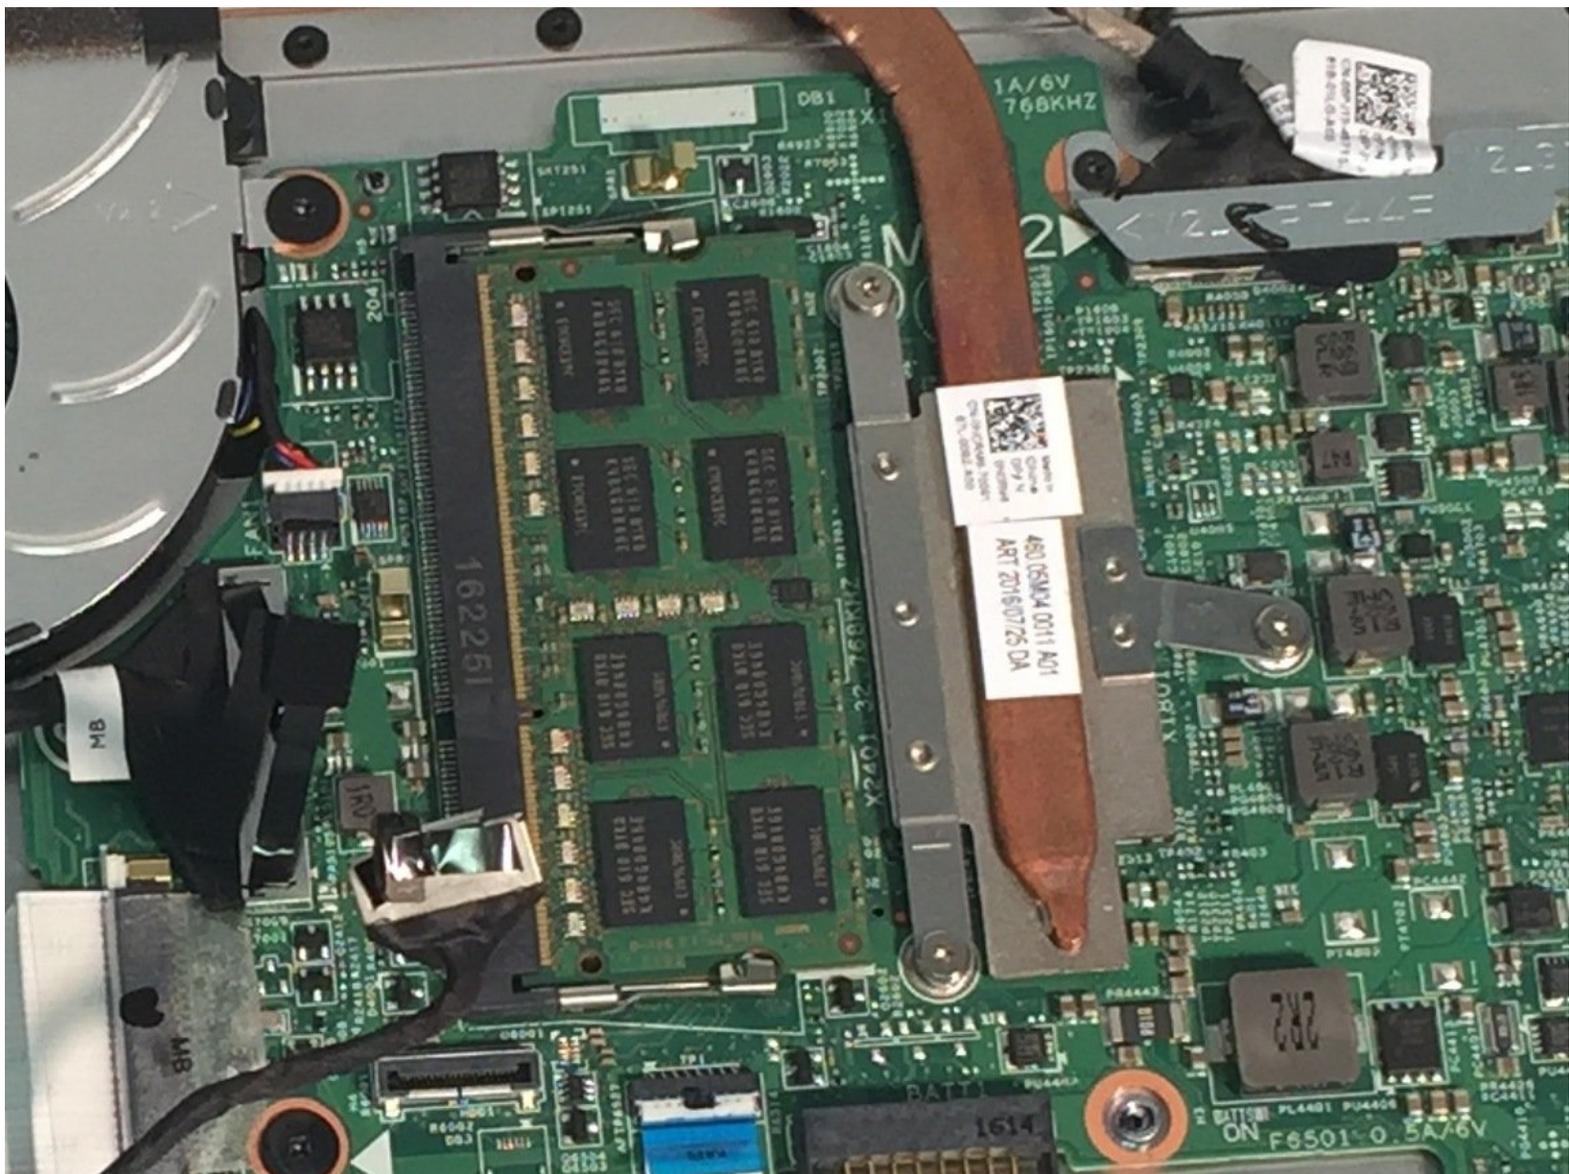

## INTRODUCTION


If you notice your computer programs or computer are slowing, then this guide may be able to help. This guide will show you how to replace the RAM in a few steps.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)


## Step 1 — Flip the Computer

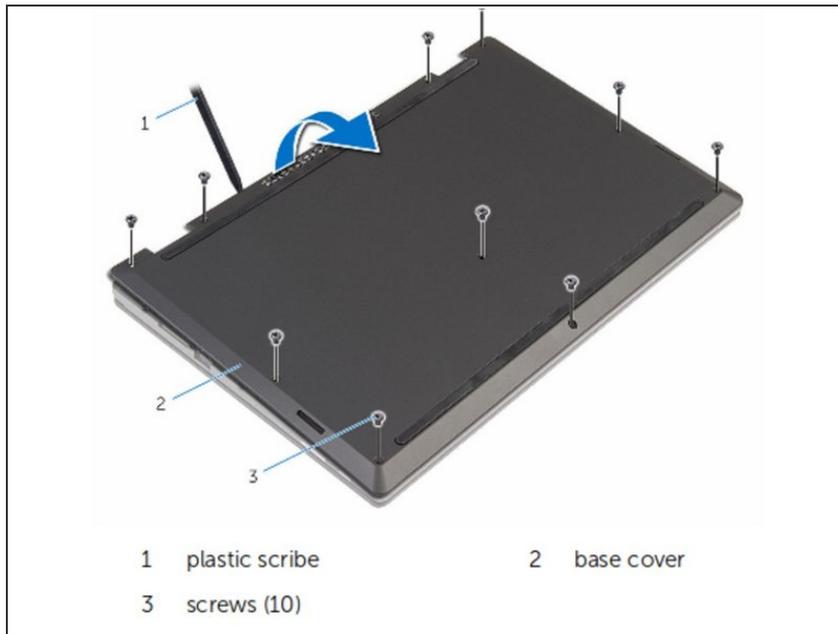

**⚠ WARNING:** Please read the safety information shipped with your computer and follow recommended steps before working inside your computer. When finished working inside your computer, follow the instructions included in the safety information.


- Close the computer display and turn the computer over so that the base of the computer is facing up.

## Step 2 — Secure the Base

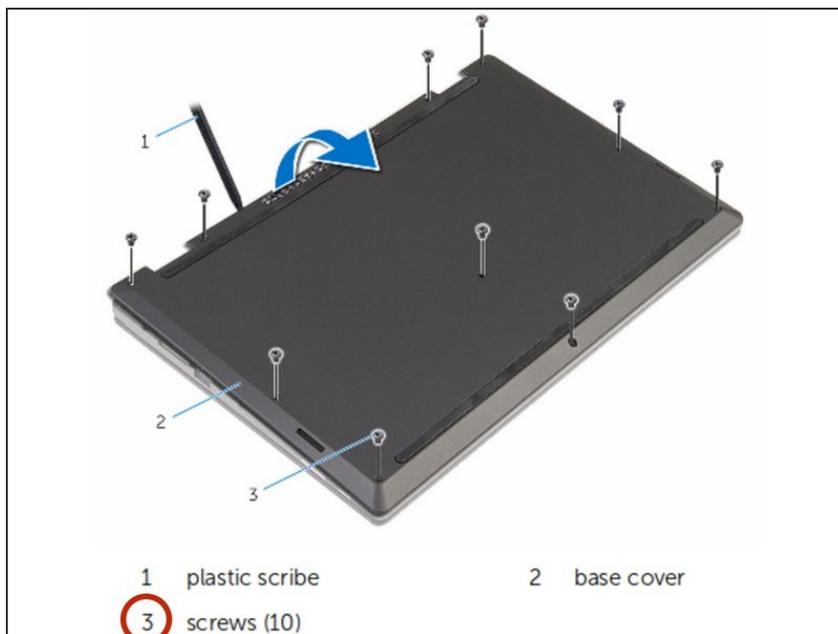



- Remove the ten screws that secure the base cover to the base of the computer.

### Step 3 — Pry the Base cover

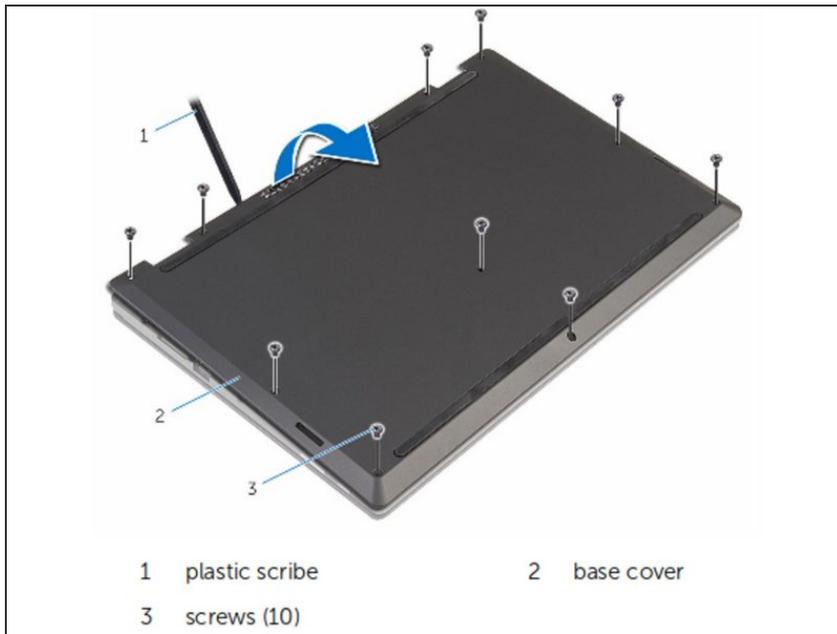

- Using a plastic scribe (plastic opening tool), pry the base cover off of the base of the computer.



### Step 4 — RAM

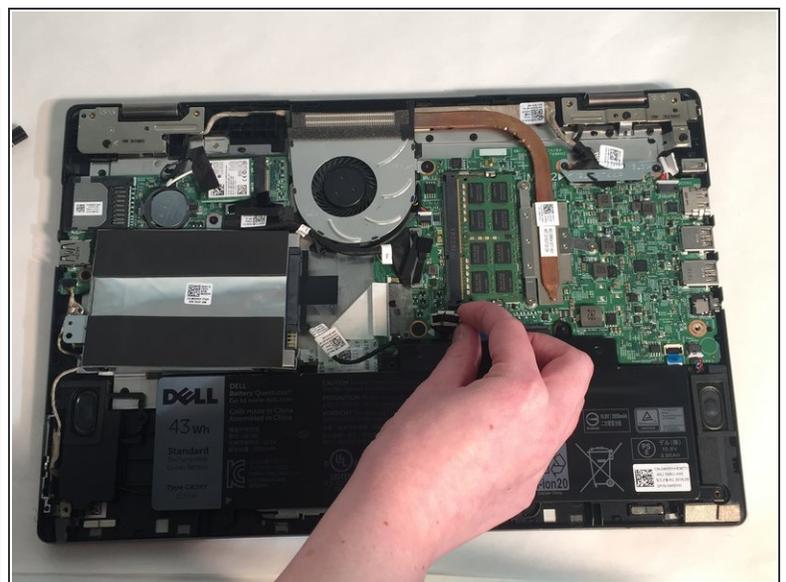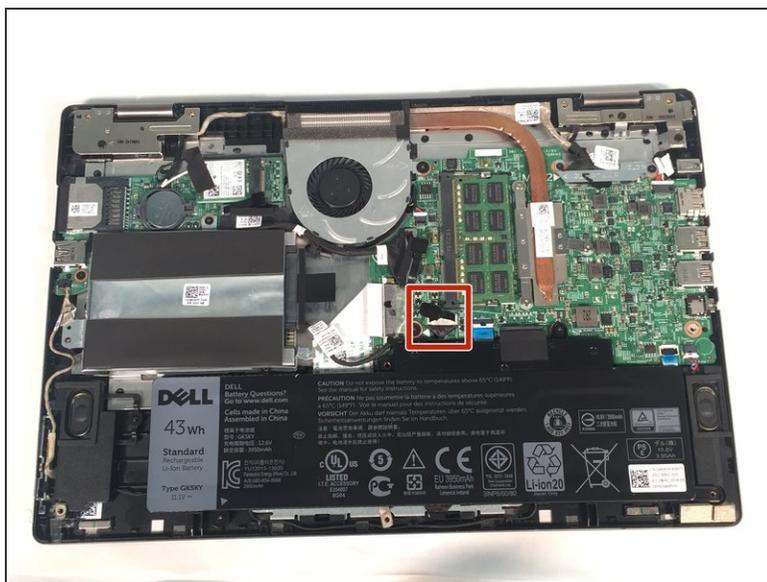

**i** Before opening your device, ensure that all data is backed up on a hard drive to prevent data loss.



- Loosen and then unplug the hard drive cable.

## Step 5

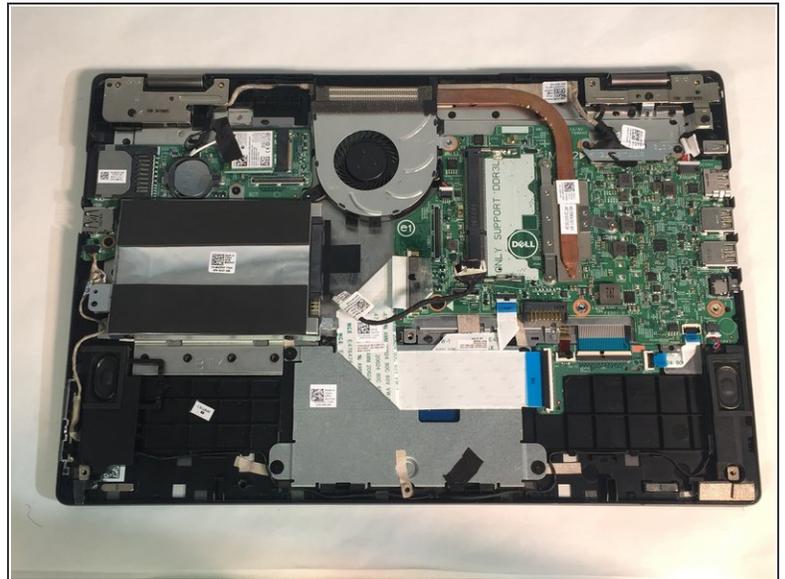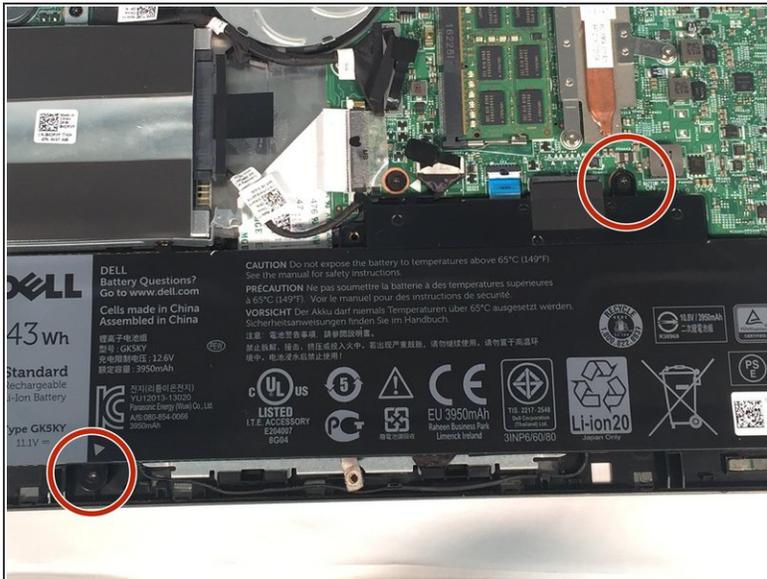

- Remove the two M2 3mm screws attaching the battery using the Phillips #1 screwdriver.
- Remove the battery.

## Step 6

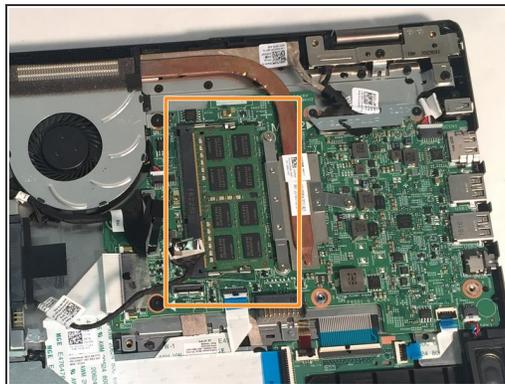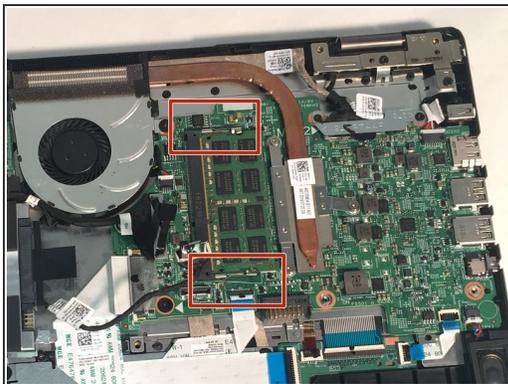

- Pry open the two clips.
- Gently lift the RAM stick and pull it out of the motherboard.

To reassemble your device, follow these instructions in reverse order.