



Acer Aspire 5740-5780 Battery Replacement

This is a guide to remove and replace the battery of the Acer Aspire 5740-5780.

Written By: Gian Farrell



INTRODUCTION

This guide shows how to remove and replace the battery of the Acer Aspire 5740-5780.

Step 1 — Battery



- Unlock the battery by flipping a switch near the release latch.

Step 2



- Slide the release latch to the left to release the battery from the PC.

Step 3



- Use your hands to pry the battery free of the computer.

To reassemble your device, follow these instructions in reverse order.