




Acer Aspire 5740-5780 Middle Cover Replacement

Remove the middle cover from your laptop to access other internals for replacement.

Written By: Dwyer Deighan

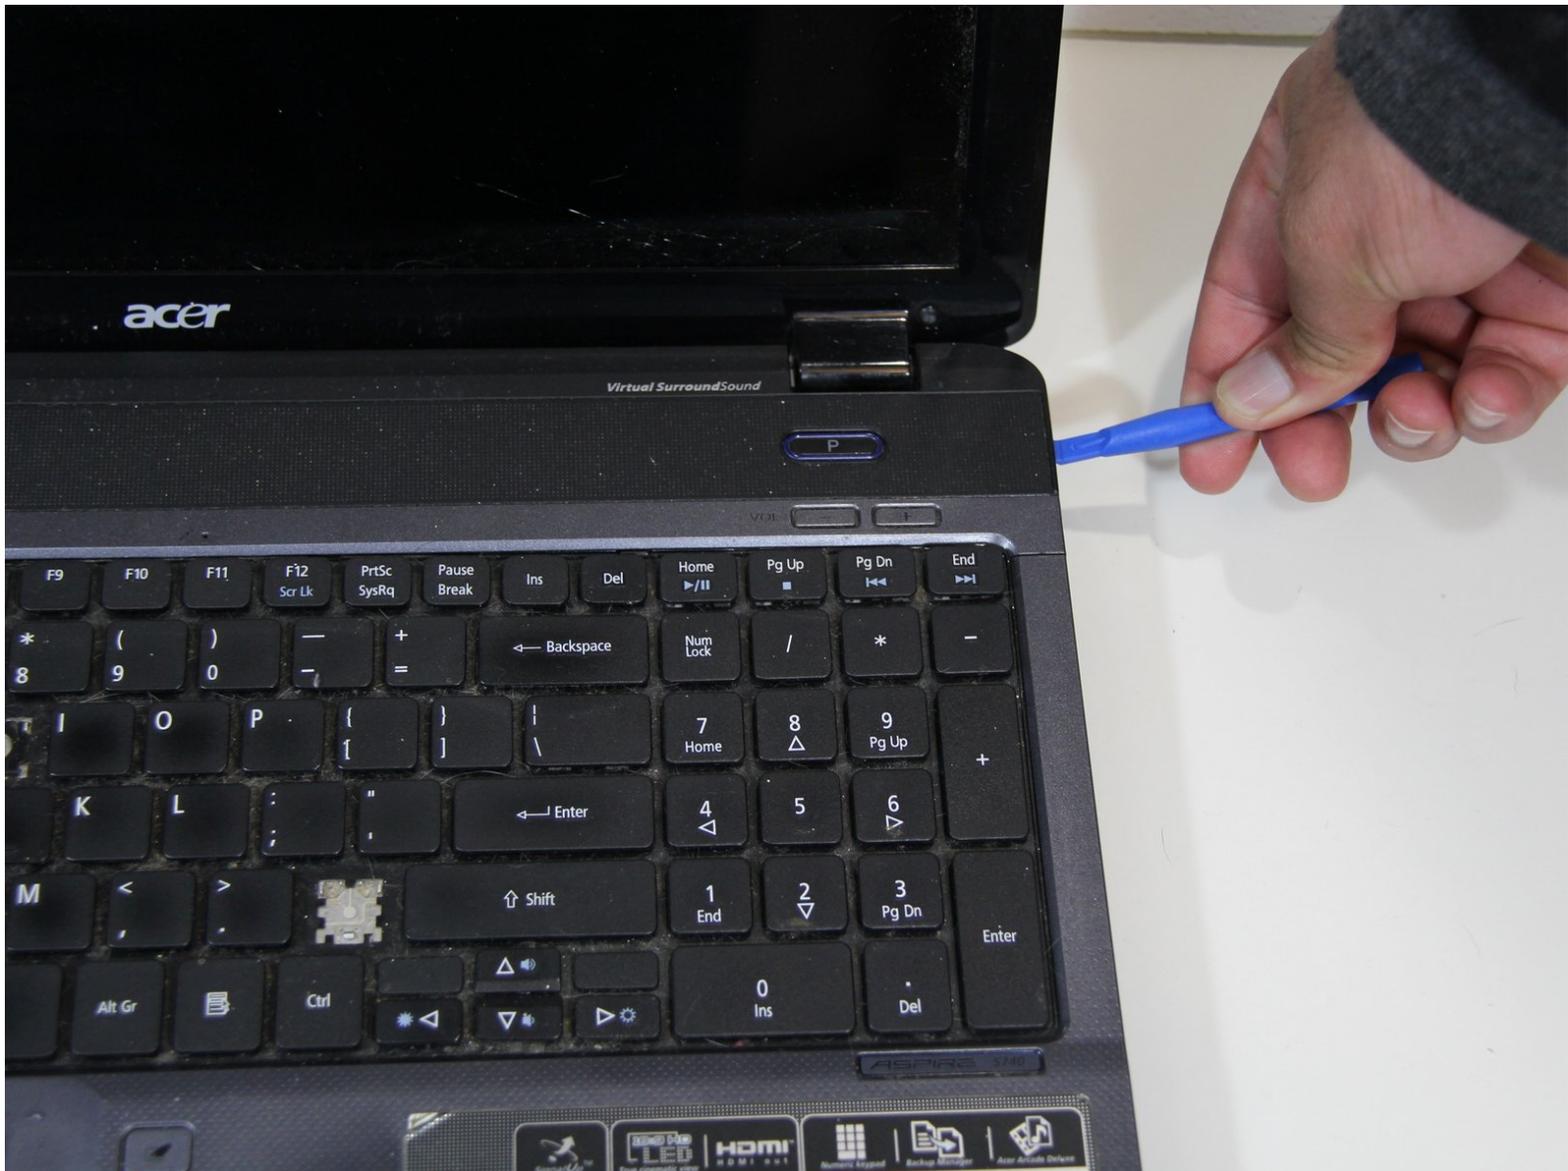


INTRODUCTION

Use this guide to remove the middle cover of your device.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Middle Cover

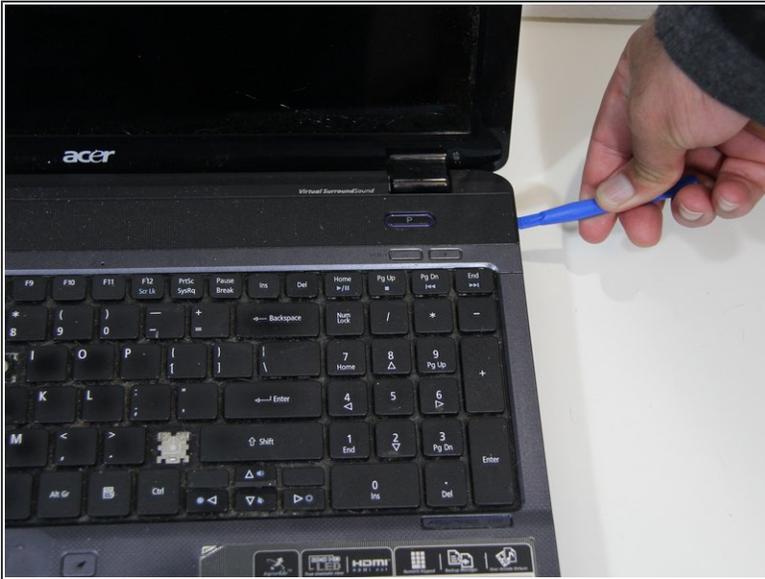

- Use spudger to gently pry off open middle cover.
- Then flip the middle cover over onto the keyboard.

Step 2



- Use tweezers to detach the cable from the volume button board on the middle cover.

Step 3



- Finally remove the middle cover completely from the computer.

To reassemble your device, follow these instructions in reverse order.