



# Reformat SD Card

Formatting SD card so that the camera is able to function properly.

Written By: John Webb



# INTRODUCTION

The SD Card is required to save each photo before taking the next photo. This guide will show the proper steps to reformat the SD Card.

## Step 1 — Reformat SD Card



- Turn the camera on by sliding the switch from the "Off" position to the "On" position. The switch is located above the touchscreen and to the left.
- The screen will say "Sensor cleaning" once the switch is moved to "On".

## Step 2



- Push the black button that says "Menu", located below the "ON/OFF" switch.

### Step 3



- Using the thumb pad, scroll to the 9th menu from the left.

### Step 4



- Scroll down the list using the thumb pad and select, "Format card" by pressing the center of the thumb pad labeled, "SET".



## Step 5



- i** Once you select "OK", all pictures will be erased from the SD Card.
- Press the right side of the thumb pad to move over the "Ok" button.
  - Once "OK" is highlighted, press the middle of thumb pad to initiate the formatting of the card.

## Step 6



- Wait.

## Step 7



- SD Card is now formatted.

To reassemble your device, follow these instructions in reverse order.