



# Dell Inspiron 17-3721 RAM Replacement

The RAM of the laptop can eventually break from use. To replace this, only the back panel will have to be taken off.

Written By: Christopher Meninno



# INTRODUCTION

It is possible for SRAM to break over time with heavy use. Users may also decide that they would like more and/or faster SRAM in their laptop. This guide will show users how to replace the SRAM of the device.



## TOOLS:


- [Metal Spudger](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — RAM



- Remove the two 6.5 mm PH1 Philips head screws from the laptop.
- Lift up the small panel from the top, using the spudger if necessary.

## Step 2

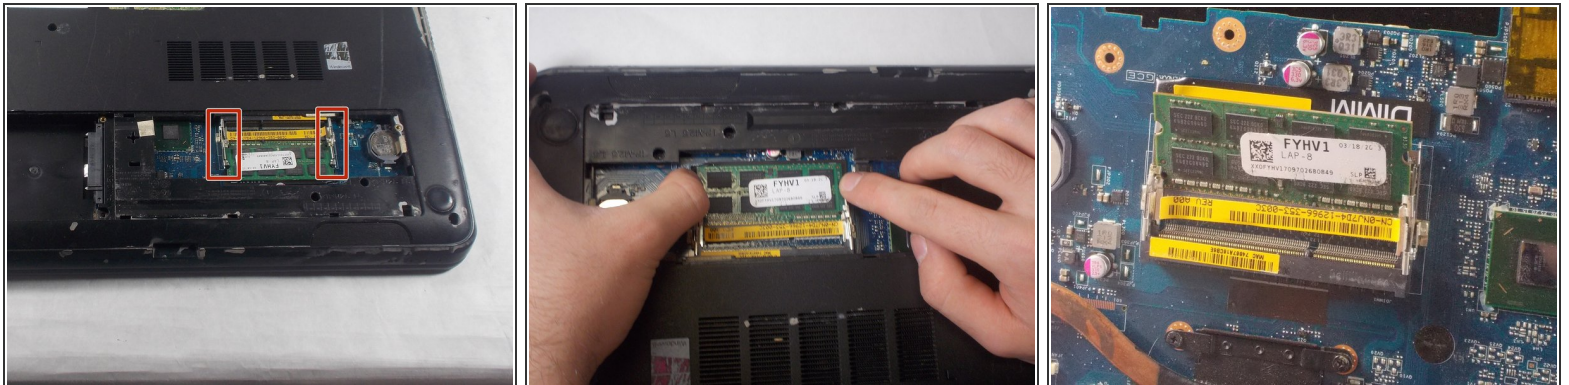

- Press the tabs on the RAM inward. The SRAM should pop out of the slot and be easily removed.

To reassemble your device, follow these instructions in reverse order.