



# HP Pavilion g4-1117dx Screen Replacement

How to replace the HP Pavilion g4-1117dx screen.

Written By: Robert Hamilton



## INTRODUCTION

Although it does not have many prerequisites, the screen is without a doubt the most difficult part of the laptop to remove. There are several hidden screws and wire that need to be carefully removed.

### TOOLS:

- [JIS #0 Screwdriver](#) (1)

### PARTS:

- [HP Pavilion g-4 Battery](#) (1)

## Step 1 — Battery



- Slide pill shaped tab to the other side of the channel.

## Step 2




- Remove battery while keeping the tab to the side.

## Step 3 — Screen



- Remove two triangular shaped screw covers in the bottom corners of the monitor near the hinges.
- Unscrew the two 4.0 mm JIS #0 screws holding the hinge covers.

## Step 4

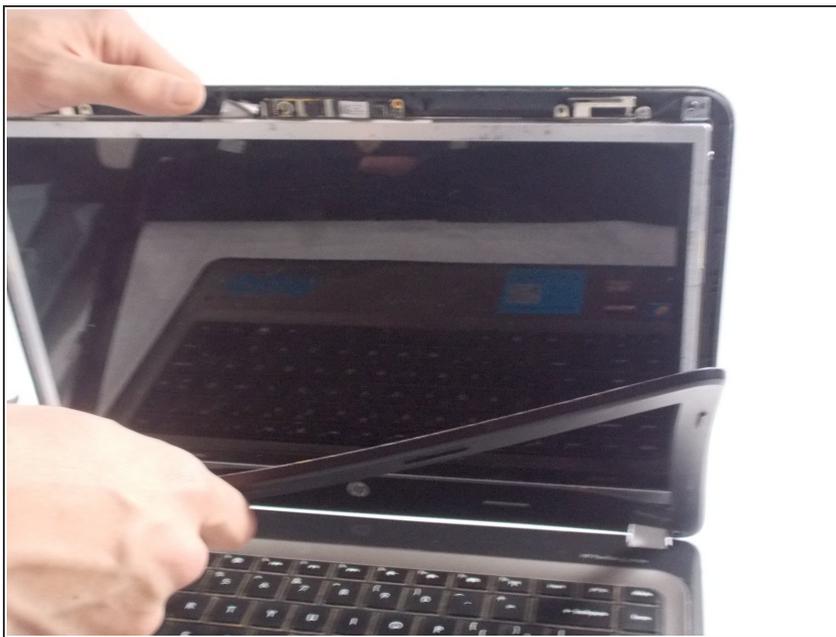

- Pry off the monitor border cover.

## Step 5



- Remove four 4.0mm JIS #0 screws located at each corner of the monitor.

## Step 6




- Remove the two silver hinge covers.

## Step 7




- Unplug at golden connector.

## Step 8

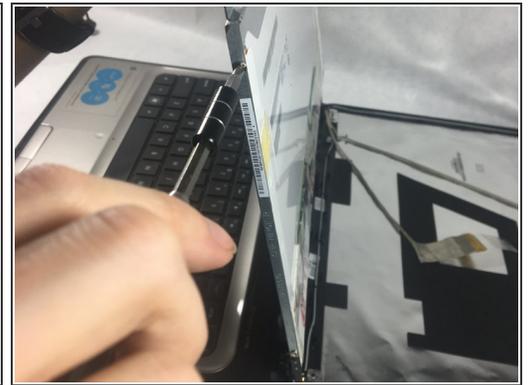

- Remove four 3.0mm JIS #0 screws, two on each side of the screen.

## Step 9

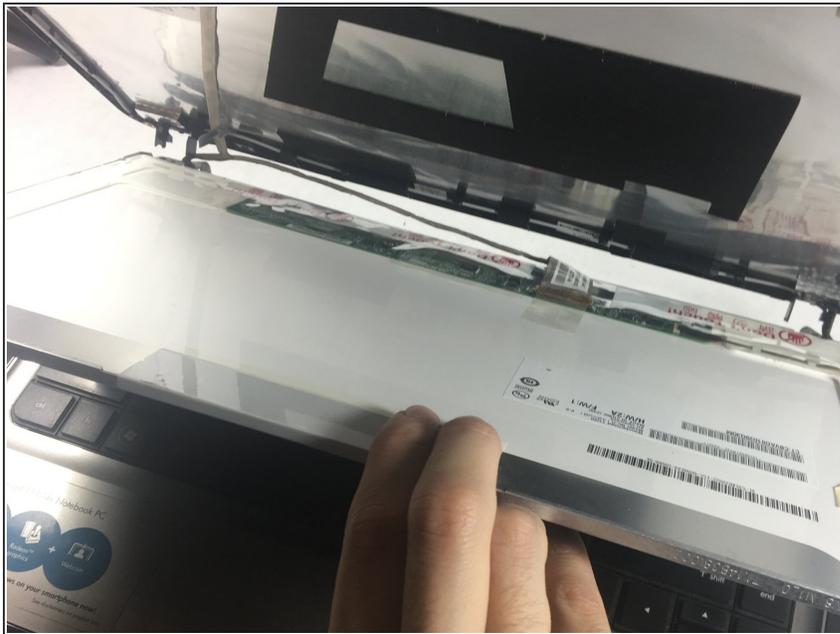

- Carefully remove the screen.

To reassemble your device, follow these instructions in reverse order.