




HP Pavilion dv6-6117dx RAM Replacement

This guide will help you replace or upgrade the RAM in the HP Pavilion dv6-6117dx.

Written By: Joshua Holme

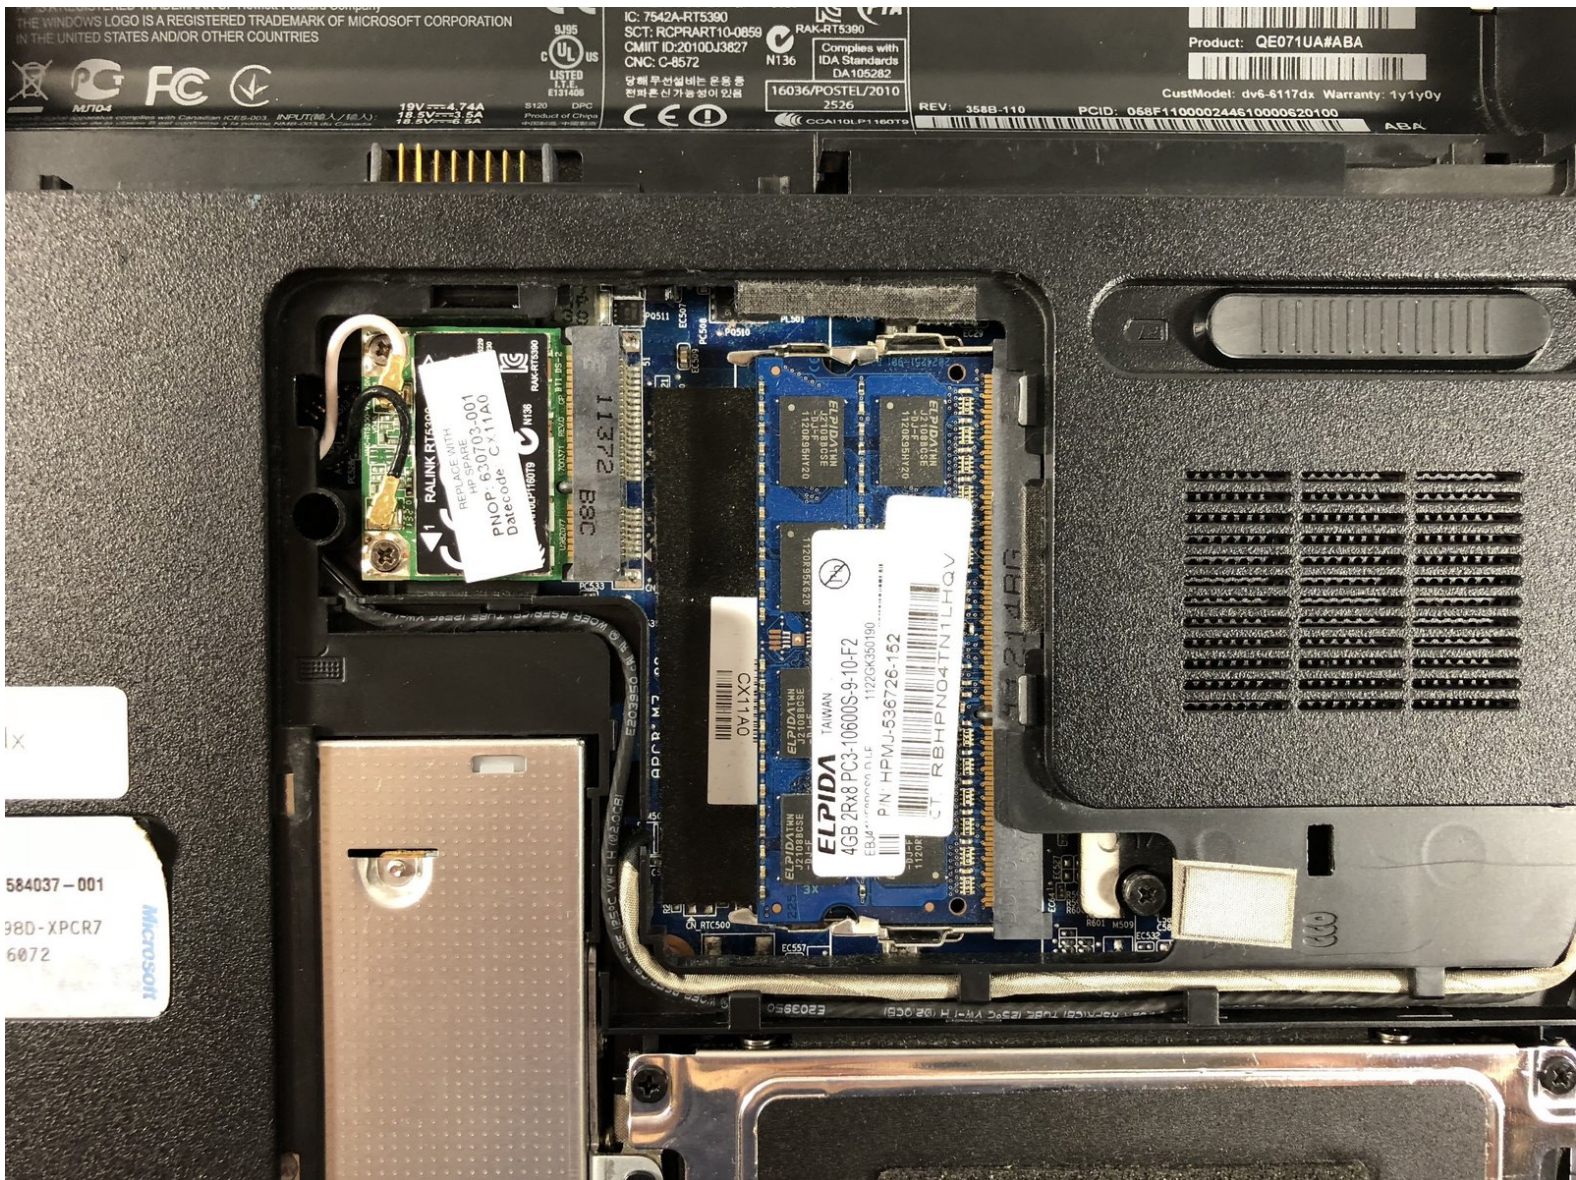

INTRODUCTION


Is your computer running slow? One cause could be an insufficient amount of RAM. By following this guide below, you can upgrade the RAM in your HP Pavilion dv6-6117dx to help give your computer a breath of fresh air.



TOOLS:



- [Spudger](#) (1)
-

Step 1 — RAM

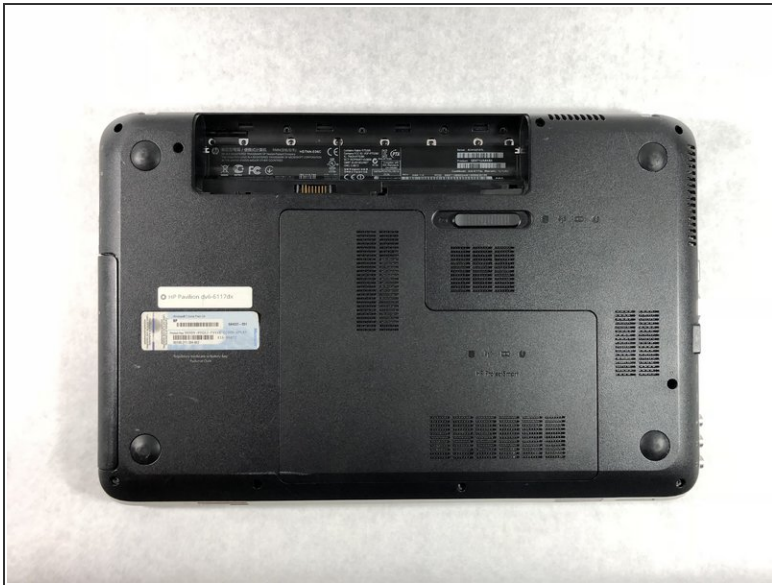


- Begin removing the bottom cover by sliding the battery removal slider to the right to pop off the top of the cover.

Step 2

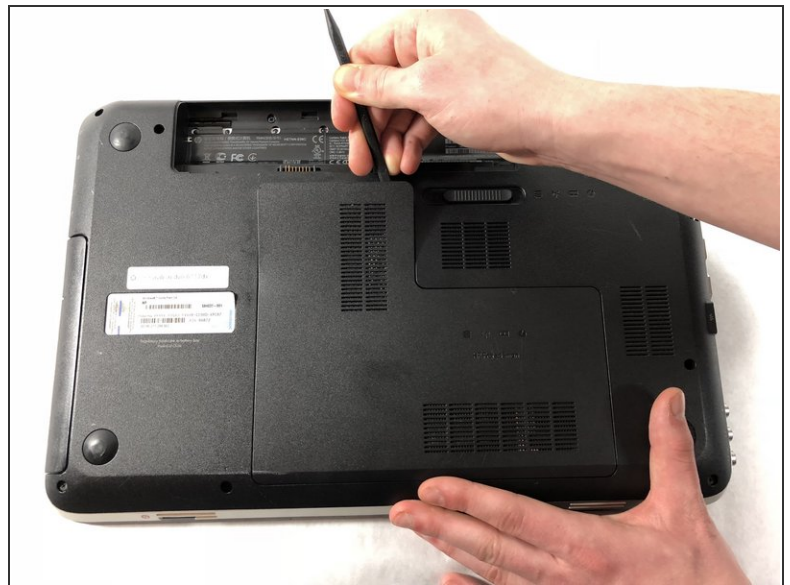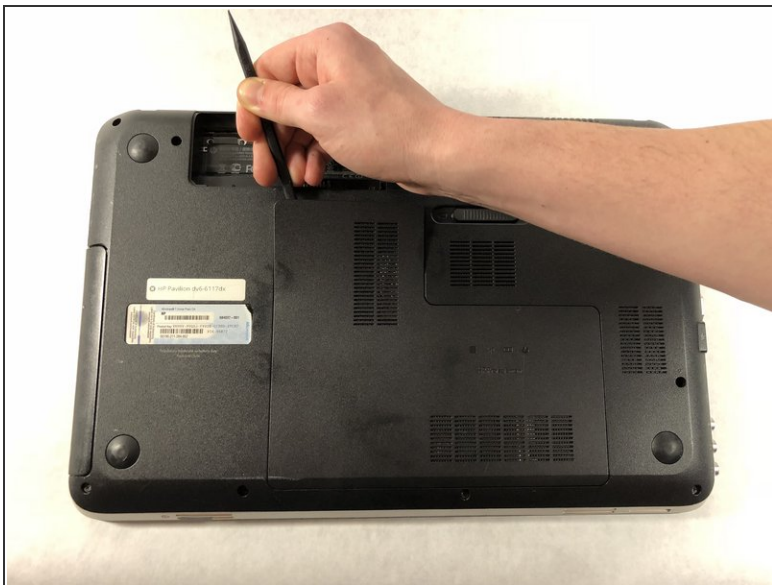


- Slide a black spudger under the top of the cover to loosen the clips underneath.

Step 3

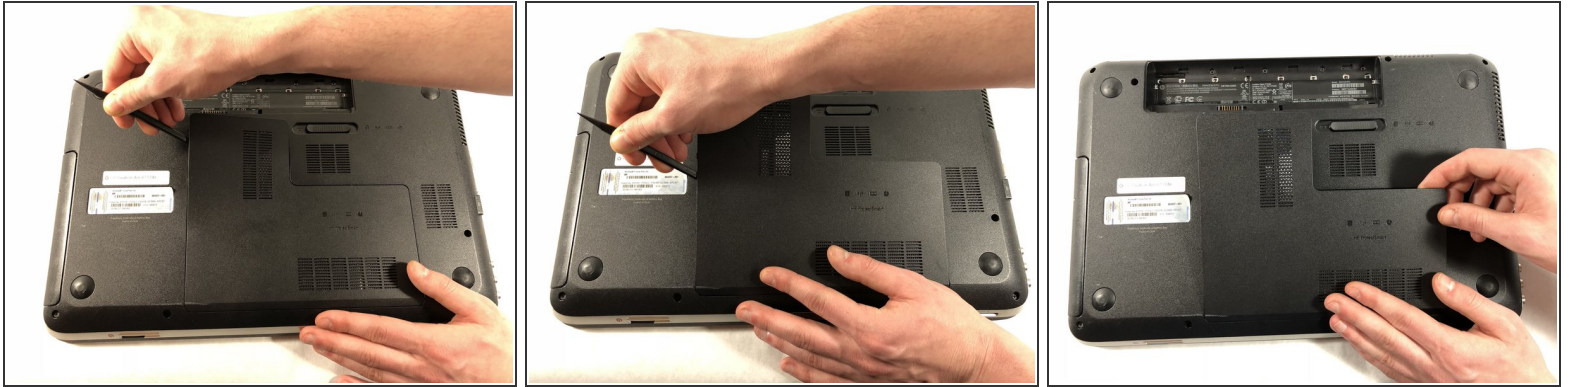



- Slide the spudger down the left side of the cover to loosen the clips.
 - After the left side is loose, the rest of the cover should pop off, and you can remove it with your hands.
- ☒ When reassembling, insert the bottom of the cover first, and then firmly press along the edges from bottom to top to secure it in place.


Step 4

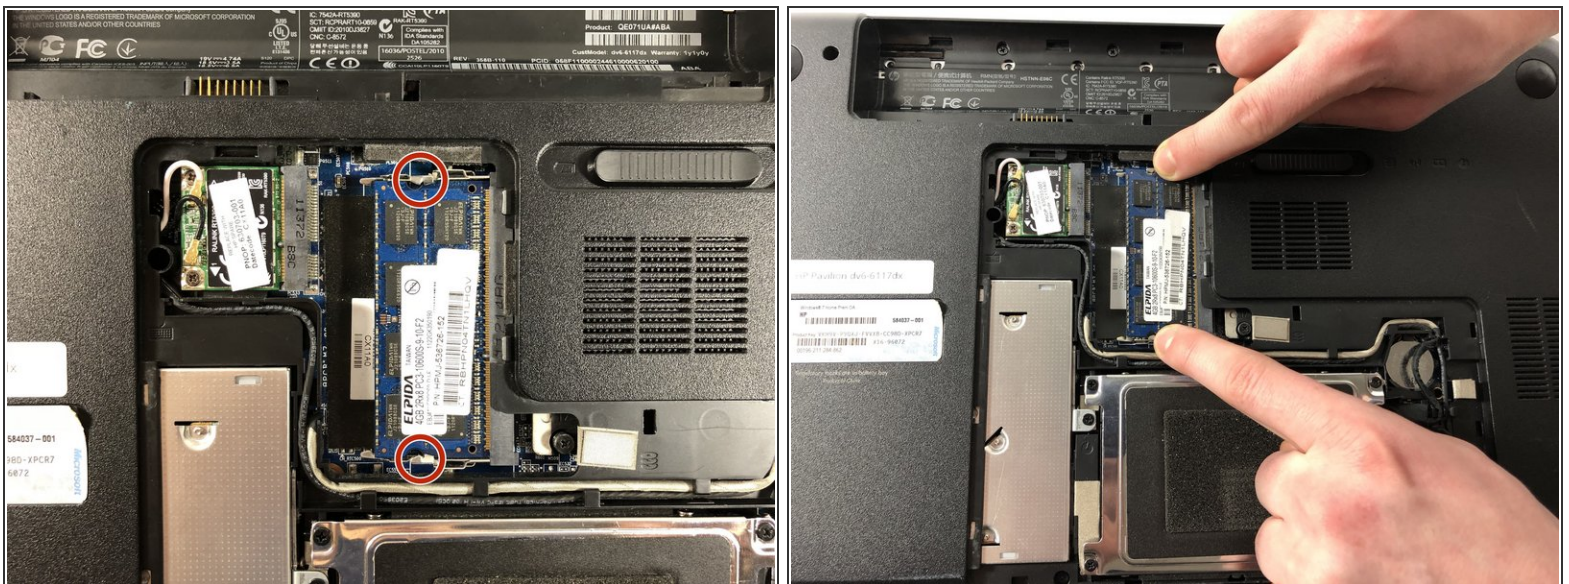

- Push the tabs on both sides away from each other to free the RAM, which will raise to a 45° angle.

Step 5

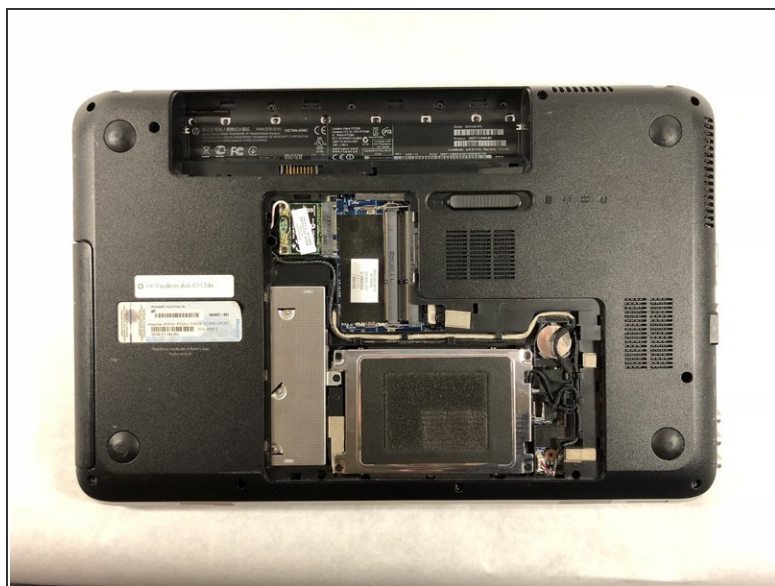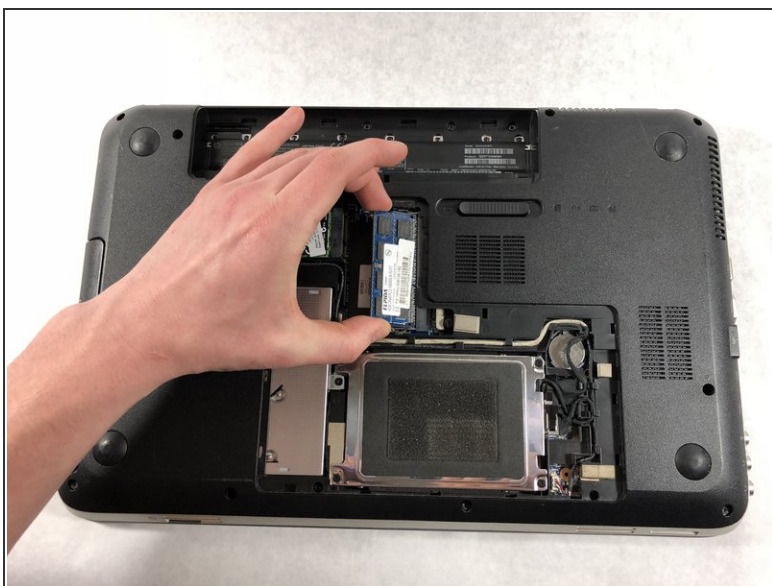

 Always handle RAM by the edges to avoid damaging the part.

- Remove the RAM by grabbing it by the sides and pulling out at a 45° angle.
- ☑ When inserting the new stick of RAM, you should insert it at this same angle.

To reassemble your device, follow these instructions in reverse order.