



HP Pavilion g4-1117dx CD Disc Drive Replacement

How to replace your HP Pavilion g4-1117dx CD disc drive.

Written By: Robert Hamilton



INTRODUCTION

The CD drive is one of the larger components in the laptop. It's one of the first things you'll see when you open up your device. Although it is fairly big in size, it's very simple to remove. This guide will show in detail how to remove and replace your CD drive.

TOOLS:

- [JIS #0 Screwdriver](#) (1)

Step 1 — CD Disc Drive



- Remove three 3.0mm JIS #0 screws.
- ⓘ Screws are located under little tabs that need to be flipped up.

Step 2



- Remove the CD disc drive.

To reassemble your device, follow these instructions in reverse order.