




Dell Inspiron 14 5443 Coin-Cell Battery Replacement

Written By: darrius

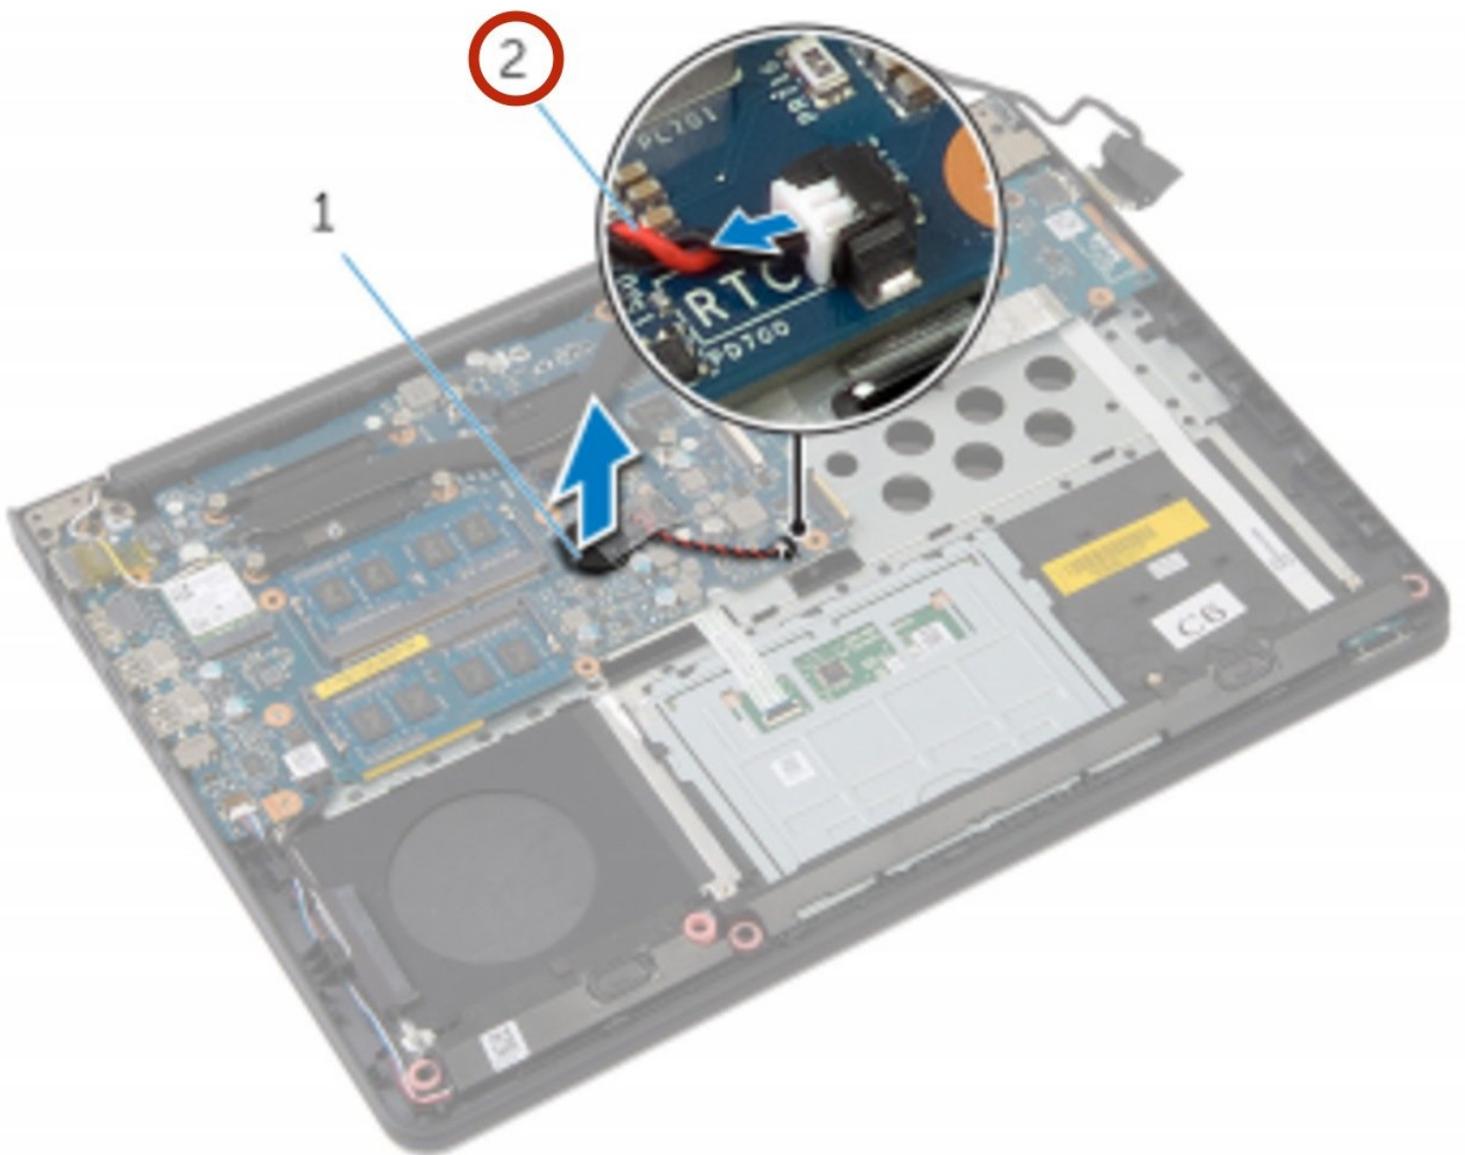


INTRODUCTION

How to remove and replace Coin-Cell
Battery.

TOOLS:

- [Essential Electronics Toolkit \(1\)](#)
-


Step 1 — Disconnecting the Coin-Cell Battery

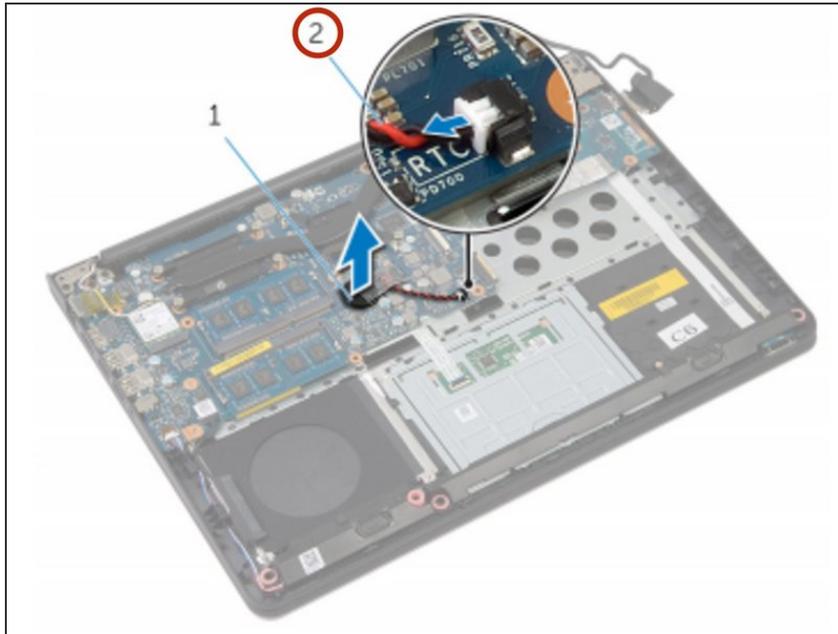

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Disconnect the coin-cell battery cable from the system board.

Step 2 — Peeling the Coin-Cell Battery

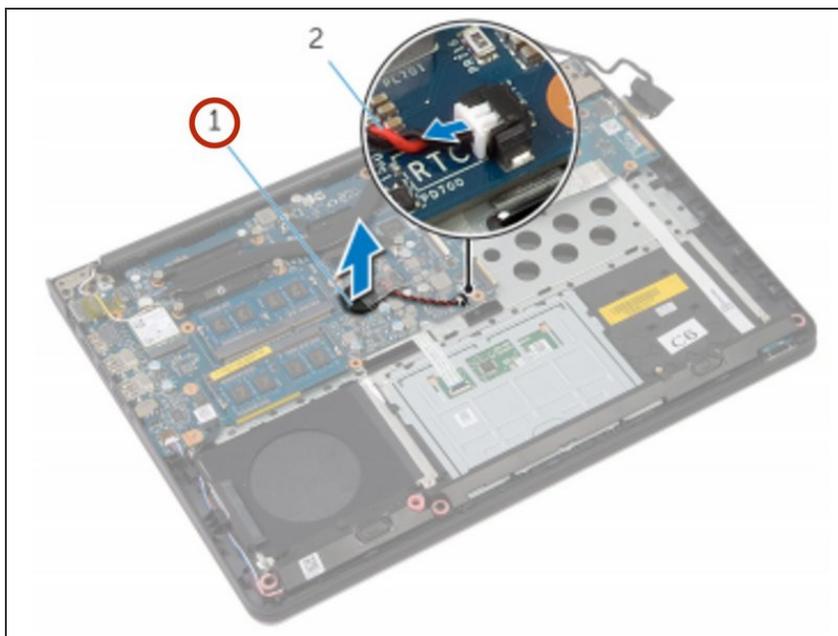


- Peel off the coin-cell battery from the system board.

Step 3 — Adhering the Coin-Cell Battery

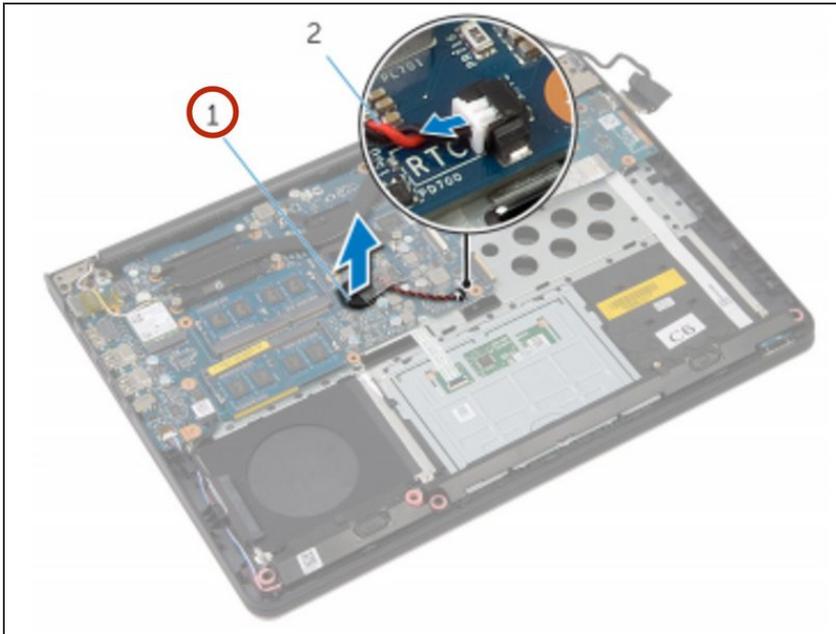

- Adhere the **NEW** coin-cell battery to the system board.

Step 4 — Connecting the Coin-Cell Battery

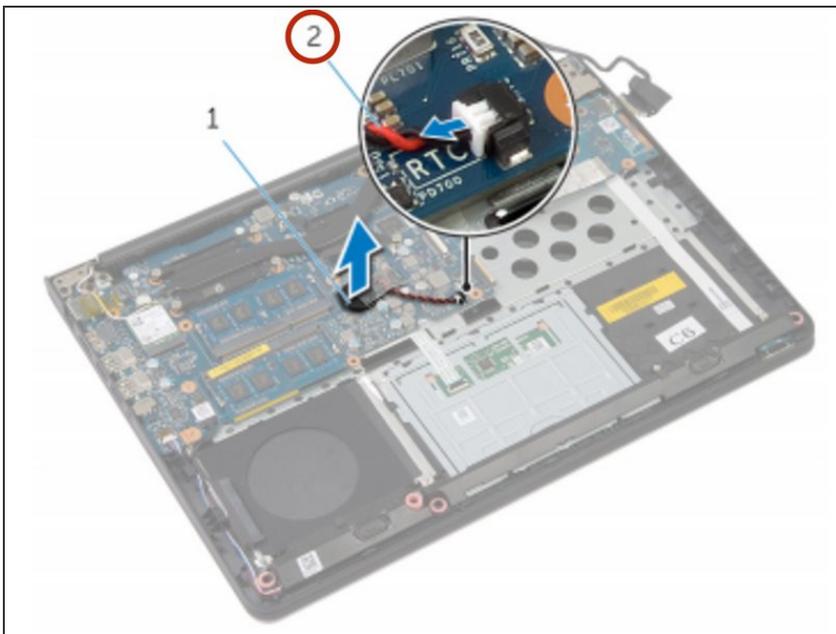

- Connect the coin-cell battery cable to the system board.