



Acer Aspire ES1-711-P1UV Battery Replacement

This guide will explain how to safely remove the battery from the Acer Aspire ES1-711-P1UV Laptop.

Written By: Lindsay O'Shea



This document was generated on 2020-11-20 09:16:15 AM (MST).

INTRODUCTION

This guide contains instructions on removing the battery from your Acer Aspire ES1-711-P1UV. If your battery is faulty, it may result in your computer not turning on or randomly turning off during use. By replacing the battery, these issues should be resolved.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Place the laptop face down on a flat, clean surface.
- Remove all twenty-seven 7 mm screws on the back cover of the laptop with a Phillips #0 screwdriver. Screws are circled in red on the diagram.

Step 2




- Use the iFixit opening tool to pry open the four corners of the back cover of the laptop. You may need to use your hands to fully remove the cover.
- Be sure to evenly apply pressure when removing the back cover.

Step 3



- Remove the two 5 mm screws located on either side of the battery.

Step 4

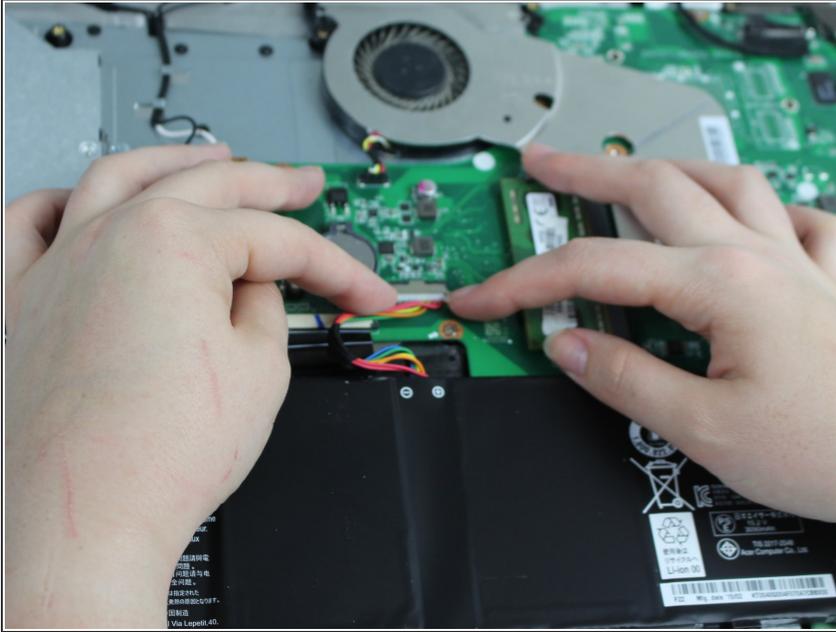

- Disconnect the colored bundled cable connectors from the motherboard. To do this, pull on the wires to disconnect the cable and remove the battery.

To reassemble your device, follow these instructions in reverse order.