


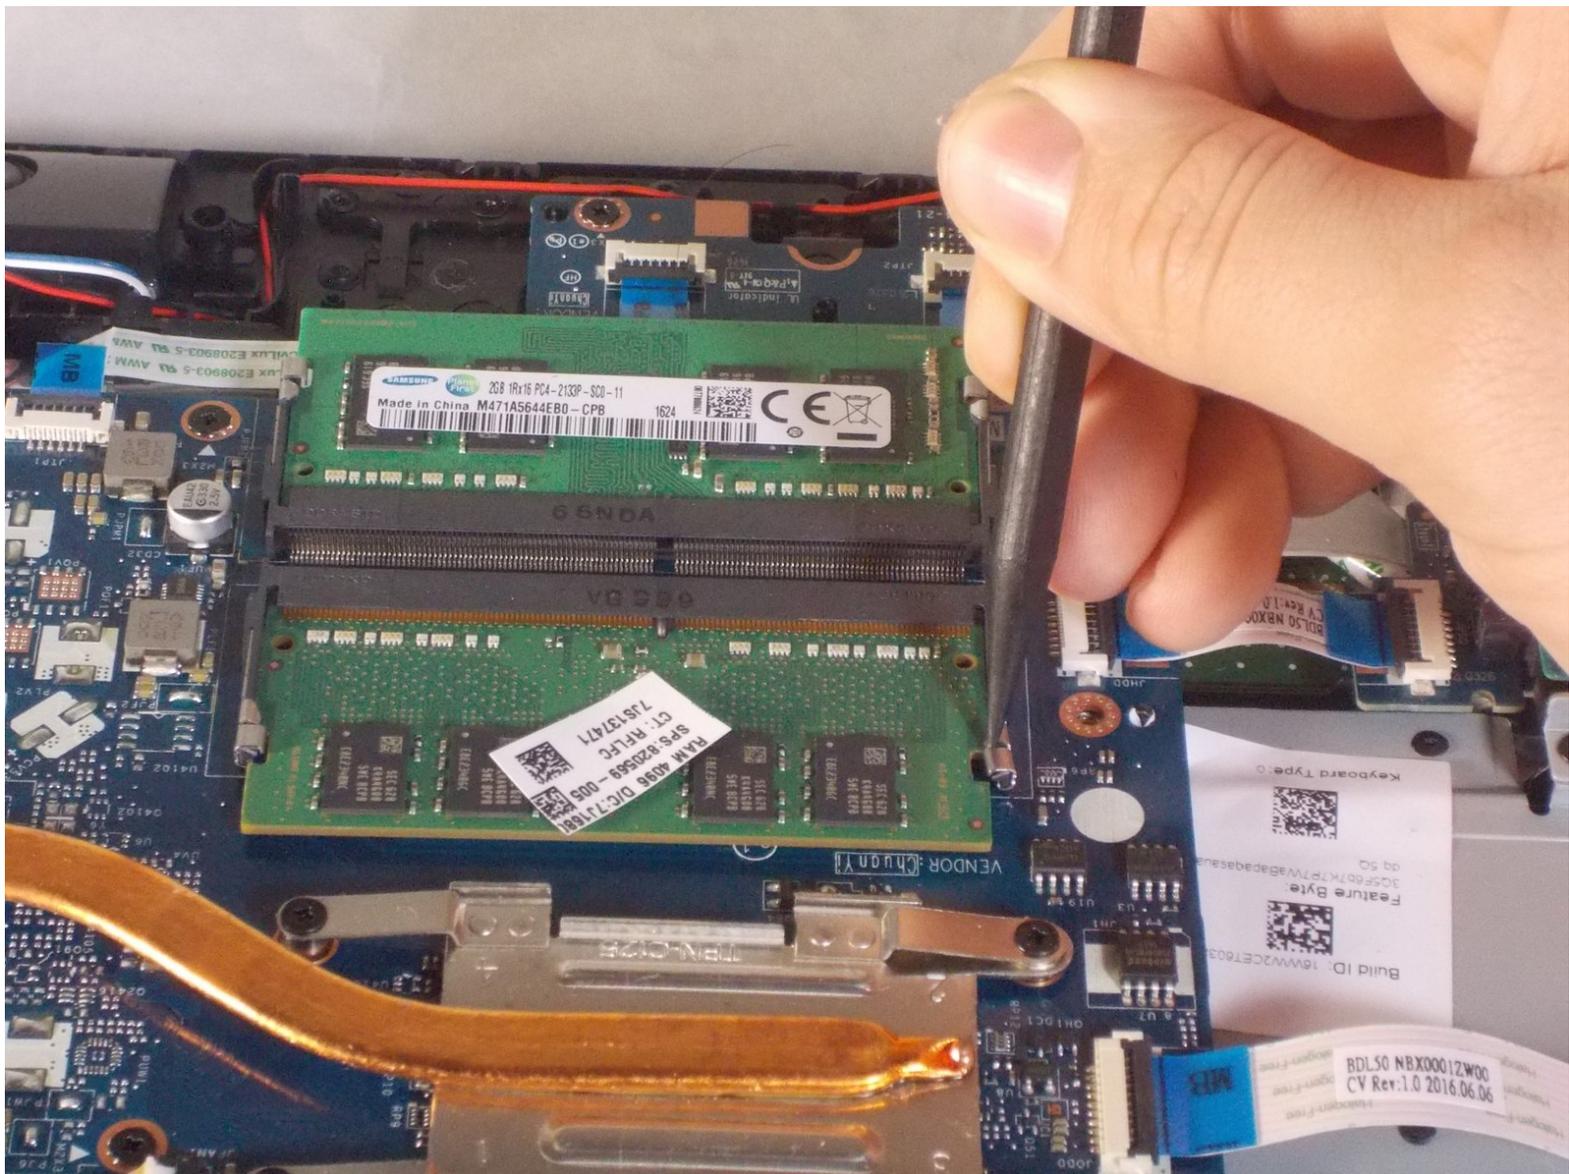

# HP 15-BA078DX RAM Replacement

This guide will detail the removal of the onboard Random Access Memory (RAM) modules that are installed in the laptop.

Written By: Benjamin DosSantos Jr



---

## INTRODUCTION

This guide will detail the removal of the onboard Random Access Memory (RAM) modules that are installed in the laptop.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Unclip the two latches on the bottom of the laptop.
- Slide the battery straight out while holding the clip open.

## Step 2 — Disc Drive

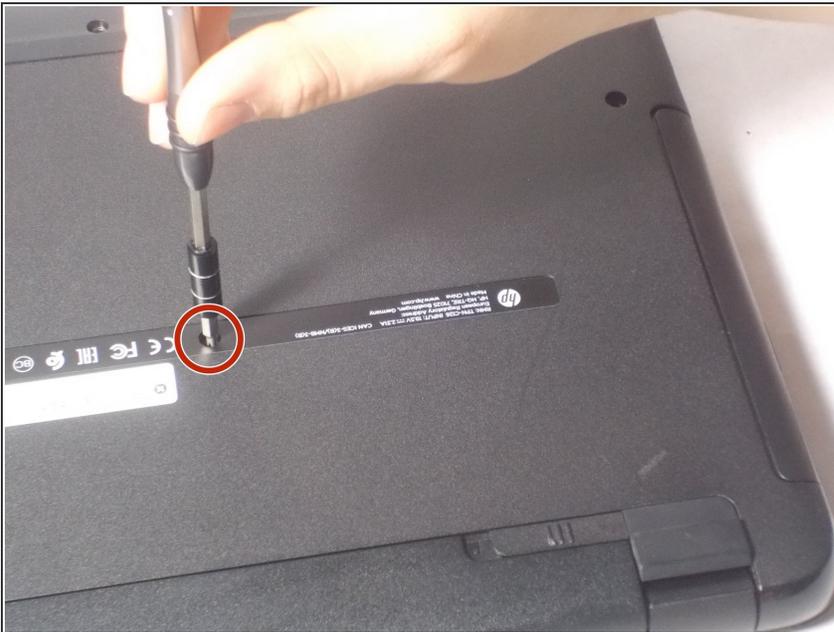


- Using the Phillips #0 screwdriver, remove the 7.5mm screw from the underside of the plastic frame that holds the disc tray in place.

### Step 3



- Remove the disk tray assembly by sliding it out from the side using the blue plastic opening tool.

### Step 4 — Back Panel

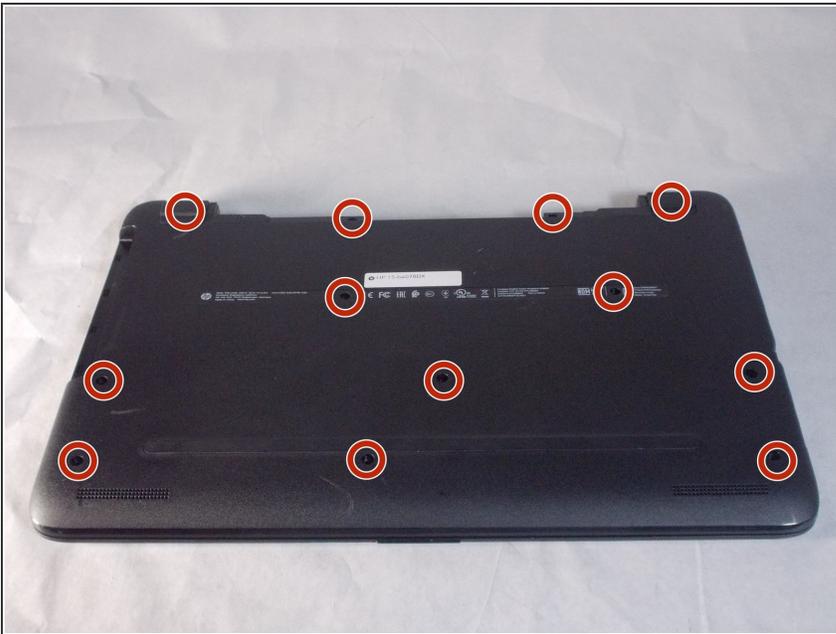

- Remove all of the remaining back panel screws with a #0 Phillips head screwdriver.
- ⓘ Remember to remove the two screws under the rubber feet.

## Step 5




- Carefully use the blue plastic opening tool to pry the clam shell of the laptop apart.
- ⓘ You may need to flip the laptop over to unlatch all of the internal clips.

## Step 6




- Carefully pull the shell of the computer apart.

## Step 7 — RAM

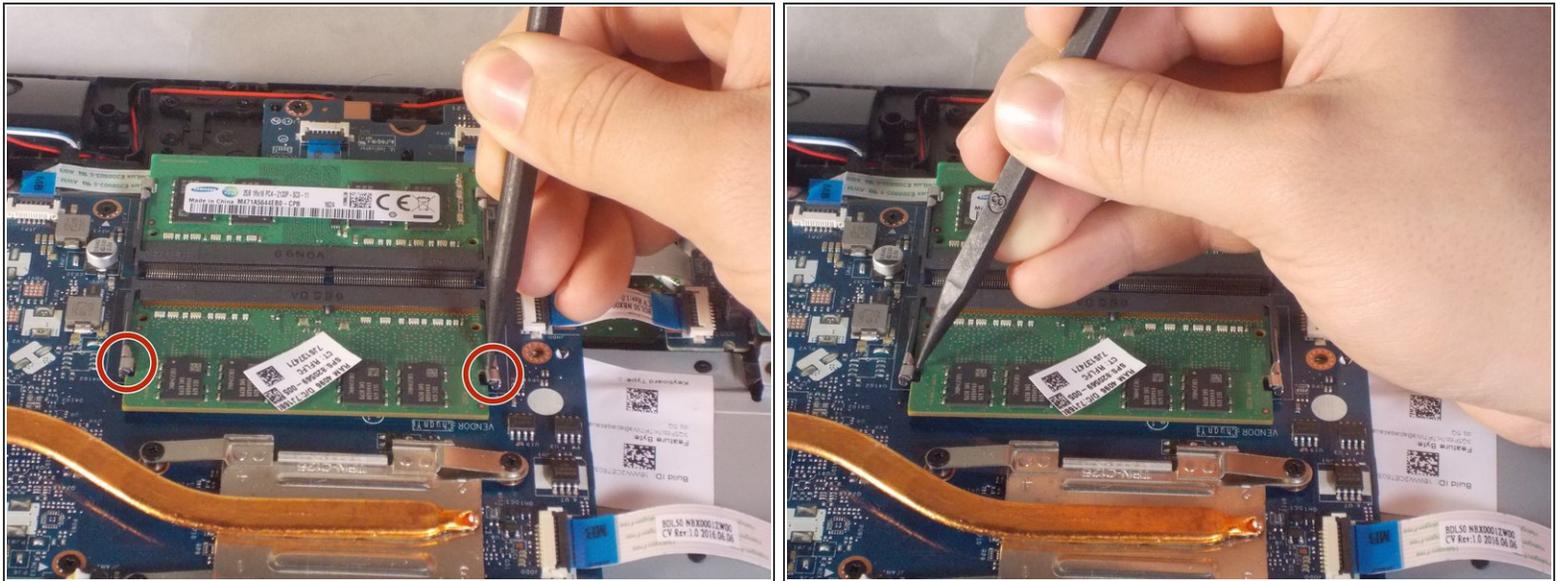

- Using a plastic spudger, unclip the latch locking the RAM to the motherboard.

## Step 8

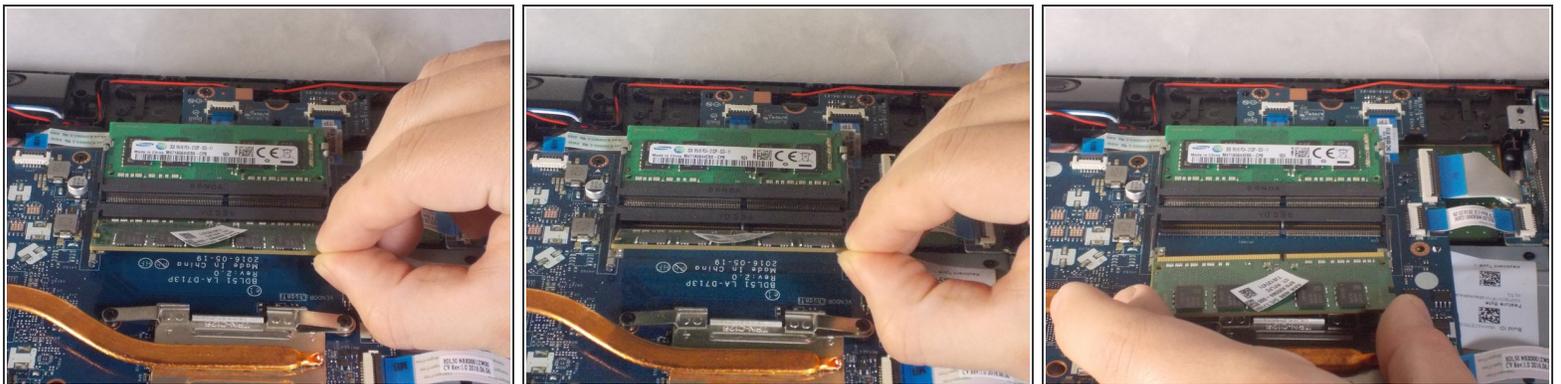

- Gently tilt the RAM sticks up and slide out each stick.

To reassemble your device, follow these instructions in reverse order.