



# HP Envy dv6-7363cl Fan Replacement

Reader will be able to successfully replace...

Written By: dylananthony



## INTRODUCTION

Reader will be able to successfully replace their fan assembly in the device. A basic understanding of simple tools such as a screwdriver is needed. Any form of electricity must be removed from device, including the charging cable and battery. Reader will need to be able to gently disassemble almost entire laptop.

---

### TOOLS:

[Spudger](#) (1)  
[Phillips #0 Screwdriver](#) (1)

### PARTS:

[HP Pavilion DV6000 Fan](#) (1)

---

## Step 1 — Battery



- Flip the device upside-down so that its bottom is facing up.

## Step 2



- Push the lever underneath the battery to the left.

## Step 3



- Lift the battery up out of its socket.

## Step 4 — Fan




- Remove the circled screws from the back panel.

## Step 5




- Lift and remove the back panel of the device.

## Step 6

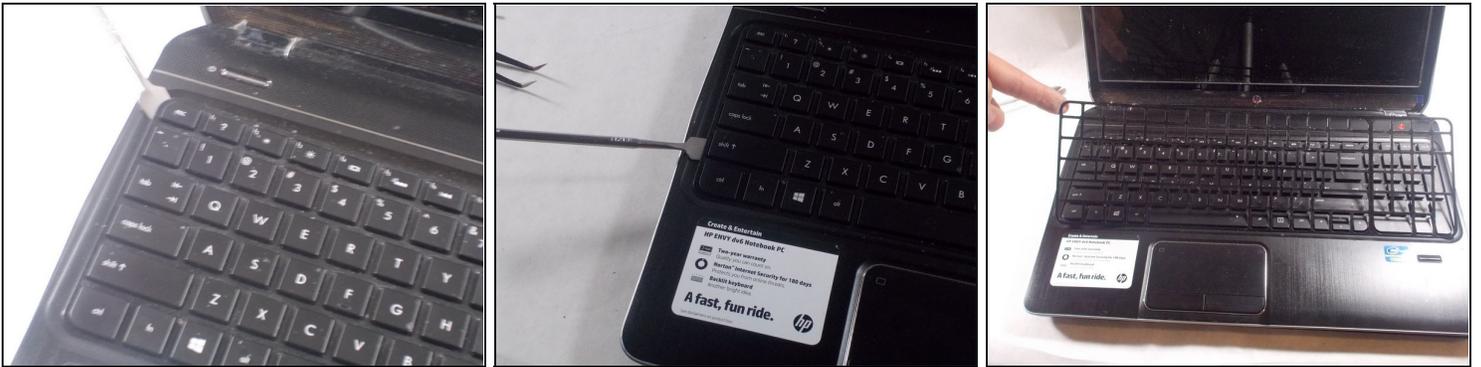

- Flip the laptop back over and carefully pry the keyboard frame out of the device.

## Step 7

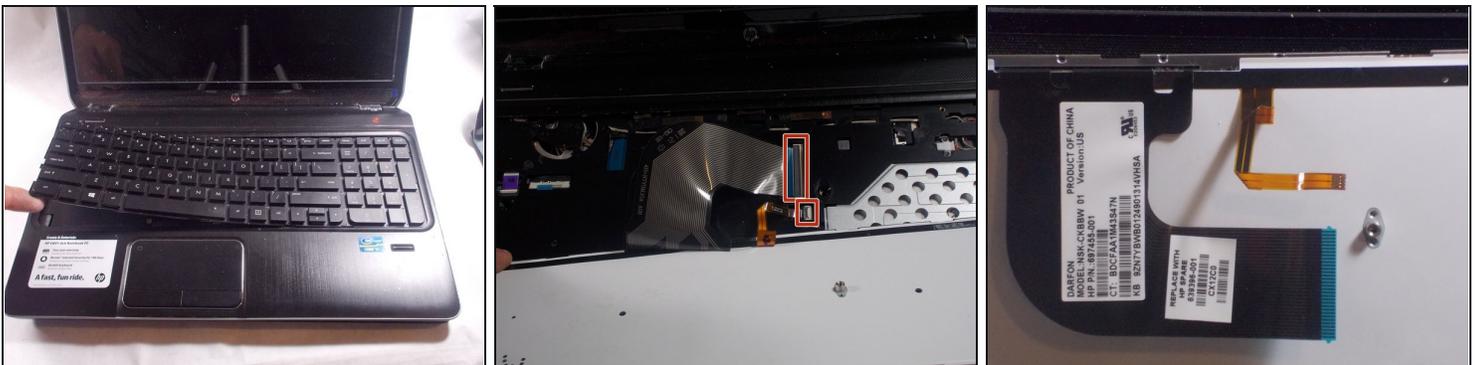


- Lift the keyboard out of the device
- Carefully remove ribbon cables.

## Step 8




- Flip device onto its back
- Remove disk tray and circled screw.

## Step 9

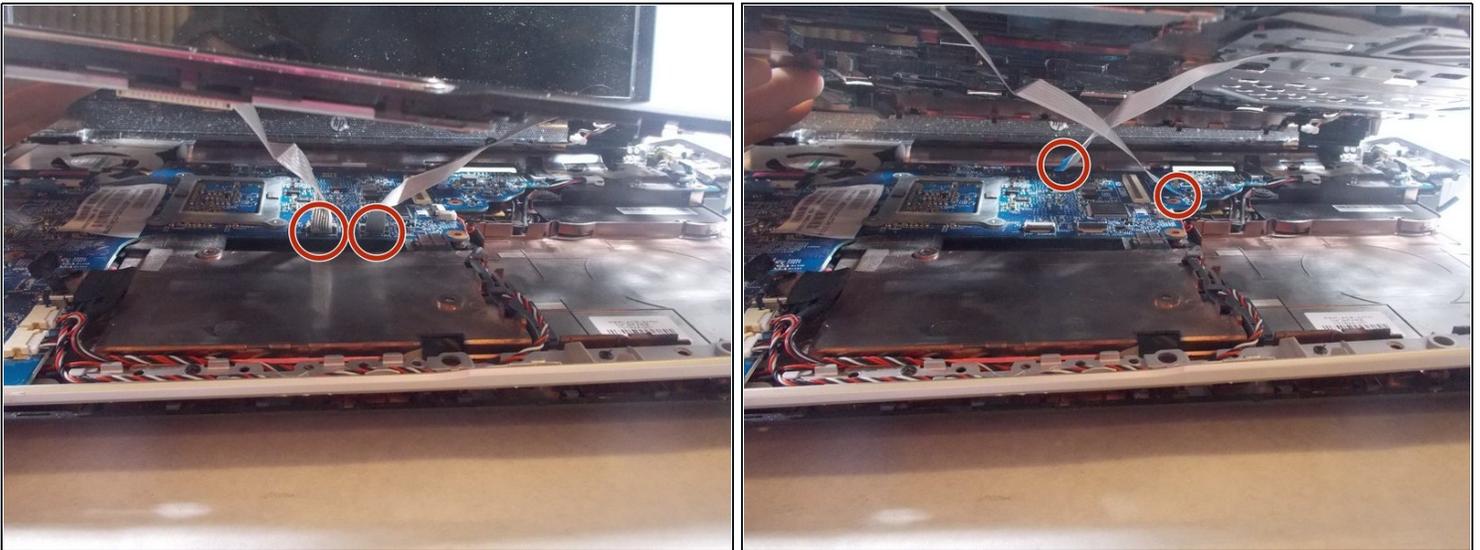

- Flip device right-side-up and remove ribbon cables from plastic cover beneath keyboard. Remove plastic cover from device.

## Step 10

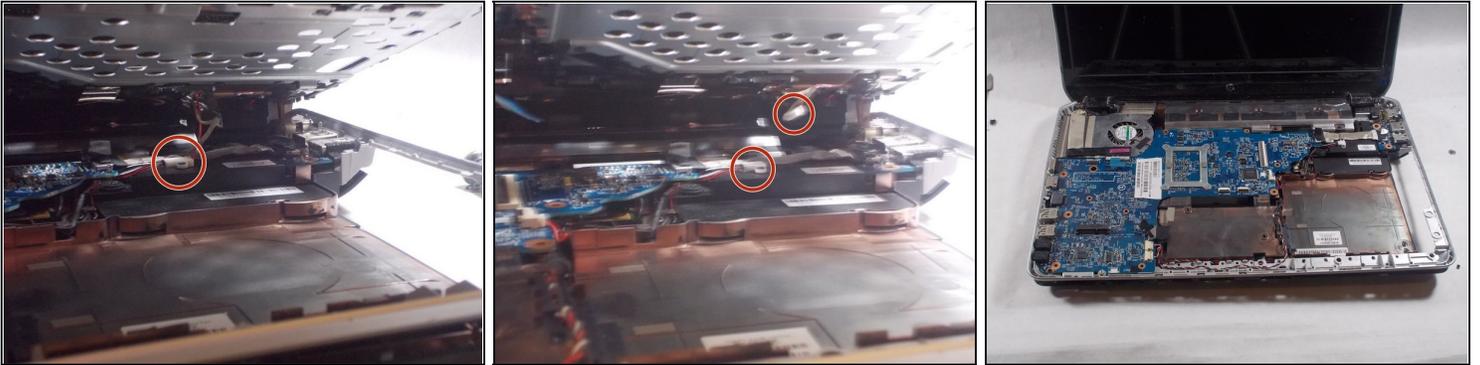

- Disconnect red cord from DVD drive and remove DVD drive.

## Step 11




- Remove circled screws.

## Step 12




- Disconnect red and white cords from blue circuit board.

## Step 13

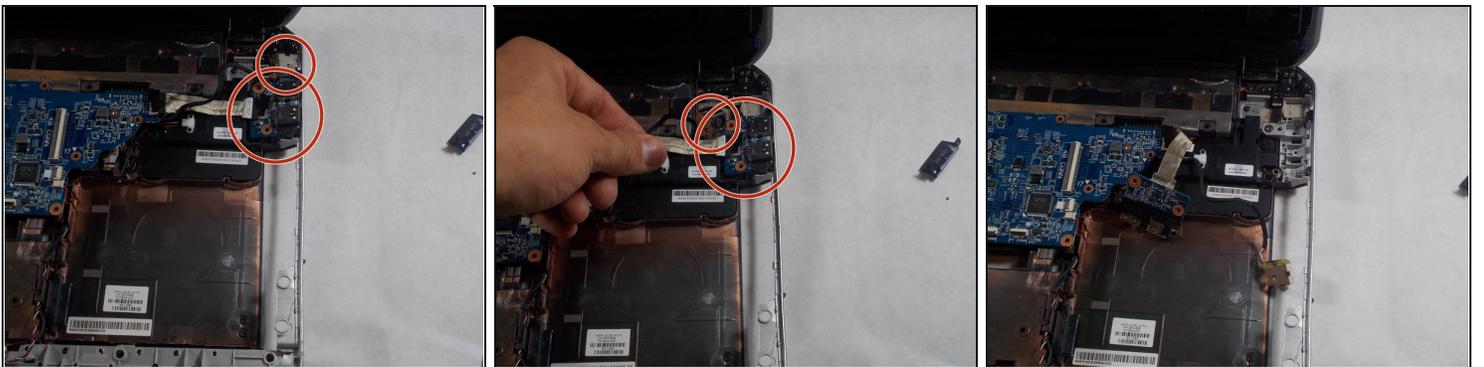


- Gently pull circled pieces from their holsters.

## Step 14

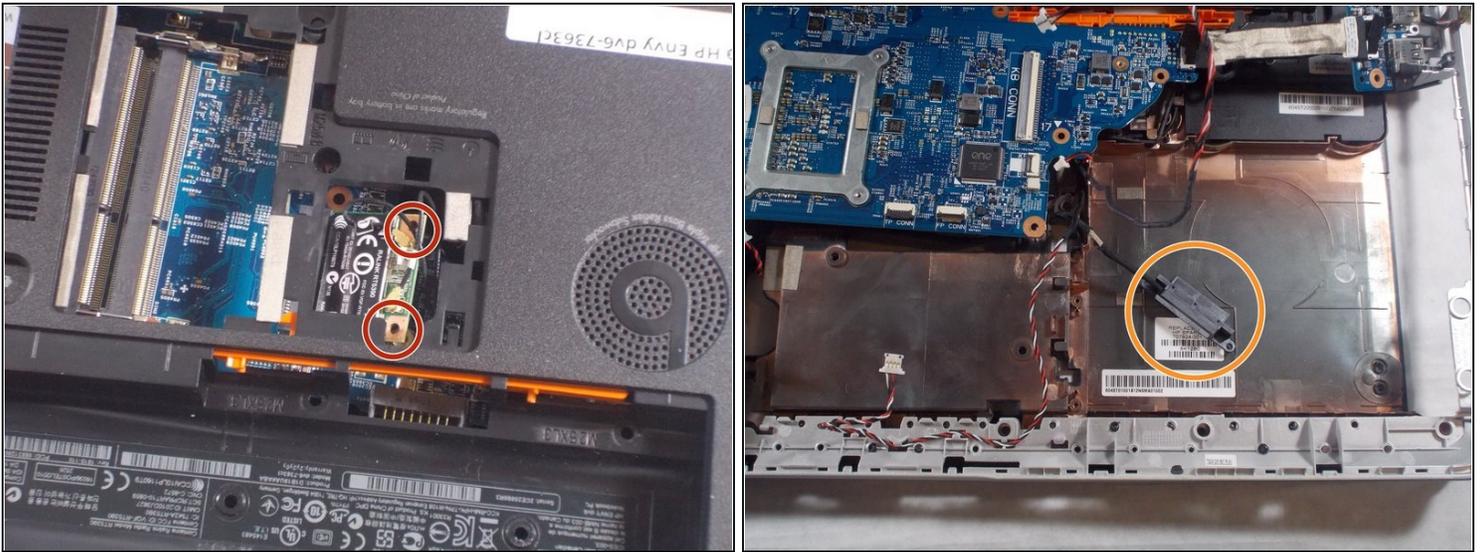

- Turn device onto its back and remove circled screws from Wi-Fi card.
- Flip device back over and unscrew disk reader

## Step 15

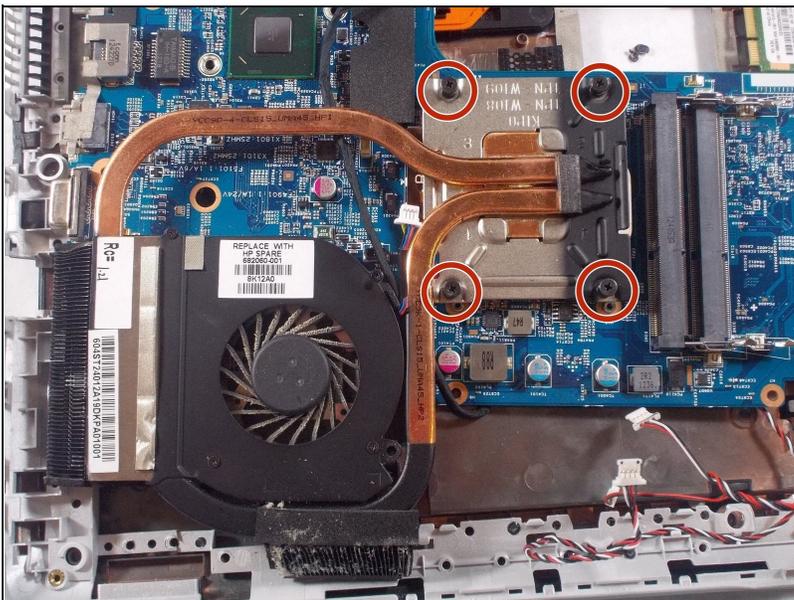

- Remove circled screws from blue circuit board and lift fan assembly out of device.

To reassemble your device, follow these instructions in reverse order.