



# Gateway P-6831FX RAM Replacement

The RAM is a component that will act as a quick storage for your device. This guide will go over how to remove and replace the RAM for the P-6831FX.

Written By: Chandler Jardin



---

## INTRODUCTION


The RAM is a component that will act as a quick storage for your device. This guide will go over how to remove and replace the RAM for the P-6831FX.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — RAM

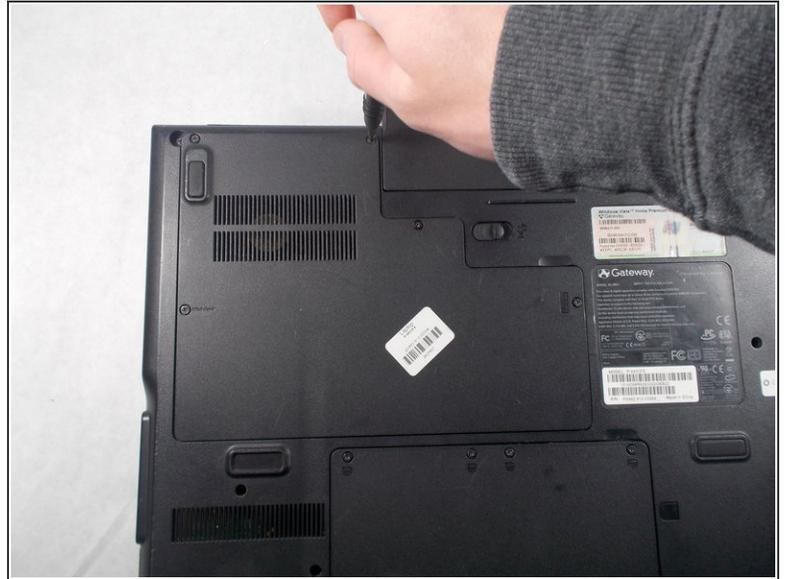

- Turn your laptop upside down and remove the five Philips #0 (5mm) screws for the cover of the RAM.
- ⚠ Make sure to unplug your laptop charger, as removing the RAM while the device is charging may damage the RAM and or the charger.

## Step 2



- Gently pull the cover away from the device.
- Set the cover aside for now, until reassembly.

## Step 3



- Pull the metal tabs and lift the first RAM stick out of the socket.

## Step 4



- Repeat Step 3 to remove the second RAM stick.

To reassemble your device, follow these instructions in reverse order.