




Lenovo ThinkPad X61 RAM Replacement

Use this guide to help you replace the RAM in your ThinkPad.

Written By: Ryan McCarthy

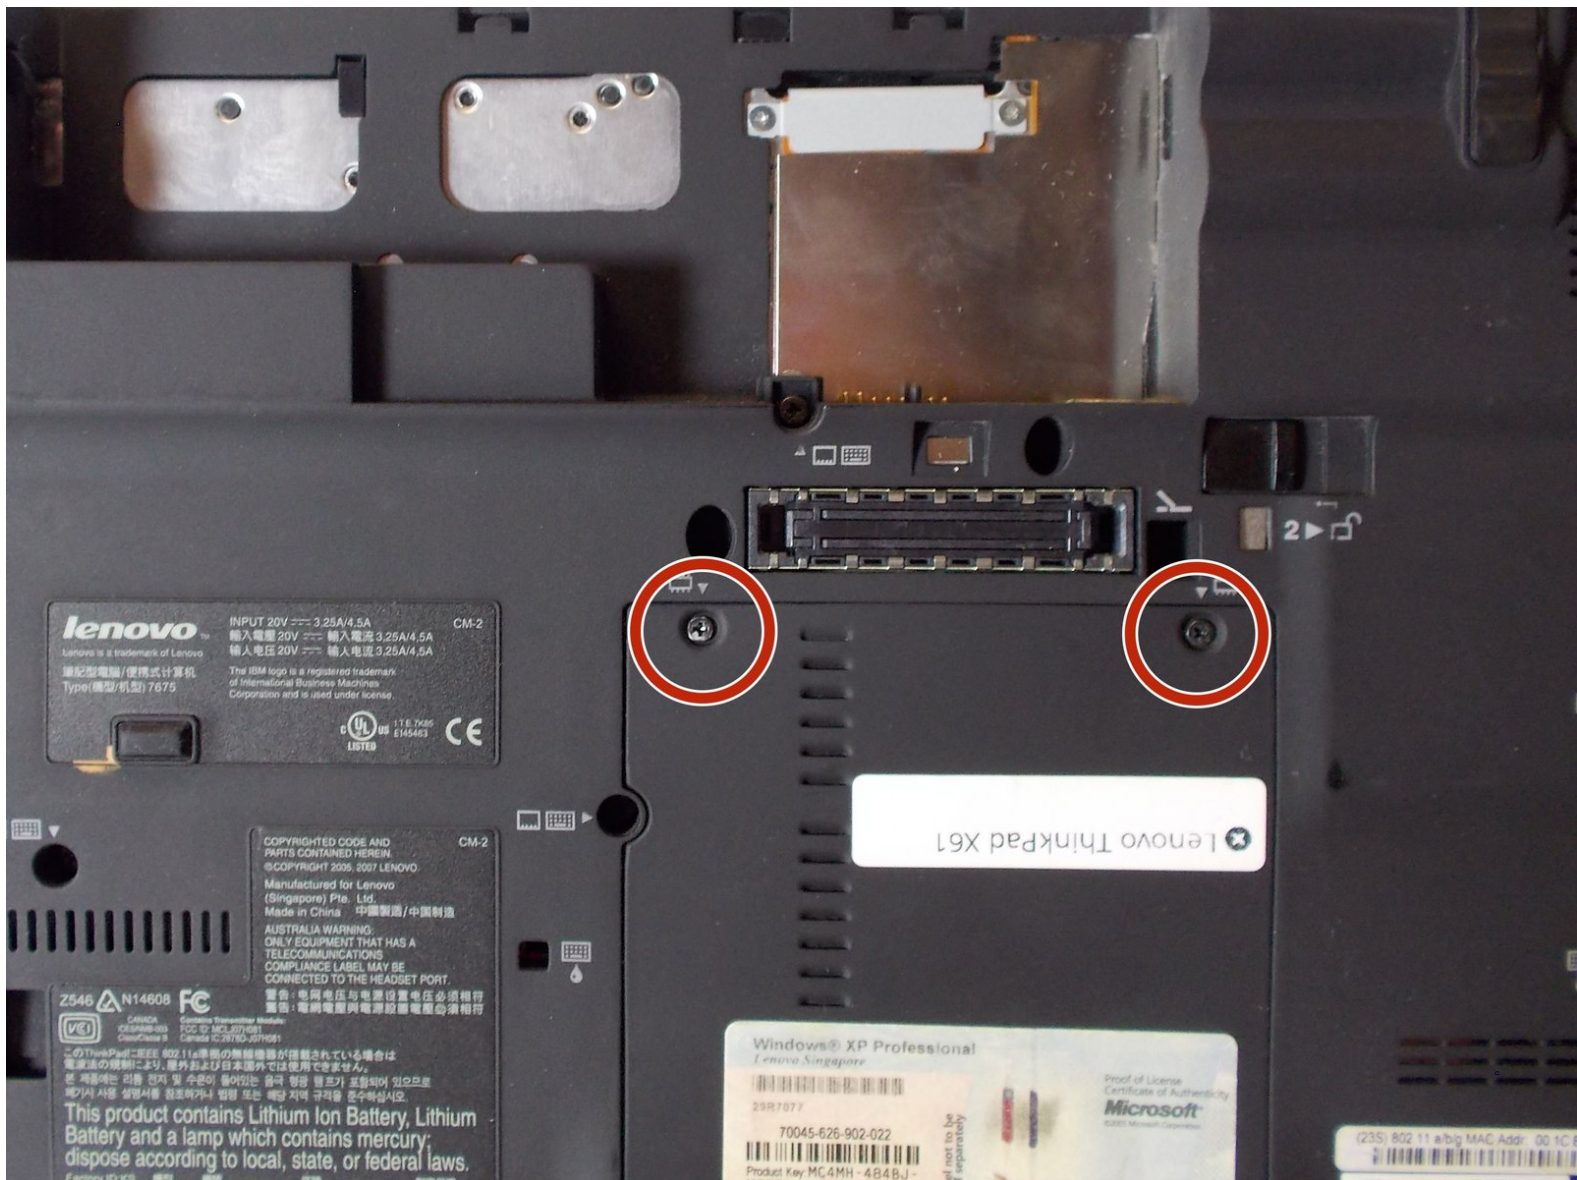




TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — RAM

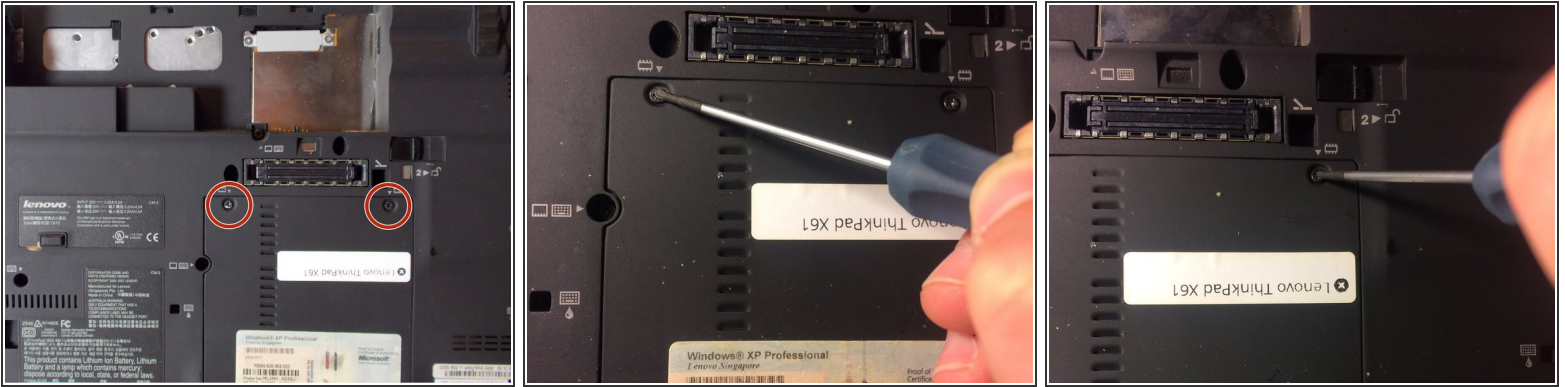


- First flip your device over so its bottom is facing up.
- Next, locate where the two Philip #00 screws are marked in the image, and unscrew them as shown.

Step 2

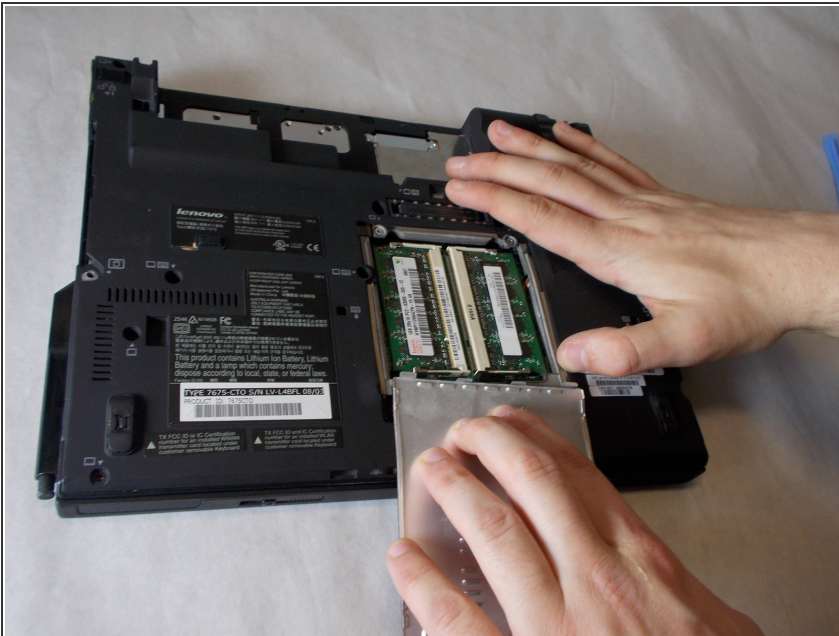

- Now with the loosened screws, you can easily pull back the metal compartment cover to get to where RAM is stored.

Step 3

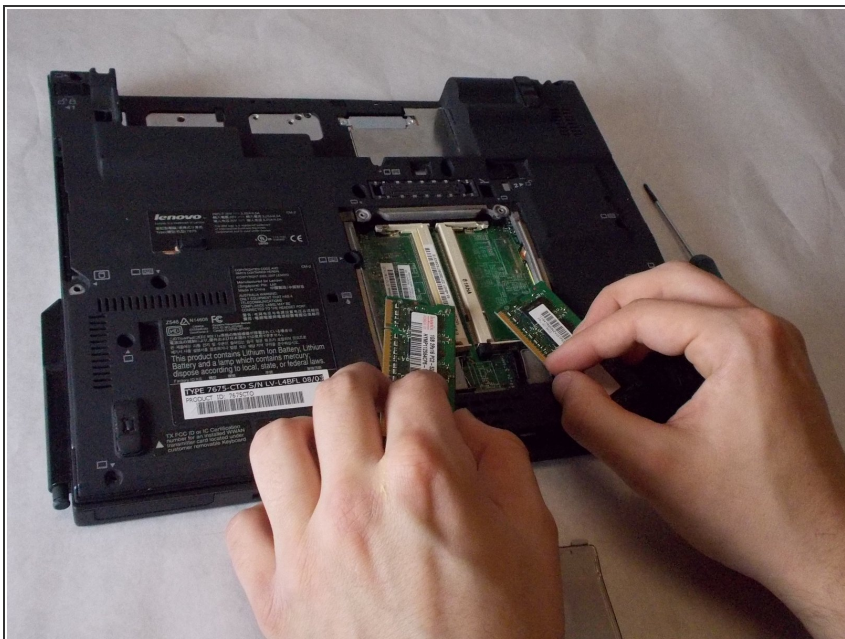

- After opening up the compartment, you simply pull out the two RAM units and replace them with the new RAM.

To reassemble your device, follow these instructions in reverse order.