



Acer Aspire 5740-5780 Keyboard Replacement

Guide to remove Keyboard from Acer Aspire 5740-5780.

Written By: Gian Farrell




INTRODUCTION

Use this guide to remove the keyboard from your device. You'll need a metal spudger and some prying power to complete the guide.

TOOLS:

- [Spudger](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Keyboard

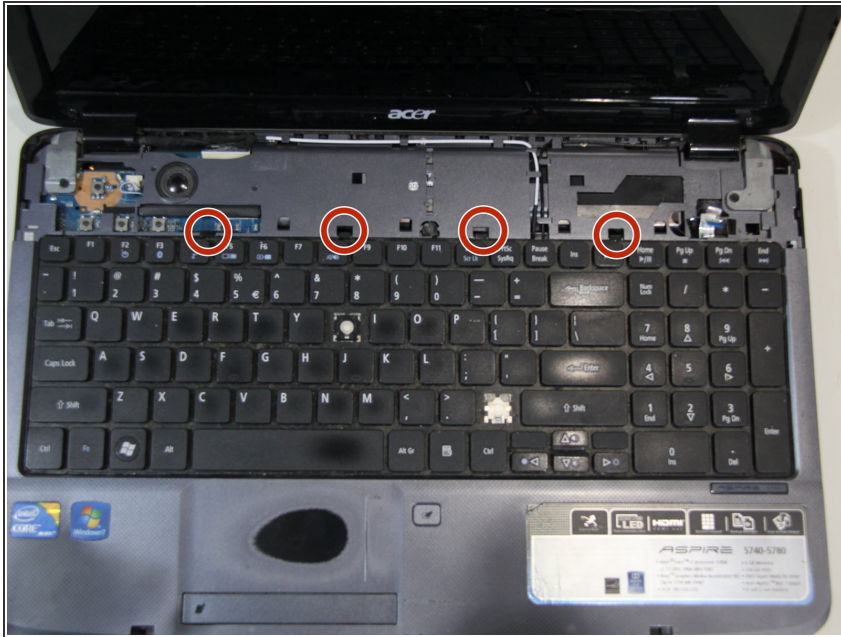


- These latches must be released in order for the keyboard to be removed.

Step 2



- Using a spudger, pry the keyboard from the PC, gently.
- Lift the keyboard and flip it over, so that it rests on its keys.

Step 3

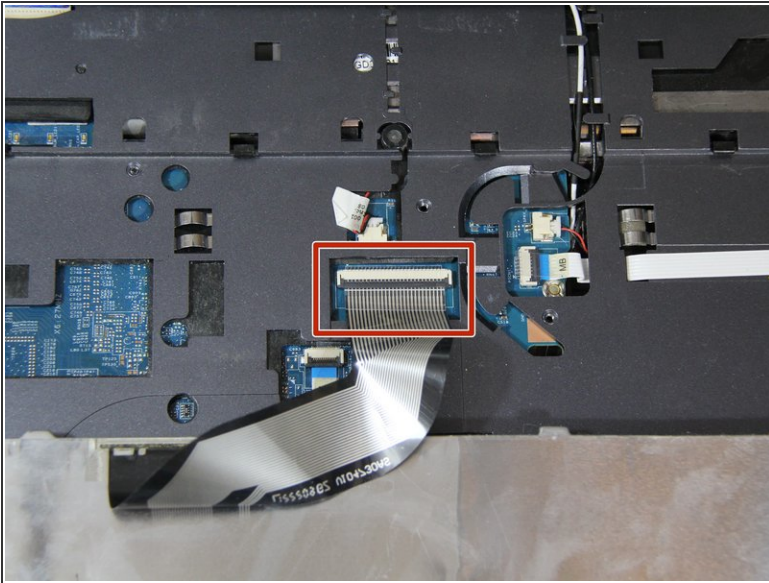

- Using your hands, open the latch holding the wire in place, and remove the keyboard.

To reassemble your device, follow these instructions in reverse order.