


# **Dell Studio 1735 Hard Drive Replacement**

Written By: Johnathan Hammond

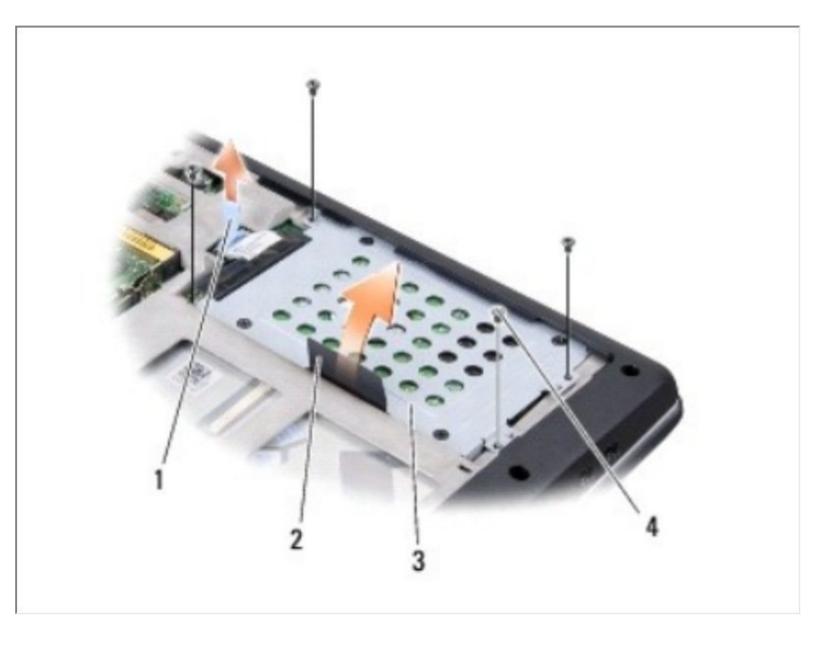


# **TOOLS:**

۶


• Phillips #0 Screwdriver (1)

### Step 1 — Battery

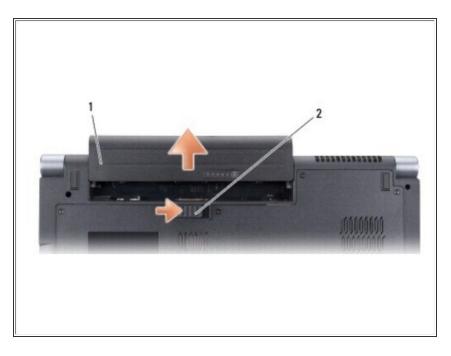


- Slide and click the battery latch release.
- Slide the battery out of the battery bay.

#### Step 2 — Base Cover

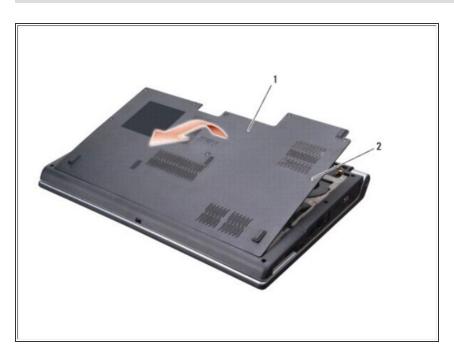


• Loosen the eight captive screws on the base cover and lift the cover off the computer at an angle as shown in the figure.

#### Step 3 — Hard Drive

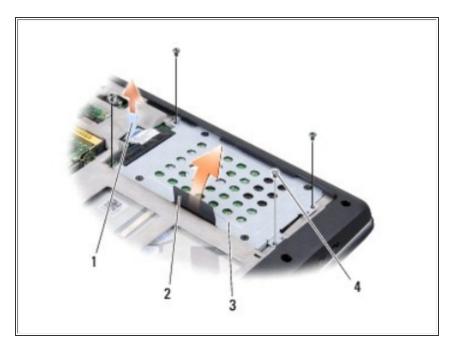

- Remove the four screws securing the hard drive assembly to the computer base.
- Pull the blue pull-tab on the cable attached to the system board to disconnect the cable.
- Pull the black pull-tab to lift the hard drive assembly out of the computer.

## Step 4

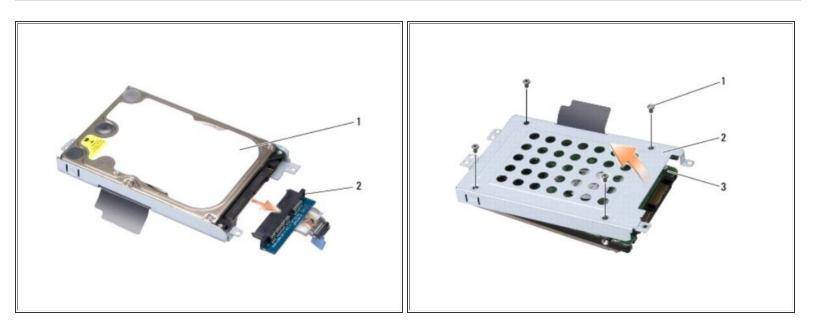

- Pull the interposer to detach it from the hard drive.
  - Remove the four M3 x 3-mm screws securing the hard drive cage to the hard drive.
    - Lift the hard drive cage off the hard drive.

To reassemble your device, follow these instructions in reverse order.