



Acer Aspire 6530-6522 Speaker Replacement

This guide will show you how to replace the speakers of your Acer Aspire 6530-6522 in case of damage or malfunction.

Written By: Patrick McKenna



INTRODUCTION

This guide will show you how to replace the speakers of your Acer Aspire 6530-6522 in case of damage or malfunction.

TOOLS:



- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Make sure the device is unplugged and completely powered down.
- Turn the device over.

Step 2

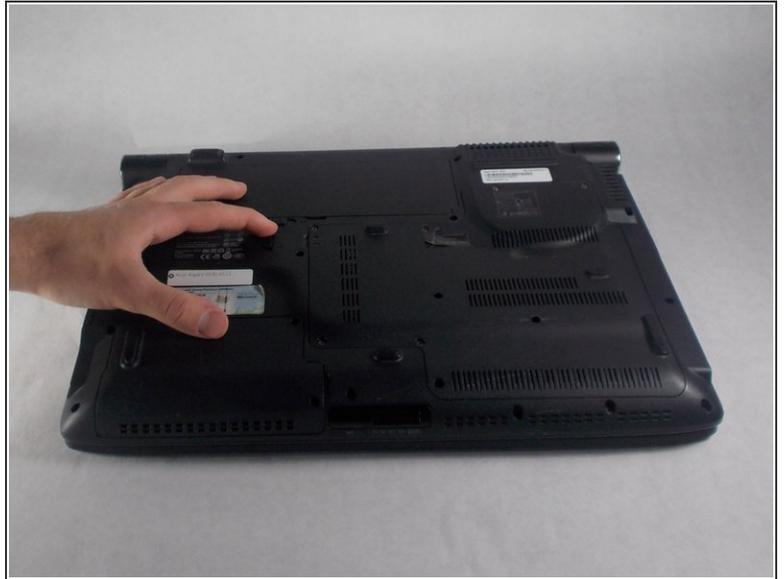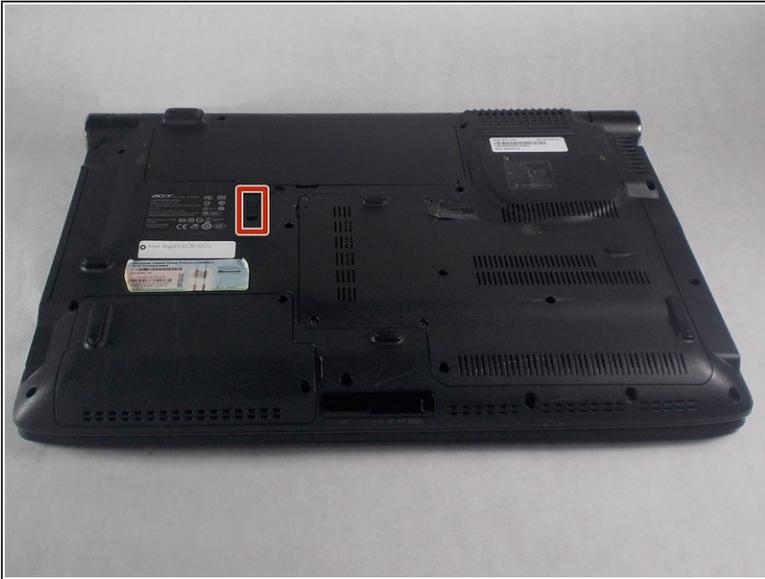

- The lock switch can slide either towards or away from the battery. If it is pushed towards the battery, the release switch is locked and the battery can not be released.
- Slide the switch away from the battery.

Step 3



- The battery release switch is just to the inside of the battery and slides parallel to it.
- Push the switch to the side. It is not just an open or close switch, it actually pops the battery up so you will feel some resistance.
- ☑ When inserting a battery back into the device, you do not need to touch this switch. Just press the battery firmly down, you will see and hear this switch catch.

Step 4




- Pull the battery up and out. Use a plastic opening tool if necessary.

Step 5 — Speakers





- Remove the three 3.5mm screws securing the subwoofer using the Phillips #1 screwdriver.
- Remove the two 4.5mm screws securing the speakers on either end.

Step 6

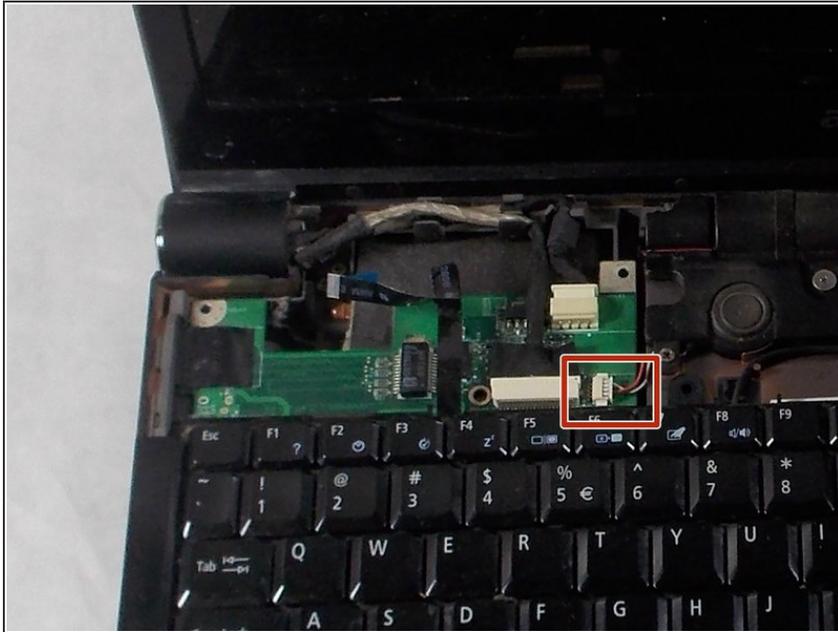



- Disconnect the speaker wire.

Step 7

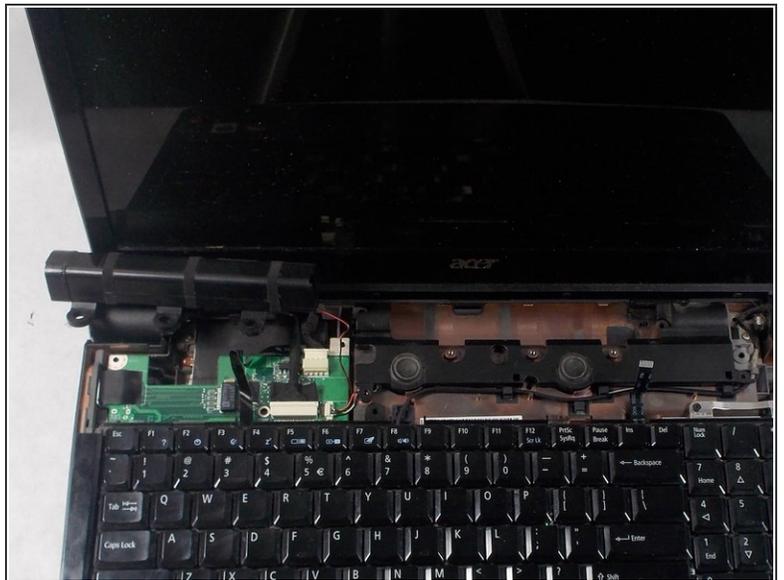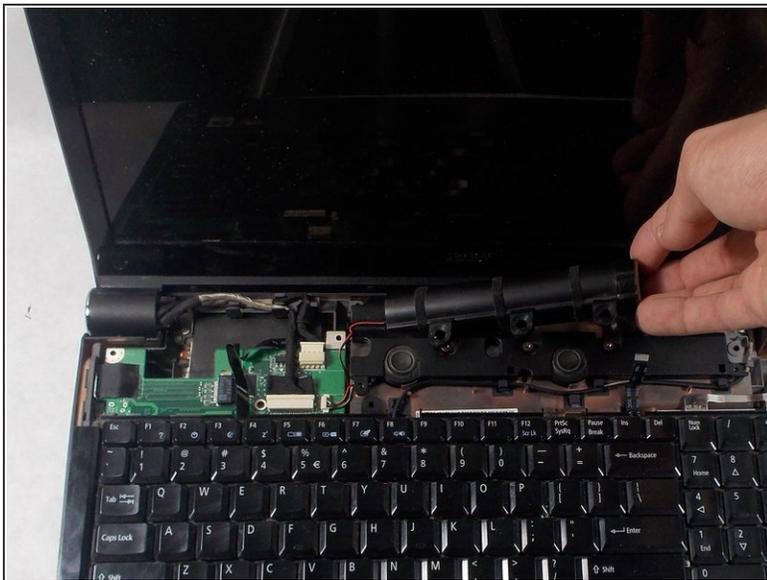

- Lift the subwoofer from the right side and turn it over to the left.
- ⓘ Do not try to pull it all the way out, it is still connected by cables.

Step 8

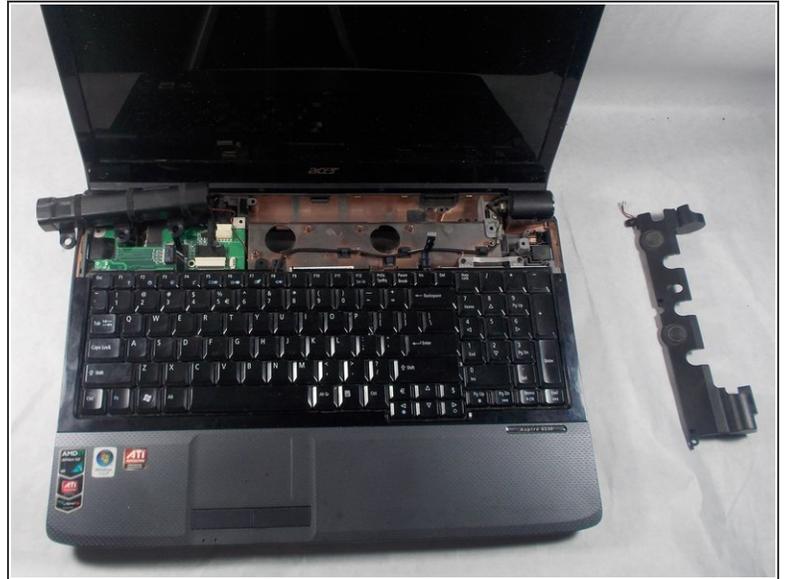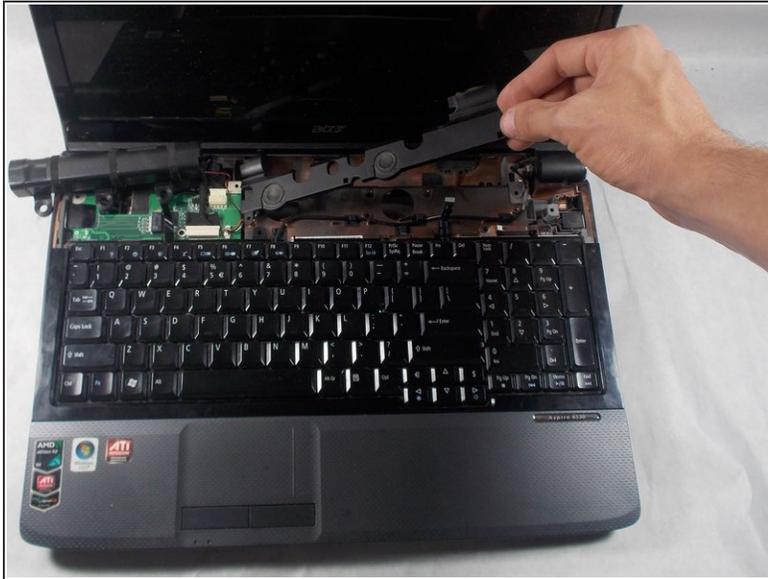

- Lift the speaker from the right side and remove from device.

To reassemble your device, follow these instructions in reverse order.