


Dell Inspiron N4110 Hard Drive Replacement

Does your hard drive appear to be failing or...

Written By: Abigail Keith

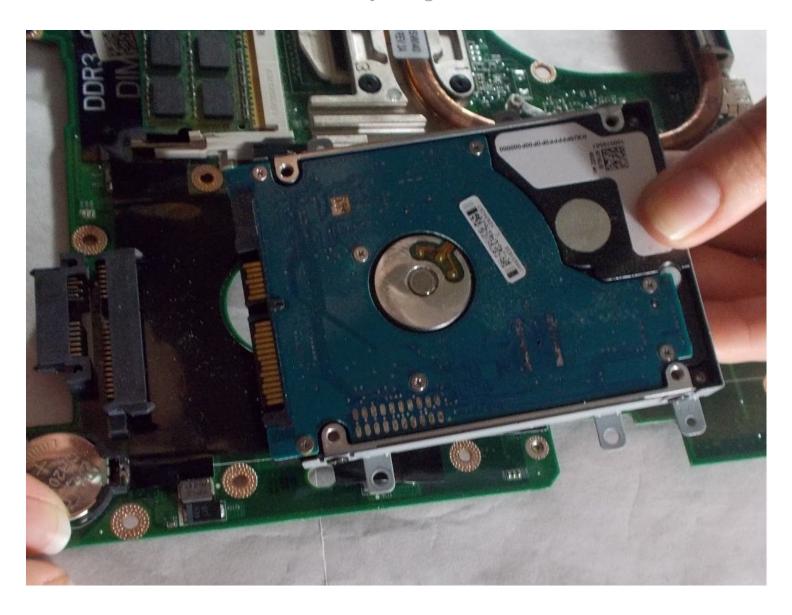

INTRODUCTION

Does your hard drive appear to be failing or need a replacement? This guide will help you replace the hard drive in several simple steps.

TOOLS:

Phillips #1 Screwdriver (1) iFixit Opening Tool (1)

PARTS:

Crucial MX500 1 TB SSD (1) Crucial MX500 250 GB SSD (1) Crucial MX500 500 GB SSD (1) 2 TB SSD (1)

Step 1 — Battery



- ⚠ Make sure the laptop is off and unplugged before starting this step.
- Locate the battery on the underside of the laptop.
- Push the two battery clips following the direction of the arrows.



• Push upward from the base of the battery.

Step 3



 Pull battery away from computer until it is fully removed.

Step 4 — Fan






• Remove the 10 2.5x5 mm screws from the base of the laptop.



- Unscrew the final 2.5x5 mm screw attached to the cover.
- i This screw is "captive" and does not detach from the cover. Make sure the screw is fully unscrewed before attempting to remove the cover.

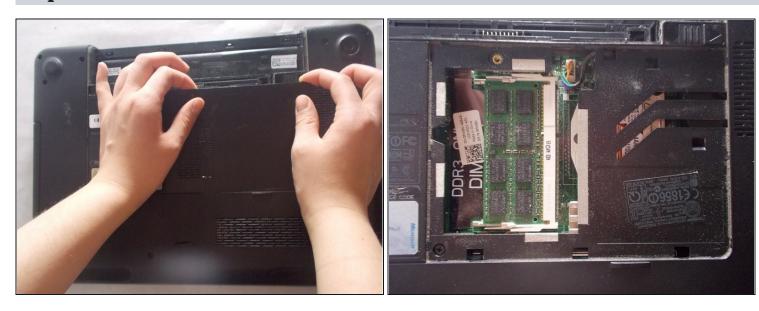


• Remove the cover from the laptop.

Step 7



• Unscrew the 2.5x5 mm screw inside the RAM compartment.



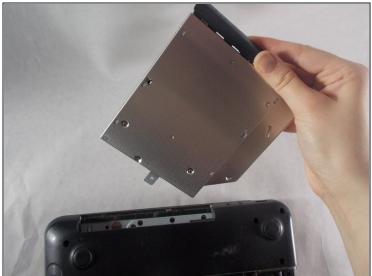

- Remove the disk drive from the side of the computer.
- (i) There is no need to press the button, the drive will come out.

Step 9





Unscrew the two 2x3 mm screws inside the disk drive compartment.







- Flip the computer over, and open the laptop.
- Use a plastic opening tool to begin to remove the keyboard.
- Use your hands to finish separating the keyboard from the laptop.
- (i) This can be a bit challenging, but it will come loose.



- Lift the black clip from the tan connection for the keyboard.
- Pull the the connection away from the clip.
- Move the keyboard away from the laptop.
- i With the keyboard removed, consider this opportunity to more freely clean it out with some compressed air.



- Lift the black clips from the tan connections for all 3 locations marked.
- Remove the connections from the clips.

Step 13



 Unscrew the five 2.5x5 mm screws.



- Use plastic opening tools to remove base cover.
- Use your hands to fully remove cover from the base.
- *i* This may be difficult, but it is possible.



- Disconnect the two cables that connect the speaker and the fan.
- *i* These can just be pulled out, they do not have clips.



- Disconnect the ribbon cable over the screw to reveal it. Flip up the latch and pull gently on the ribbon to remove it from the connector.
- Unscrew the 2.5x5 mm screw from the fan.

Step 17





Pull up and remove the fan from the laptop.

Step 18 — Motherboard



- Unscrew the six 2.5x5mm screws from the motherboard.
- Note that this screw may be "retained" by the loop at the end of the grounding wire.

Step 19



• Disconnect the black and yellow cable from the motherboard.



- Begin to separate the motherboard from the laptop
- i Pull up to separate from the other internal pieces, and then pull to the right away from the case




- Remove the final cable from the motherboard
- i This will allow the motherboard to fully come out of the computer
- ⚠ When reinstalling motherboard, ensure the two connectors are precisely aligned with the daughterboard below. If slightly misaligned, you may bend the pins on the daughterboard connector.

Step 22 — Hard Drive





Unscrew the one 2x3 mm screw.

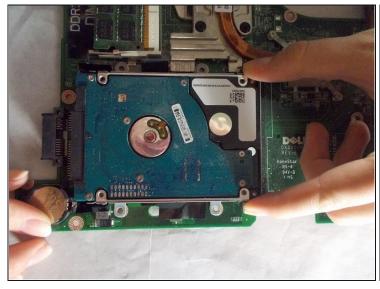



- Use your hands to carefully pry out the hard drive.
- ② Since this location is difficult to access, and the laptop is already disassembled, consider using this opportunity to install a fresh CMOS battery and blow the dust out of the heat exchanger radiator.

