



Asus Vivobook Max X541SA-PD0703X Hard Drive Replacement

This guide will provide instructions on how to access the interior parts of the Asus Vivobook Max X541SA-PD0703X and replace the hard drive.

Written By: Mayar Eskandarani



INTRODUCTION

A hard drive is an essential part of the laptop which is needed in order to store data. This guide will show you how to replace the battery of your Asus Vivobook Max X541SA-PD0703X.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)
- [Tweezers](#) (1)

PARTS:

- [250 GB SSD](#) (1)
- [500 GB SSD](#) (1)
- [1 TB SSD](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Hard Drive



- Flip the laptop upside down so that the back of the laptop faces you.

Step 2



- Remove the following ten Phillips #0 screws from the bottom of the laptop:
 - Six 13mm screws.
 - Four 11mm screws.

Step 3




- Using a plastic opening tool, pry up the palm rest from the bottom case of the laptop.
- ⓘ Don't completely remove as there are ribbon cables connecting the two halves.

Step 4





- Use a spudger to flip up the retaining flaps on both keyboard ribbon cable [ZIF](#) sockets.
- Pull the ribbon cables out of their sockets.

Step 5

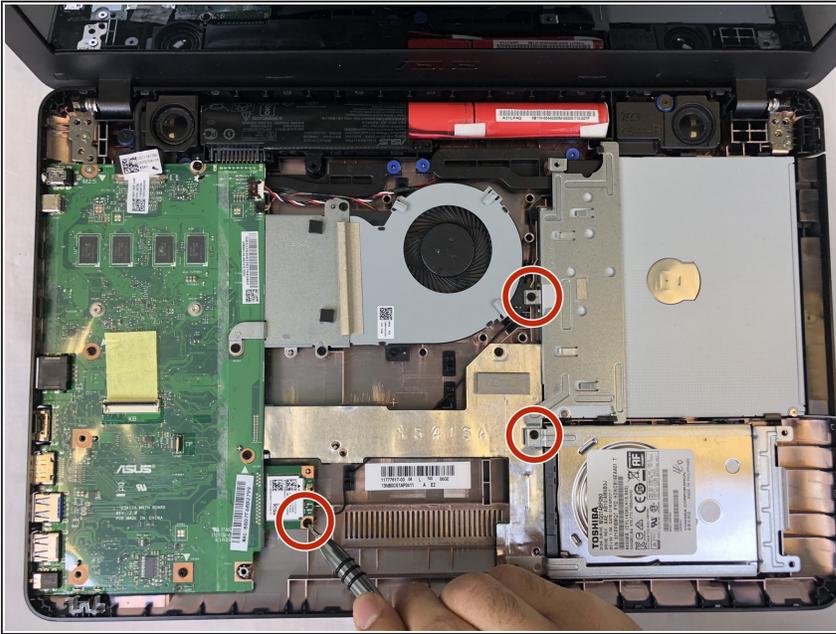


- Remove the three 6mm Phillips #0 screws from the motherboard.

Step 6

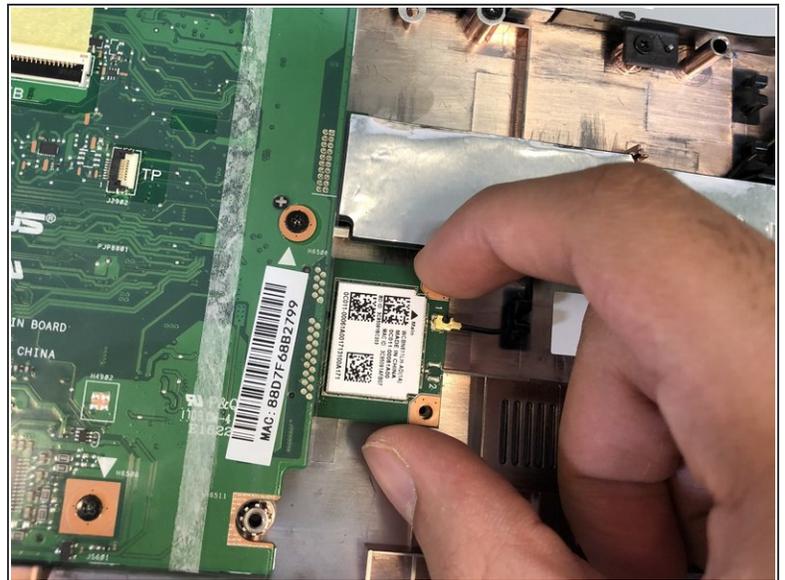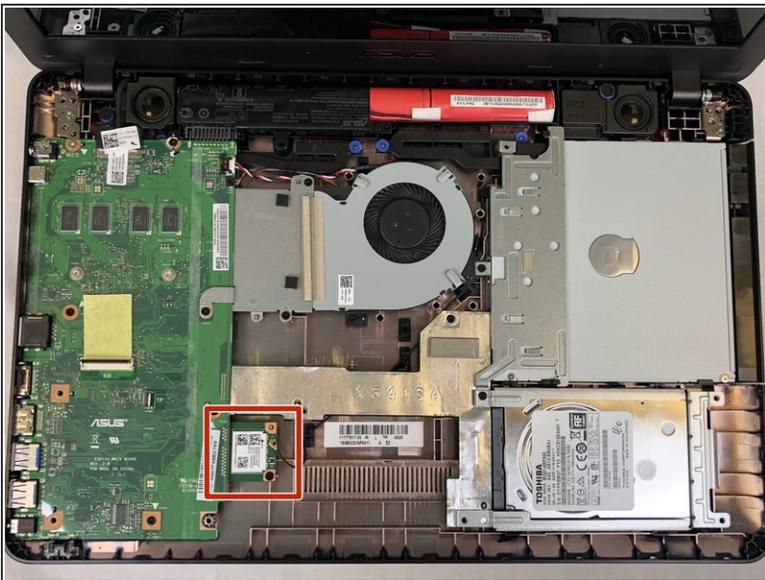

- Pull the Wi-Fi card out of the motherboard.

Step 7

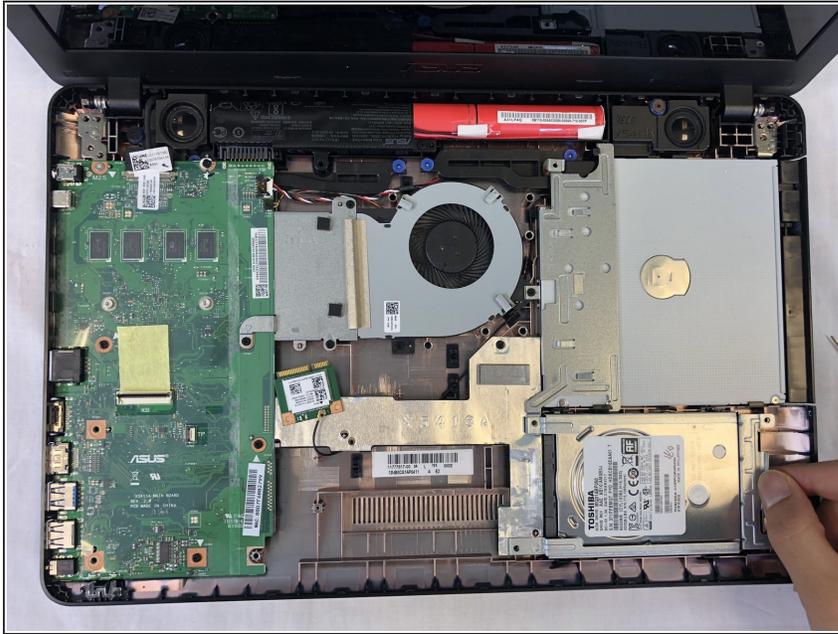

- Remove the hard drive by pulling it towards the right, and removing it from the laptop case

To reassemble your device, follow these instructions in reverse order.