





HP 15-R263DX Battery Replacement

This guide will instruct how to eject the battery from the HP 15 laptop.

Written By: Dilan Johnson

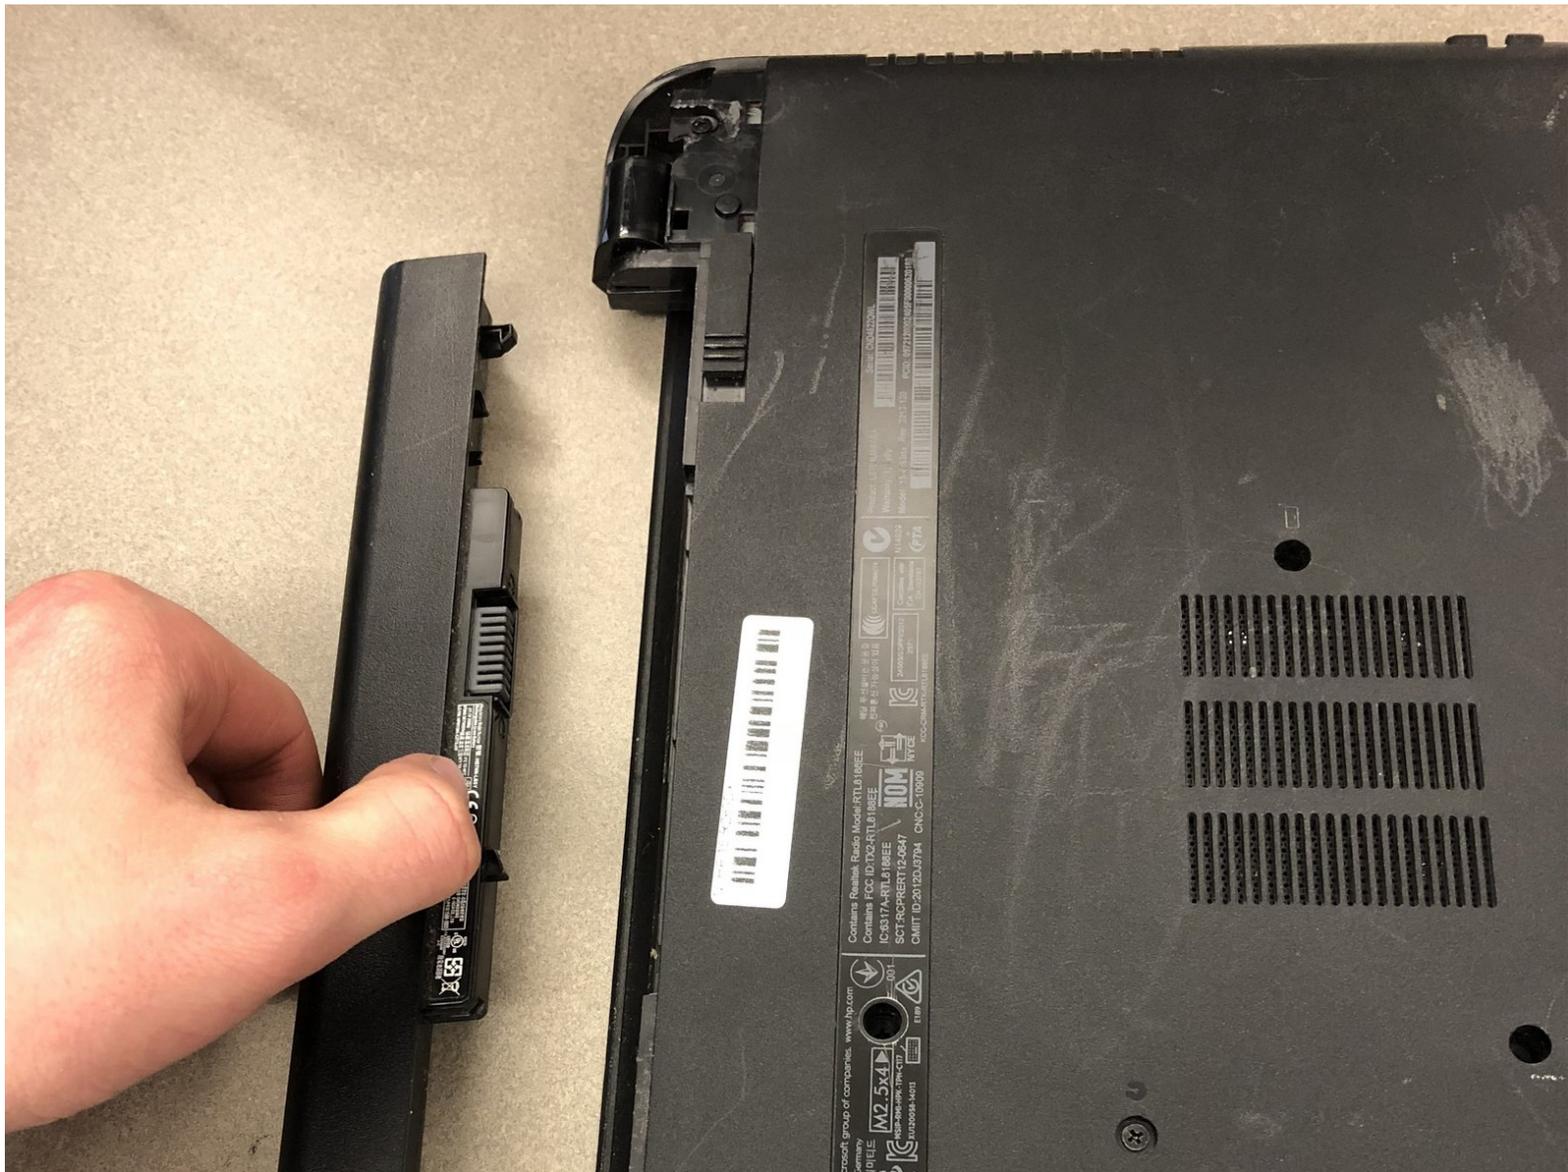

Step 1 — Battery

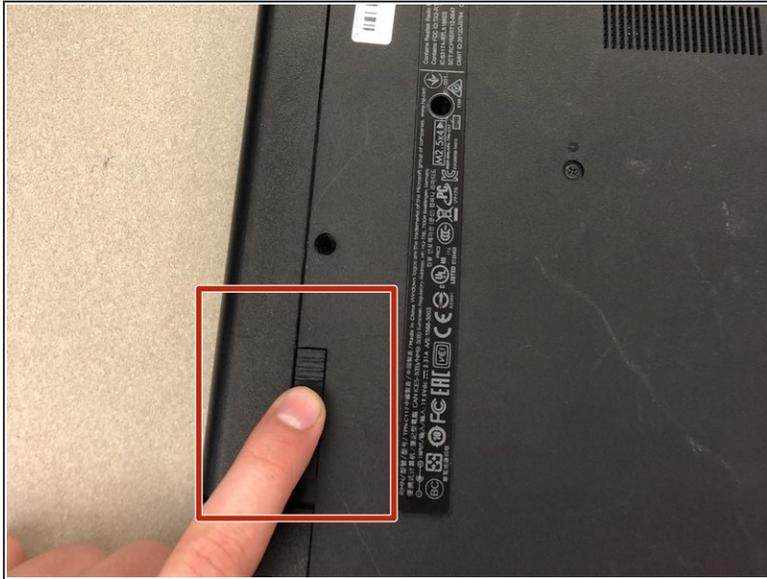

- Eject the battery from the computer by sliding the two clips on the bottom of the computer toward the center of the computer.
- Slide the battery out as shown in the picture.

To reassemble your device, follow these instructions in reverse order.