



Dell Precision M6400 KeyBoard Replacement

Written By: Johnathan Hammond

 




TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

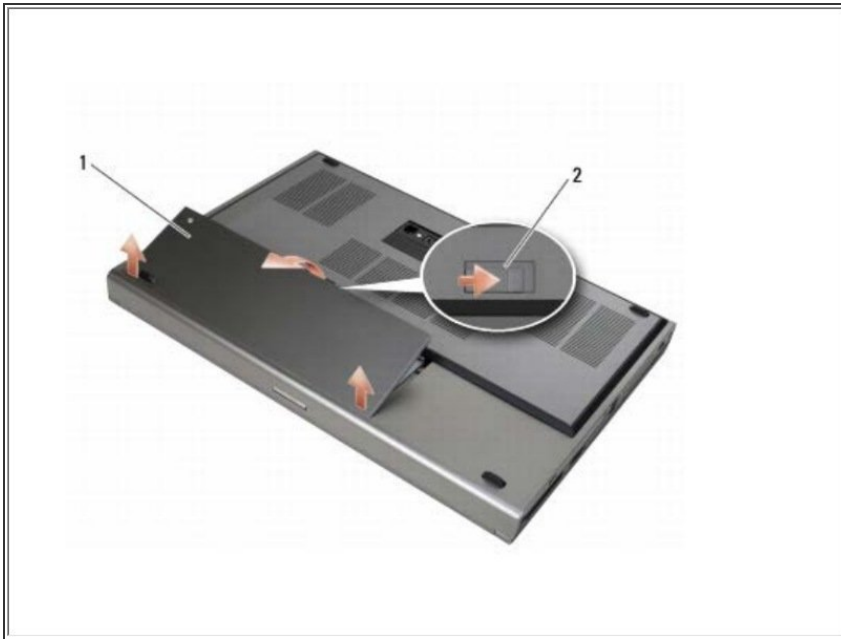

- Slide the battery release latch and remove the battery.

 Step 2 — Base Cover

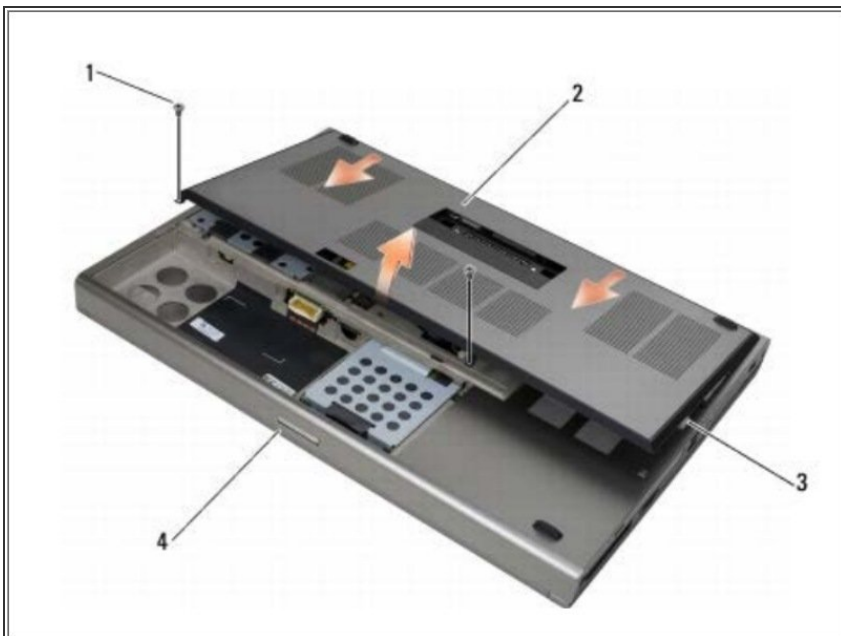

- Remove the two M2 x 3-mm screws.
- Slide the cover toward the front of the computer to release the tabs from the base assembly.
- Remove the cover from the base assembly.

Step 3 — LED Cover



- Starting on the left, gently lift the LED cover and disconnect the power cable and the biometer cable if present.

Step 4 — KeyBoard



- Remove the four M2 x 3-mm screws along the top of the keyboard.
- ⓘ NOTICE: The key caps on the keyboard are fragile, easily dislodged, and time- consuming to replace. Exercise care when removing and handling the keyboard.
- Use the metal pull tabs to gently slide the keyboard toward the back of the computer to disconnect the keyboard.

To reassemble your device, follow these instructions in reverse order.