



HP 17-x116dx RAM Replacement

This guide will replace the RAM on the HP 17-x116dx.

Written By: Sarah Coral



INTRODUCTION

The RAM is essential to access and retrieve memory on a device. A faulty RAM might cause problems while using your computer. This guide will show you how to replace the RAM.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — RAM



☒ Turn off your computer before starting, and remove the battery.

- Locate all 8mm screws on the back of the computer and remove them with the Phillips #1 screwdriver.

Step 2



- Remove the optical drive by pushing it in and then it will pop out.

Step 3



- Use a spudger to remove the back panel.

Step 4



- Once you remove the back panel, locate the RAM.
- Use your fingernails to release the clips holding the memory by pulling them away from the RAM.

Step 5



- The RAM will pop out, and you can remove it.

To reassemble your device, follow these instructions in reverse order.