

Dell Precision M4500 Hard Drive Replacement

Written By: Johnathan Hammond





Phillips #0 Screwdriver (1)

Step 1 — Battery



- Slide the battery release latches to the unlock position.
 - Slide and remove the battery from the computer

Step 2 — Base Cover



- Loosen the captive screw that secures the access panel to the base of the computer.
 - Slide the access panel towards the front of the computer.
 - Lift the access panel up and away from the computer.

Step 3 — Hard Drive



- Remove the screws that secure the h ard drive to the computer.
- Slide the hard drive out of the computer.
 - Remove the screw that secures the face plate to the hard drive.
 - Pull out the face plate to remove it from the hard drive.

To reassemble your device, follow these instructions in reverse order.