



ZTE Z667T SIM Card Replacement

Guide on how to replace the SIM card.

Written By: Paul Torres



INTRODUCTION

This guide shows you how to replace the SIM card in the ZTE Z667T.

Step 1 — SIM Card



- Gently insert your fingernail into the bottom left crevice of the back cover and lift it up.

Step 2



- Remove the battery by inserting your fingernail at the top of the battery and lift up.

Step 3



- Press the small black tab and insert the micro SIM card with the metal contact facing downwards.

To reassemble your device, follow these instructions in reverse order.