



ZTE Z667T Speaker Replacement

Speaker replacement guide for ZTE Z667T.

Written By: Michael Lidbetter



INTRODUCTION

 
This guide shows how to replace the speaker for ZTE Z667T.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Speaker

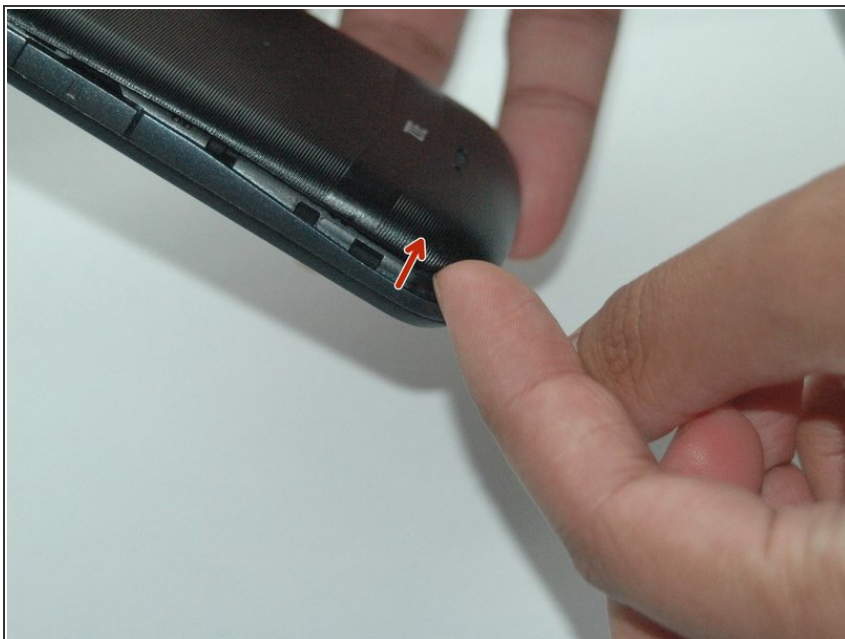

- Gently insert your fingernail into the bottom left crevice of the back cover and lift up.

Step 2



- Remove the battery by inserting your fingernail at the top of the battery and lift up.

Step 3



 
- Using a Phillips #000 screwdriver, remove the five screws located on the back case.

Step 4



- Gently pry open the back case using the plastic opening tool.
- ⓘ Pry open in multiple locations to avoid damage.

Step 5

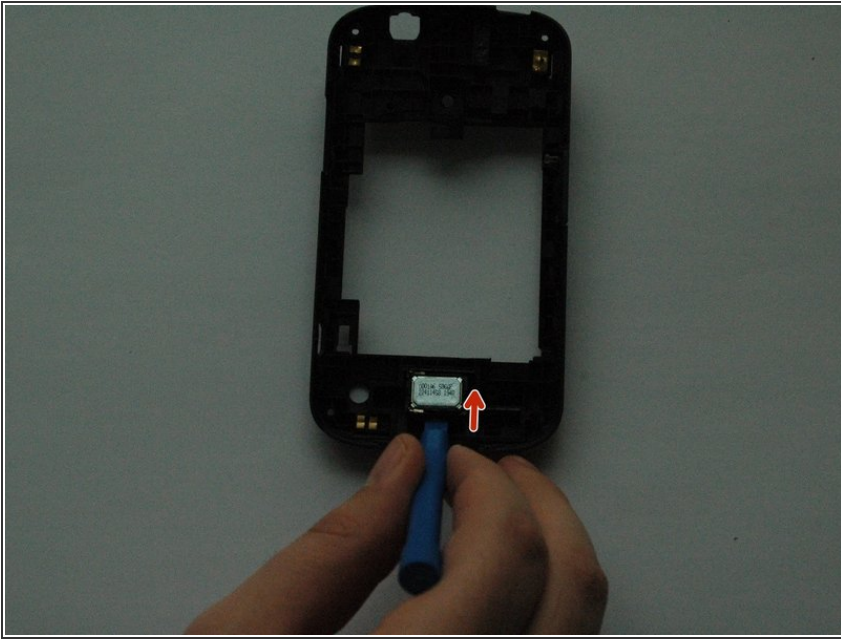

- Using the plastic opening tool, gently lift the speaker out of the back case.

To reassemble your device, follow these instructions in reverse order.