


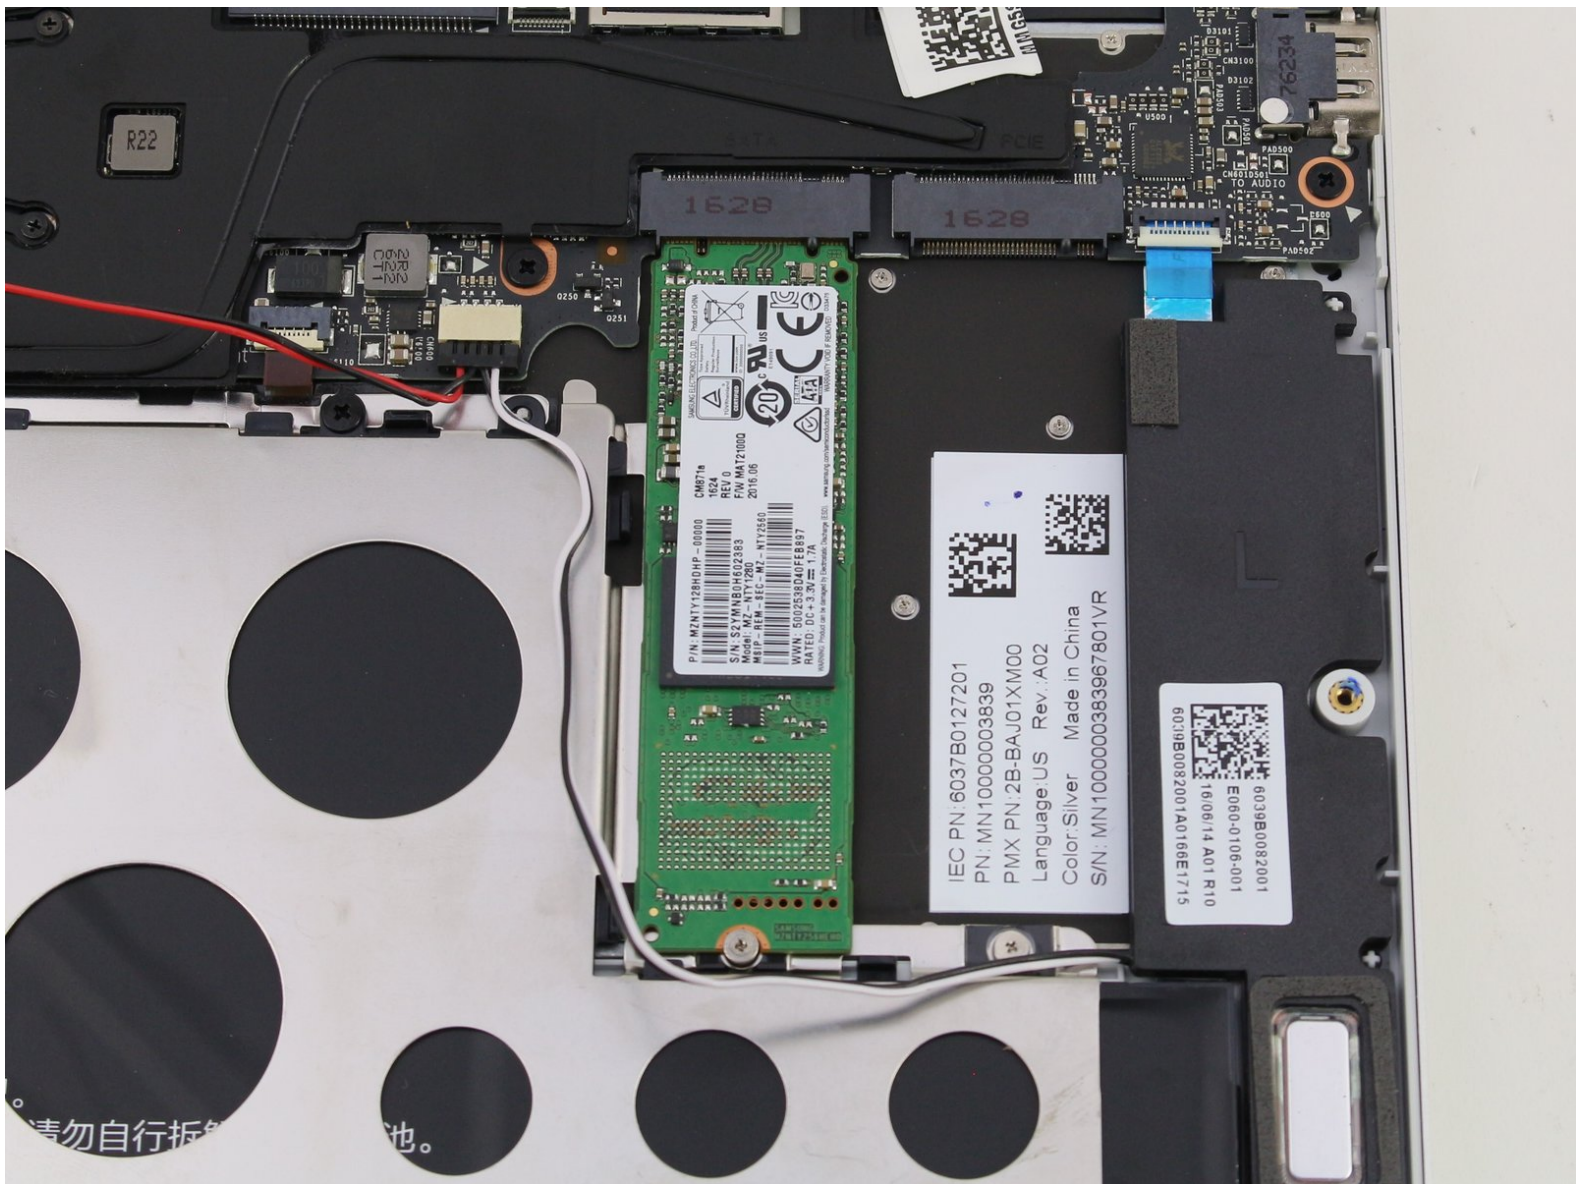

# Xiaomi Air 12 SSD Replacement

Use this guide to replace the SSD in your...

Written By: Hannah Kwan



# INTRODUCTION

Use this guide to replace the SSD in your Xiaomi Air 12.



## TOOLS:

- [iFixit Opening Tool](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [JIS #00 Screwdriver](#) (1)



## PARTS:

- [Crucial P3 NVMe PCIe M.2 2280SS SSD](#) - solid performance, switching from HDD or SATA to NVMe™ (1)
- [Crucial P3 Plus NVMe PCIe M.2 2280SS SSD](#) - fast Gen4 NVMe™ storage for data-intensive applications (1)
- [Crucial P5 Plus NVMe PCIe M.2 2280SS SSD](#) - professionals, creatives, and hardcore gamers (1)

## Step 1 — Rear Casing




- Orient the computer so the Xiaomi logo is at the bottom of the device.

## Step 2



- Insert the plastic opening tool underneath the top-middle rubber covering and lift upwards to reveal the hidden screw.

## Step 3

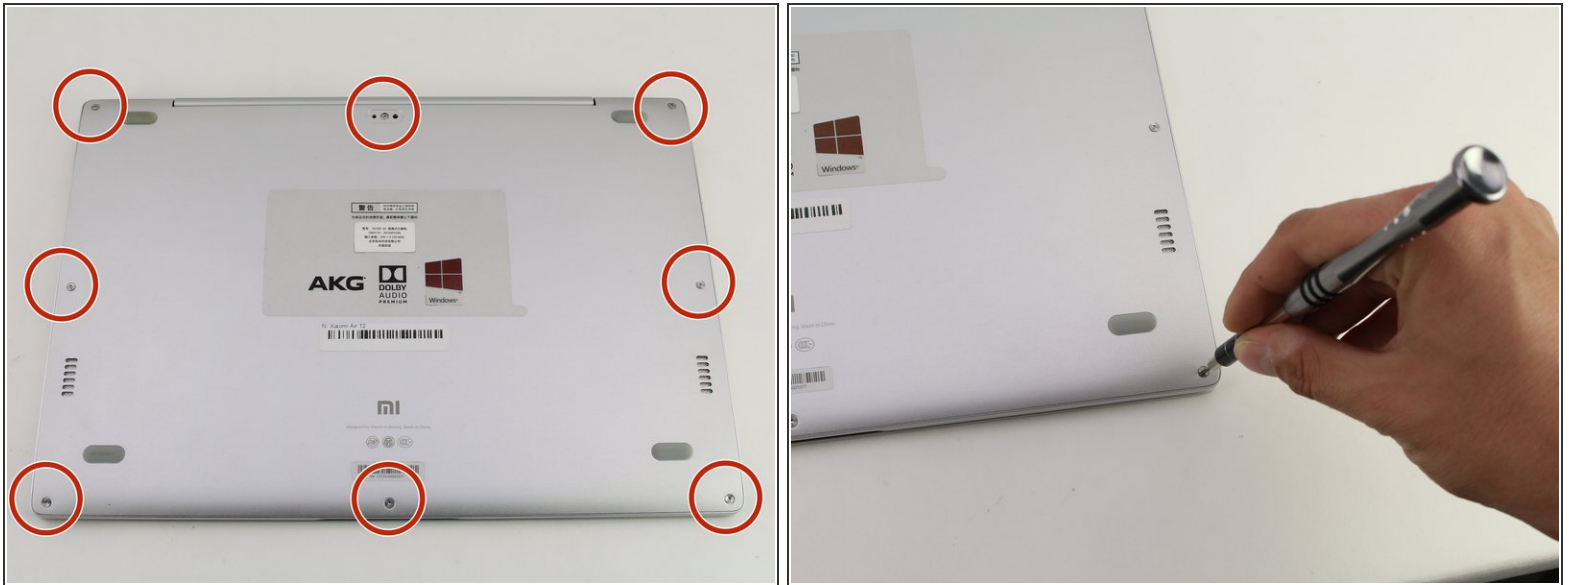

- Remove the eight 3 mm screws using the Torx T5 driver by inserting the screwdriver into each screw and rotating counterclockwise.

## Step 4




- Insert the plastic opening tool into each side of the computer and push the tool downwards to pop open the back cover.

 You will hear popping noises as you remove the cover.





## Step 5

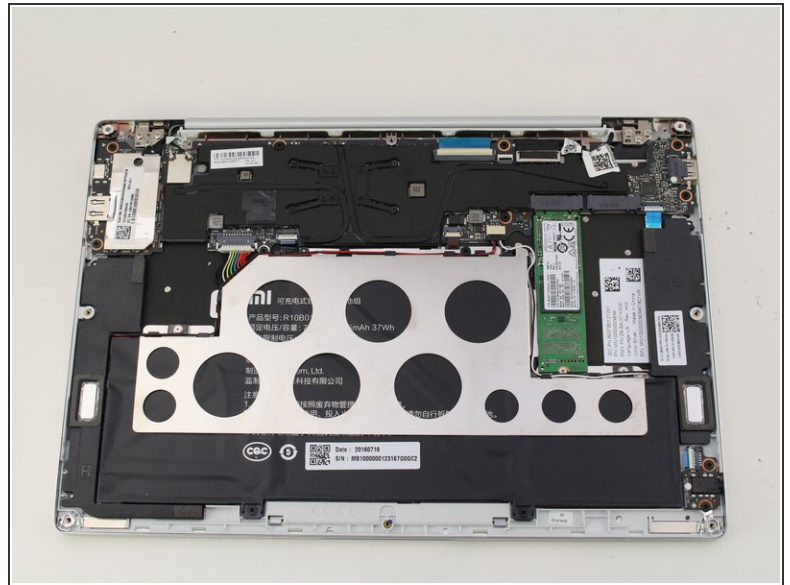


- Remove the back of the laptop by gently lifting the casing upwards.

## Step 6 — SSD

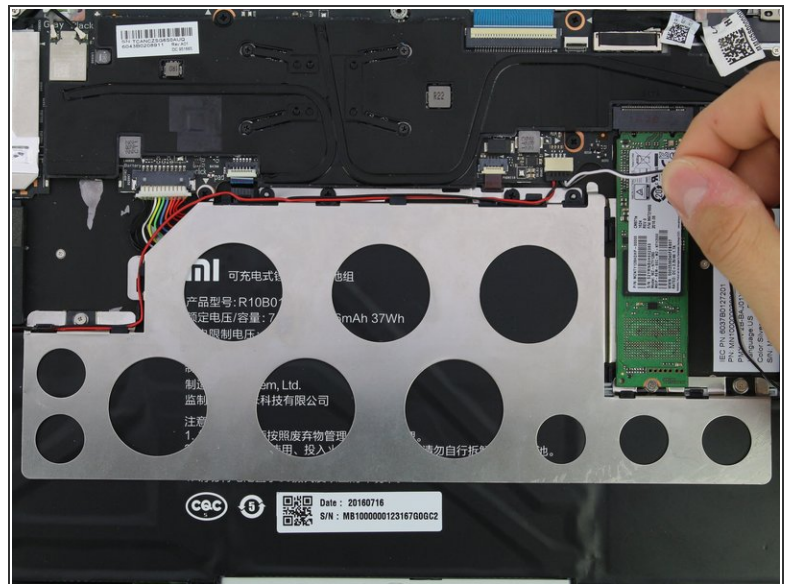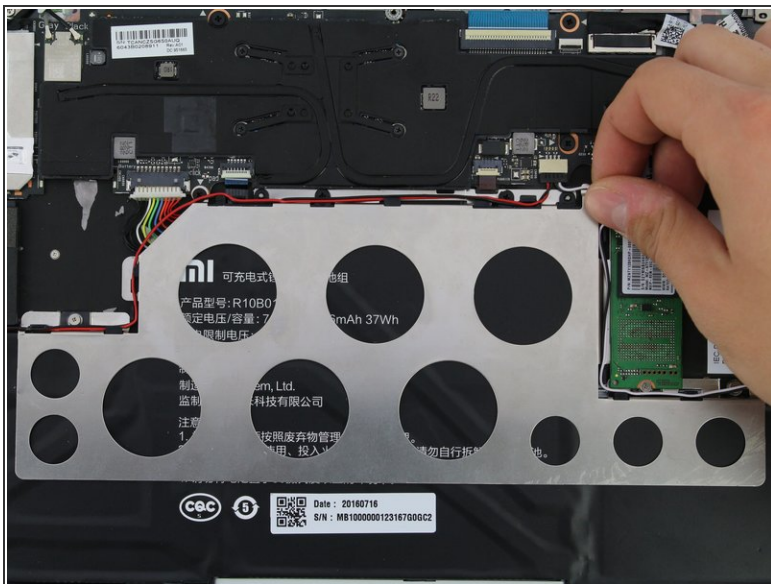


- Detach the white and black speaker wires by pulling them from the small black tabs along the perimeter of the metal bracket.

## Step 7

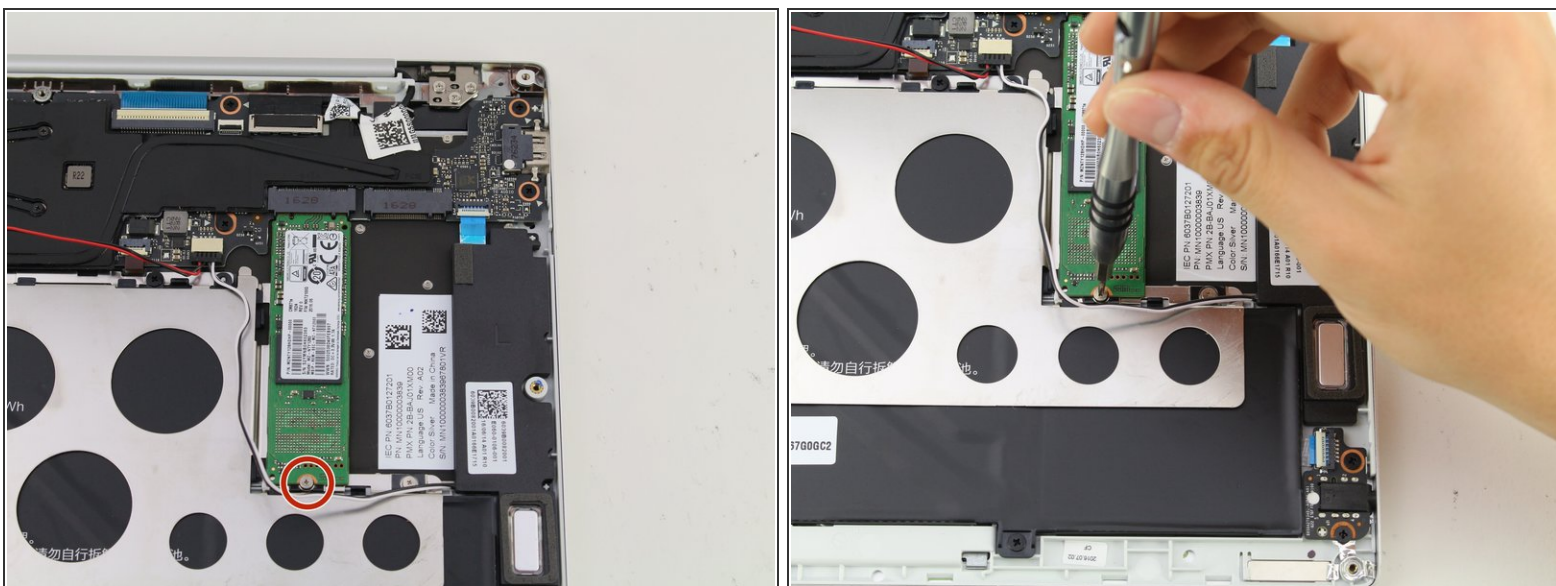

- Remove the 1.5mm screw using the JIS #00 screwdriver.

## Step 8

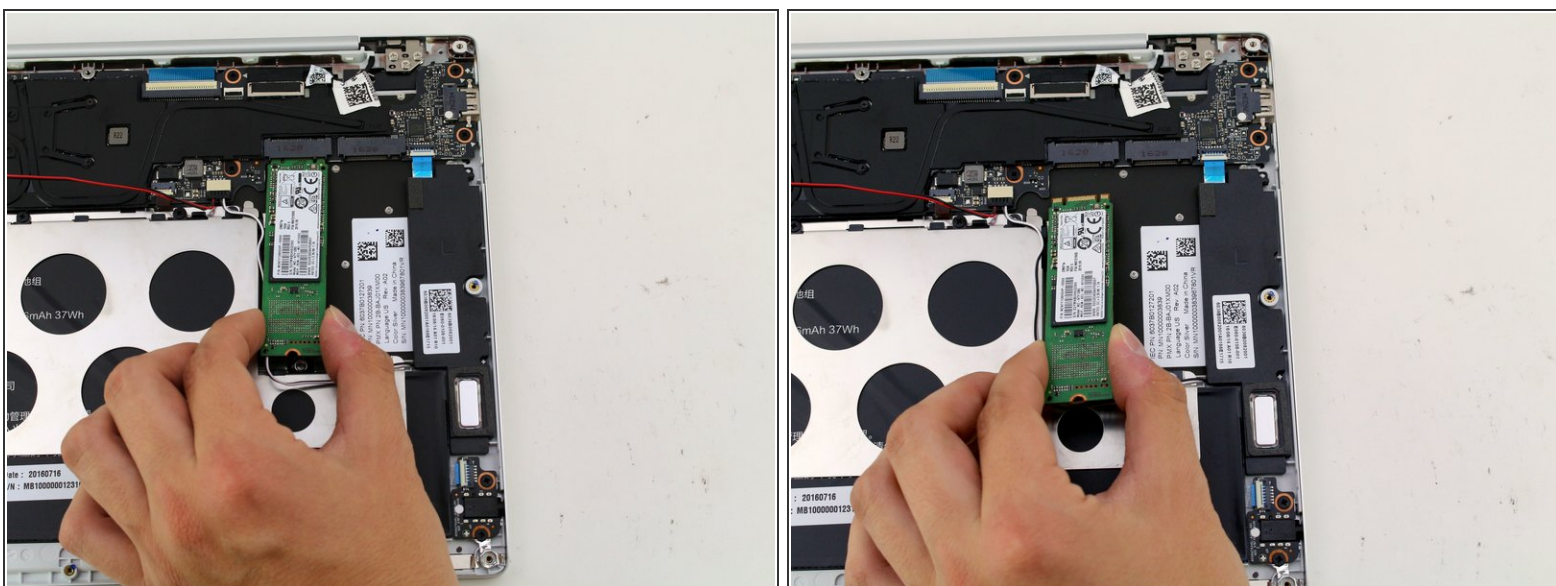

- Lift the SSD up from the device and gently pull the SSD from the laptop.

To reassemble your device, follow these instructions in reverse order.