



# Pioneer MXT-X366BT Button Replacement

Disassembling the face plate of the device will help in the processes of replacing all featured buttons.

Written By: Travis Mason



---

## INTRODUCTION


The guide features the steps that will help the owner replace any missing or damaged buttons on the devices face plate.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Buttons

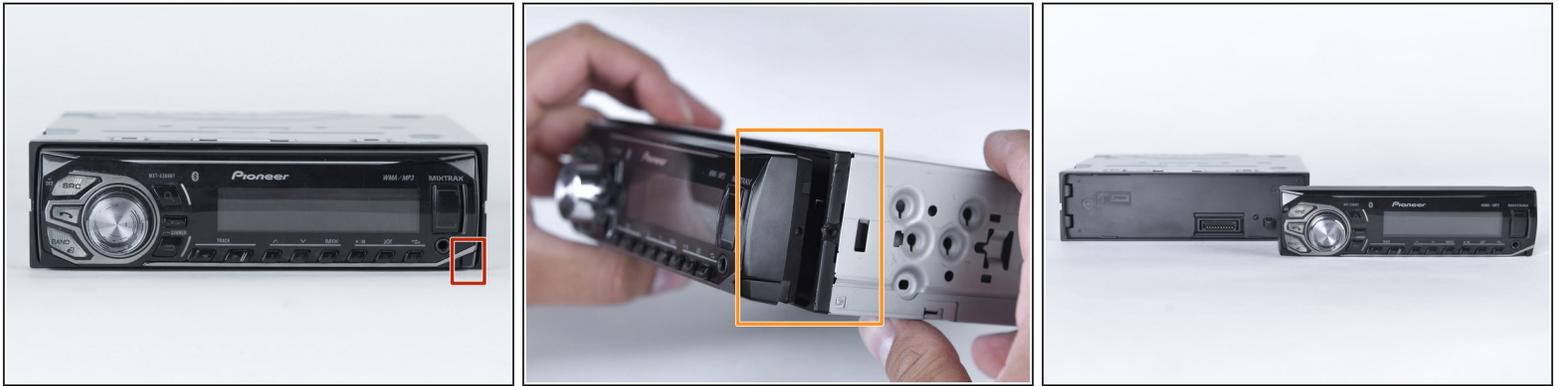

- Press the button on the bottom right hand corner firmly to release face plate.
- Firmly pull out the face plate.
- The face plate will now be free.

## Step 2



- Use a Phillips #1 screwdriver to unscrew the three 3mm Phillips-head screws on the rear of the faceplate.

### Step 3



- Press clips inward with the plastic opening tool to release the rear of the head unit.


### Step 4



- Remove the motherboard from the casing.

⚠ Handle the motherboard with care.

## Step 5

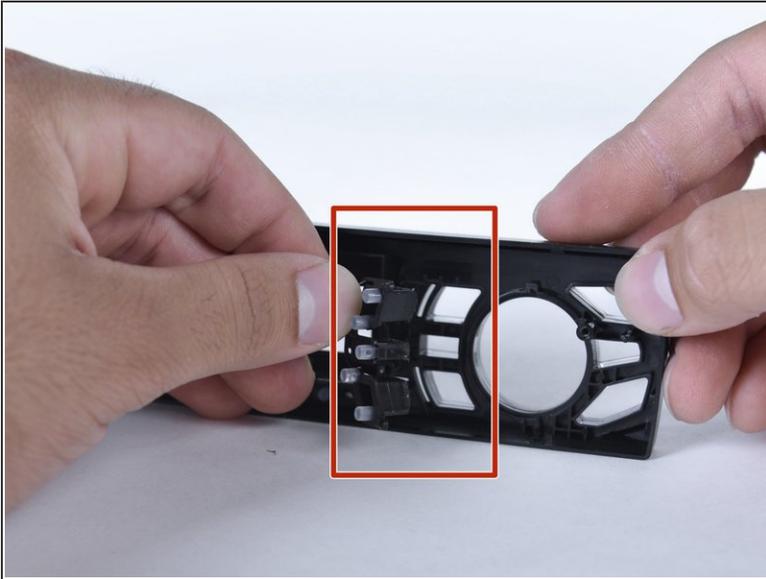

- Pull out the buttons.
- ☞ Remember the orientation of the buttons.

To reassemble your device, follow these instructions in reverse order.