




Fujitsu Lifebook T1010 RAM Replacement

This guide is to show how to replace RAM in the Fujitsu Lifebook T1010.

Written By: Chitara Smith

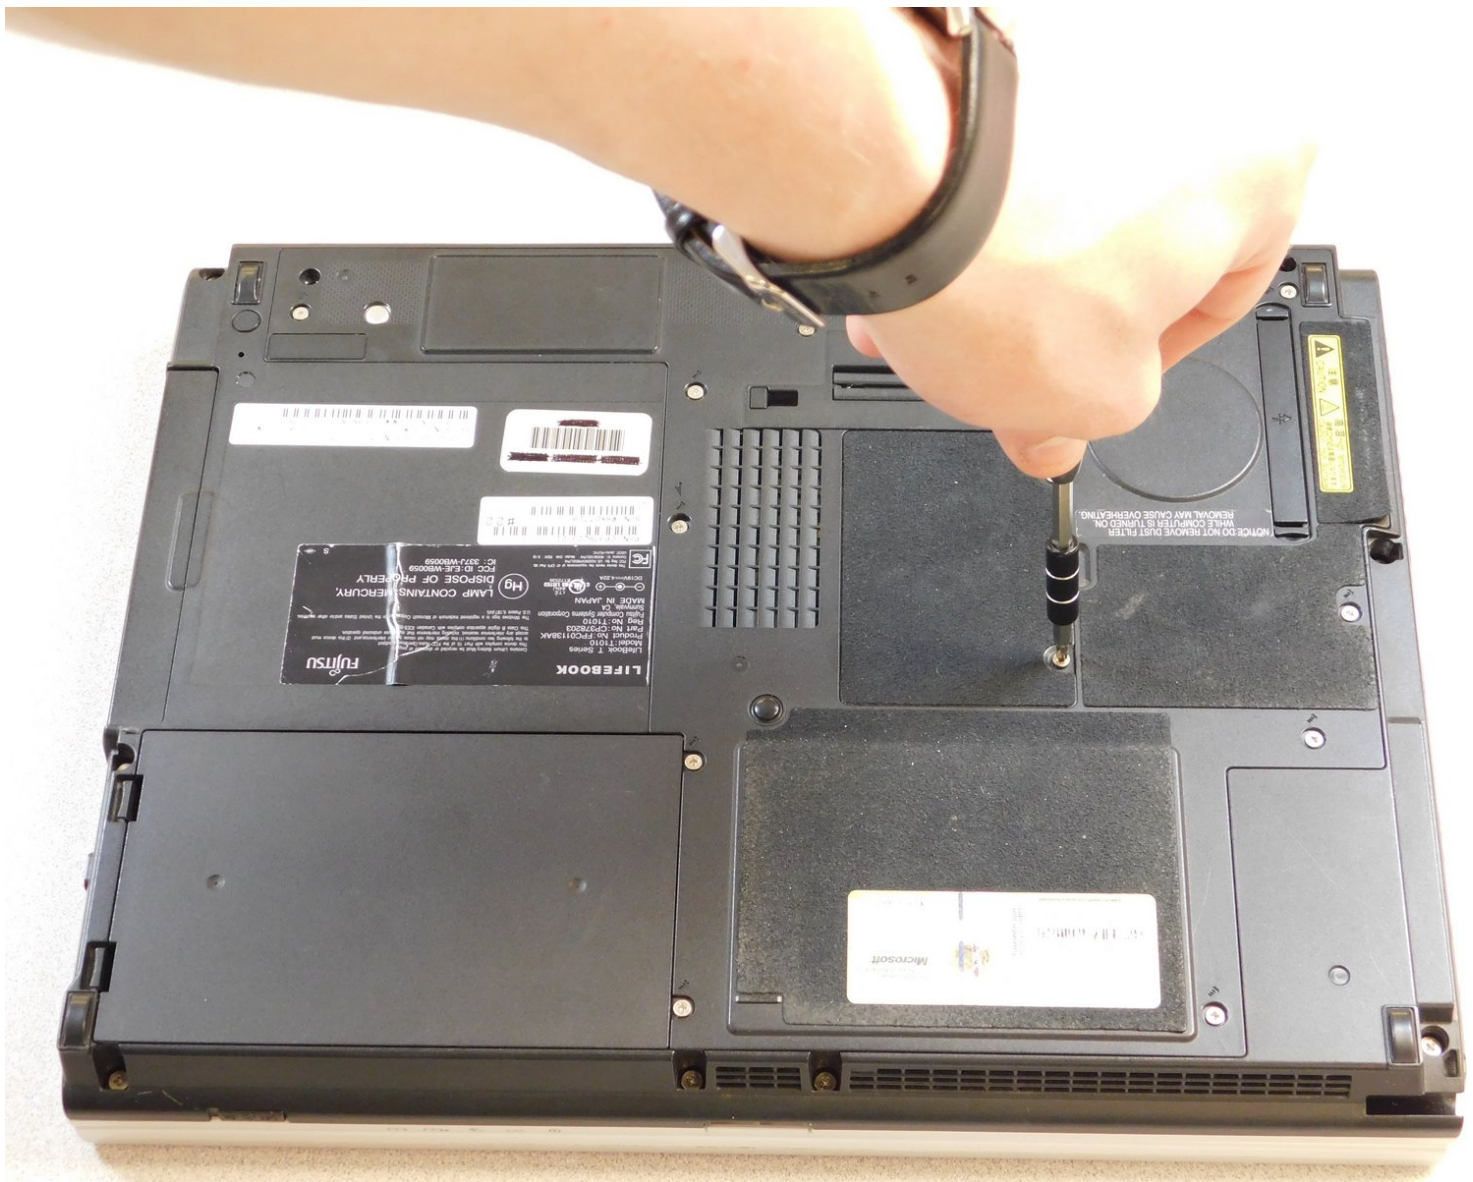

INTRODUCTION


The goal of this guide is to show how to replace RAM in the Fujitsu Lifebook T1010.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — RAM

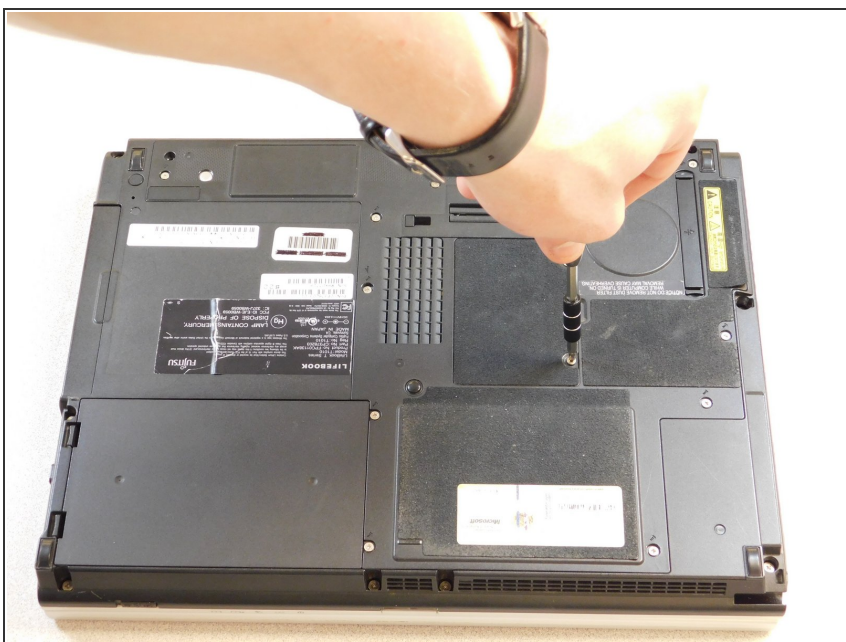


- Remove the two Phillips #0 screws from the cover.

Step 2

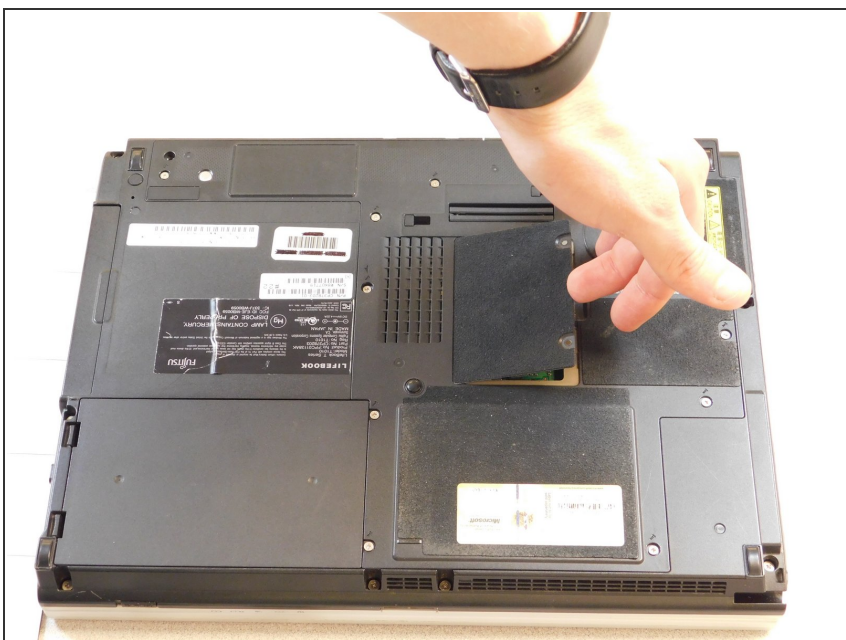

- Remove the cover.

Step 3

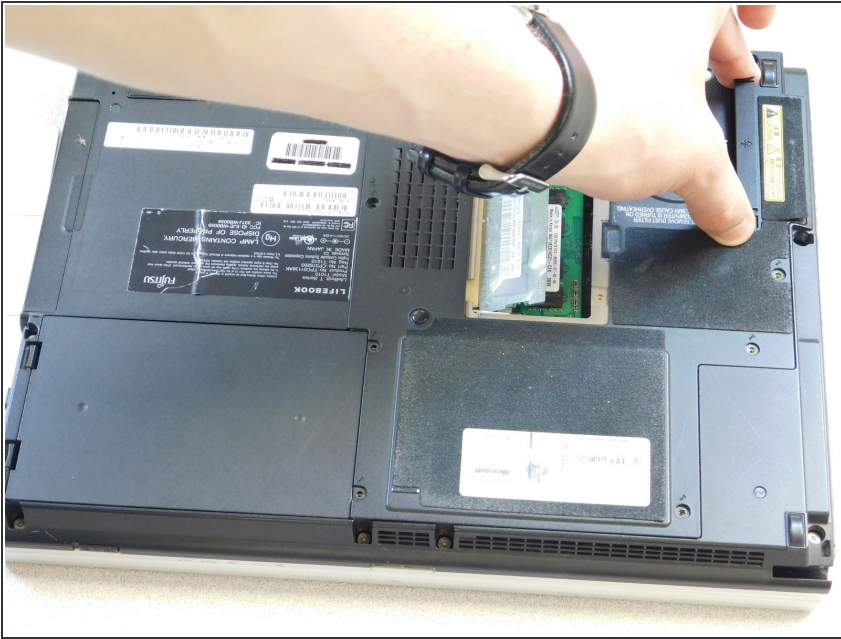

- Two clips secure the RAM module in place, one on each side. Using your fingers, spread the clips away from the RAM module.
- ⓘ When released, the RAM module will pop up at a slight angle.
- Lift the RAM module to an angle of about 30 degrees and slide it out.

To reassemble your device, follow these instructions in reverse order.