



# Neato Botvac D8000 Brushes Replacement

This guide will help you clean or replace your brushes using step by step instructions.

Written By: Yeritza Quiroz



---

## INTRODUCTION

If your robot is passing over surfaces and not collecting debris, by cleaning or replacing the brushes could help.

Here are step by step instructions in how to get to the brushes.

---

### TOOLS:


- [T10 Torx Screwdriver](#) (1)
-

## Step 1 — Brushes




- Place the vacuum on its back so the brushes are visible.

## Step 2

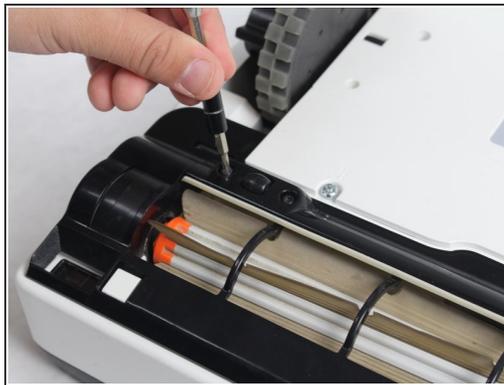

- Remove the four 10 mm screws with a Torx T10 screwdriver.

### Step 3

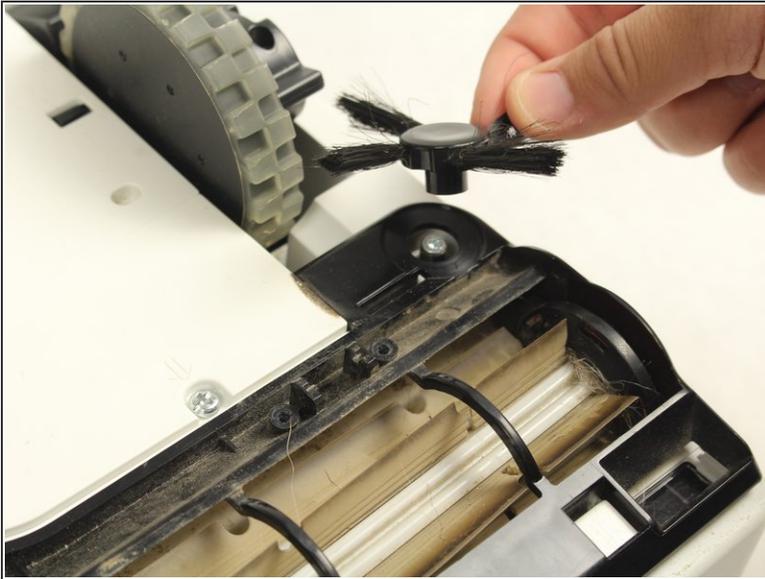

- Remove the rotary brush simply by grabbing it firmly and pulling it off.
- Once you have removed your rotary brush and 4 bolts, you can easily remove the brush guard.

### Step 4



- Remove the brush by simply pulling it out.
- From there you can clean it or replace the brush with a new one.

To reassemble your device, follow these instructions in reverse order.