



Wolf Gourmet WGBL100S Selector Bezel Replacement

This is a guide detailing the steps to replace the selector bezel of the Wolf Gourmet High-Performance Blender.

Written By: Luke Kutz



INTRODUCTION

If your selector bezel is cracked or broken and you would like to replace it, follow these steps.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Wolf Blender Selector Bezel](#) (1)

Step 1 — Selector Bezel



- Pull the variable speed control knob from the front of the blender.

Step 2



- Using a Phillips #1 screwdriver to remove the three 3/8" screws holding the selector bezel in place.

Step 3



- Pull the bezel from the base of the blender.

To reassemble your device, follow these instructions in reverse order.