



Canon PowerShot G7X Screen Replacement

Step-by-step instructions for removal of the camera screen.

Written By: Moriah Hartman




INTRODUCTION

The LCD screen of the Camera is important to see what exactly the pictures you took look like. The purpose of this replacement guide is to help you remove the camera's LCD screen.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Screen

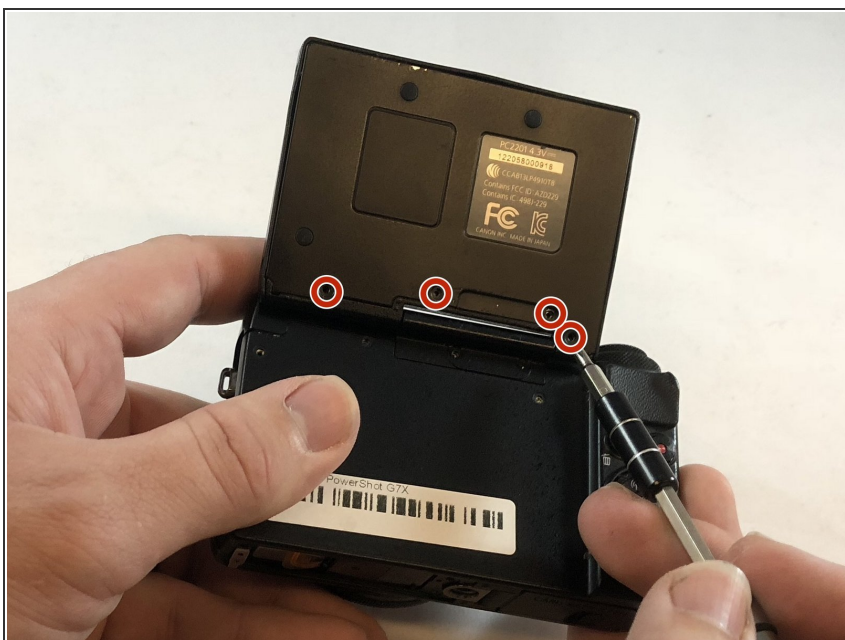

- Remove the four 2mm Phillips screws from the back of the screen.

Step 2

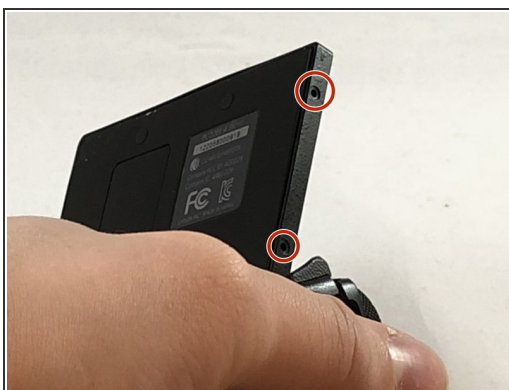


- Remove the six 2mm Phillips #000 around the edge of the screen.

Step 3



- Using the plastic opening tool, pry back the backplate from the front of the screen.

Step 4

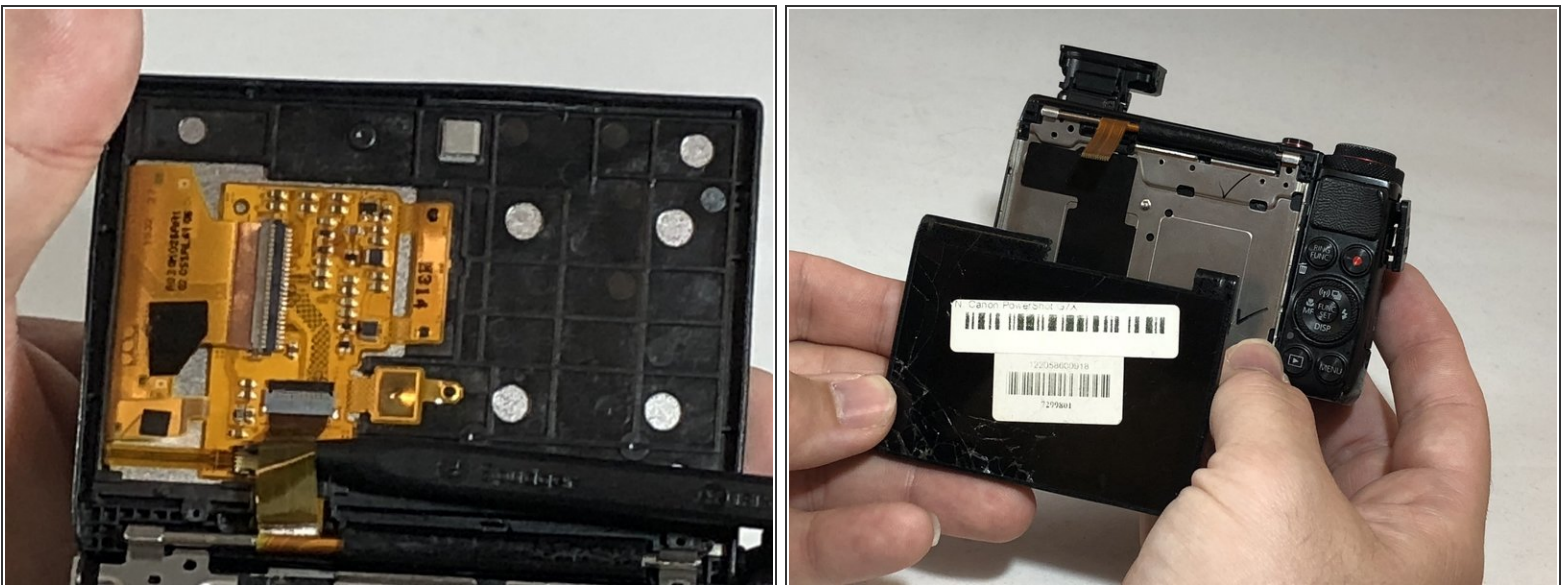

- Using the black nylon spudger, gently remove the ribbon cable.
- Remove the LCD screen.

To reassemble your device, follow these instructions in reverse order.