



# Insignia NS-DS9PDVD15 Latch Replacement

Insignia NS-DS9PDVD15 portable DVD player Latch Replacement.

Written By: Trenton





## TOOLS:

- [JIS #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Bottom Cover



- Turn the power off. Slide the power button to OFF.

## Step 2



- Unplug AC adapter from car cigarette lighter.



## Step 3



- Make sure there is no DVD or CD in the disc tray

## Step 4



- Unscrew the nine 9mm screws with a JIS #000 screwdriver.

## Step 5



- Pry off back panel with prying tool, then remove by hand.

## Step 6 — Latch



- After the back is removed and you can see the interior of the device, push the old latch out.

## Step 7



- Push the new latch in where the old latch was previously held
- You can lightly tap it from the inside to make sure the new latch is sliding left and right.

To reassemble your device, follow these instructions in reverse order.